



POWER-UP SEQUENCE FOR HEATEVM

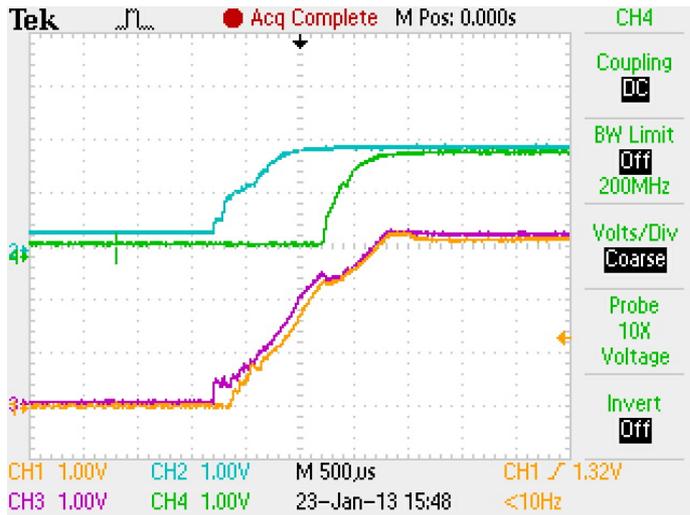

Orange (CH1) = AVDD3p3V
Blue (CH2) = AVDD1p8V
Purple (CH3) = DVDD3p3V
Green (CH4) = DVDD1p8V

Analog 1.8V must be powered up before digital 1.8V
Analog and digital 3.3V powered up at the same time

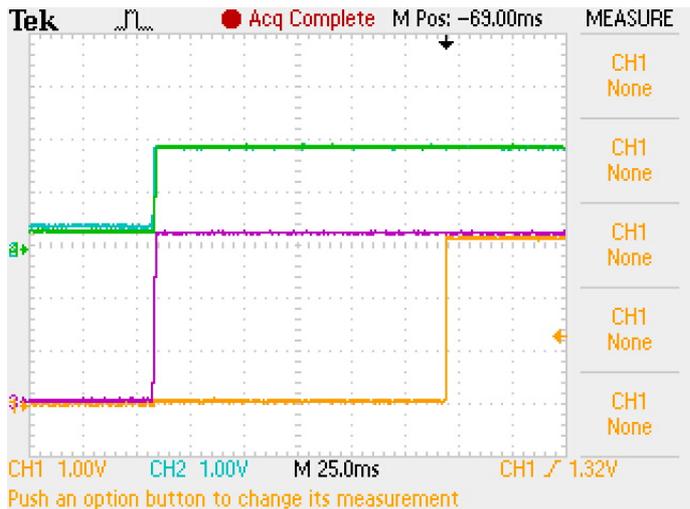


Orange (CH1) = RESET
Blue (CH2) = AVDD1p8V
Purple (CH3) = DVDD3p3V
Green (CH4) = DVDD1p8V

Reset signal must go high after all analog and digital powers are up

NOTE: Probes connected to decoupling caps in the back with accelerometer board connected to the HEATEVM.

POWER-DOWN SEQUENCE

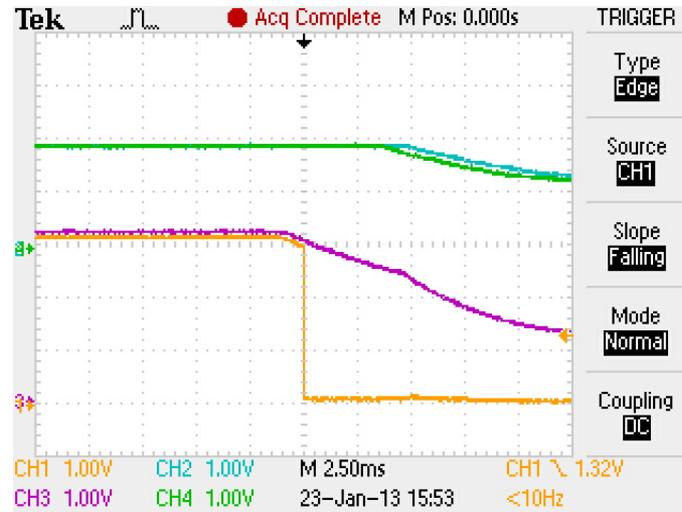

Orange (CH1) = RESET
Blue (CH2) = AVDD1p8V
Purple (CH3) = DVDD3p3V
Green (CH4) = DVDD1p8V

Reset signal must go low before all analog and digital are powered down

TI may provide technical, applications or design advice, quality characterization, and reliability data or service providing these items shall not expand or otherwise affect TI's warranties as set forth in the Texas Instruments Incorporated Standard Terms and Conditions of Sale for Semiconductor Products and no obligation or liability shall arise from TI's provision of such items. Customer is fully responsible for all design decisions and engineering with regard to its products, including decisions relating to application of TI products. By providing technical information, TI does not intend to offer or provide engineering services or advice concerning Customer's design. If Customer desires engineering services, the Customer should rely on its retained employees and consultants and/or procure engineering services from a licensed professional engineer (LPE).