



1. Close GUI, power cycle the board
2. Launch the UCD90xxx Device as shown below.

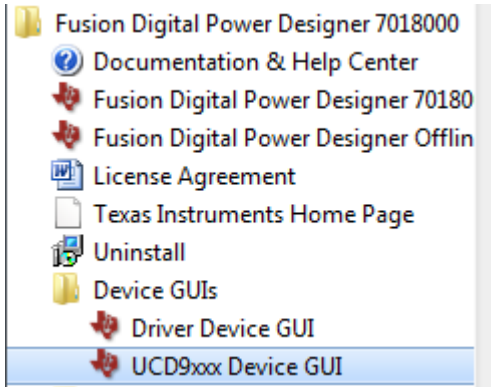

3. Click scan device in ROM mode

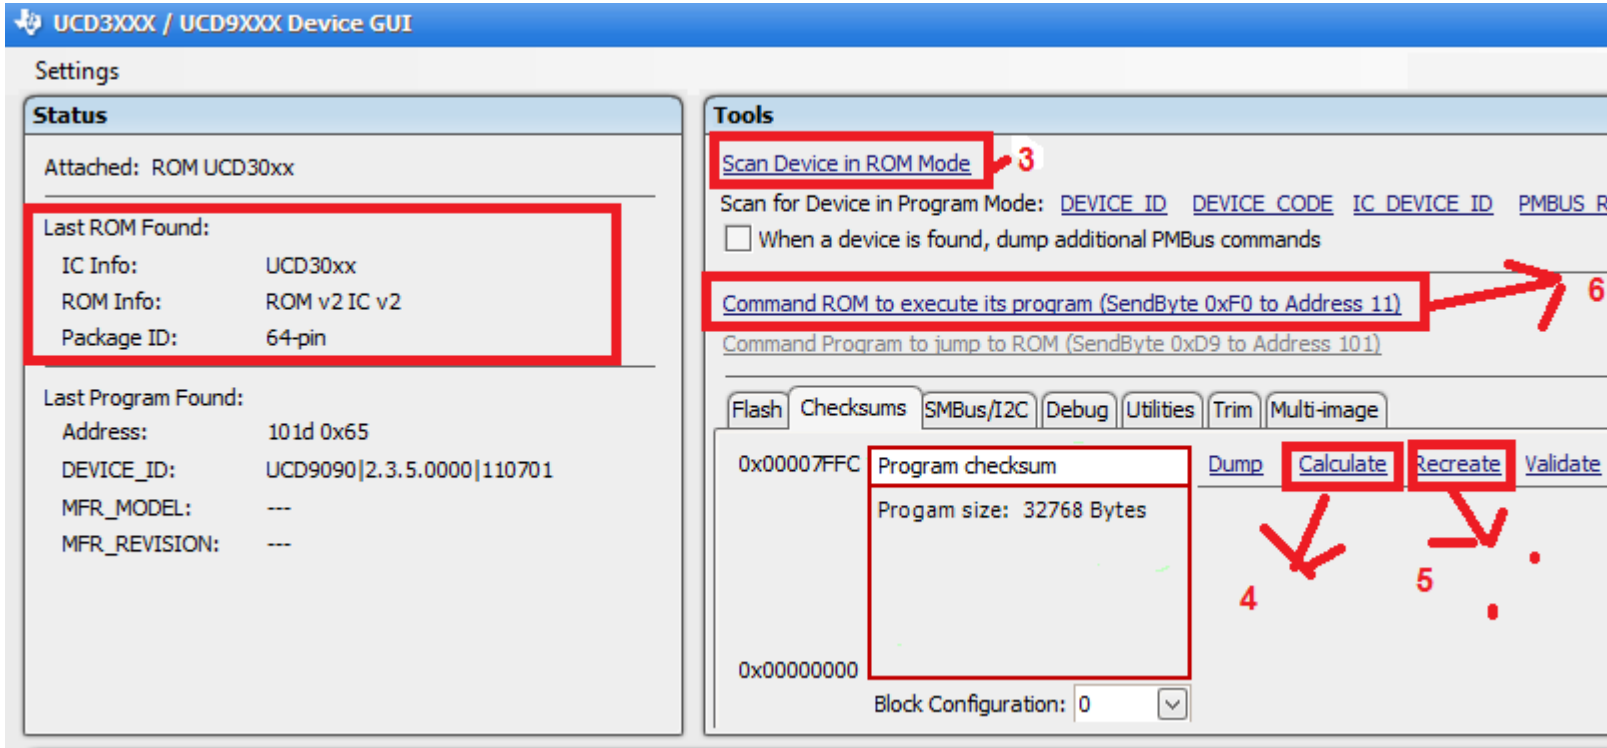

4. Click the calculate and expect to see 0x0036921D as shown in the log section

If you do not see 0x0036921D, Please stop here, do not proceed and contact your local TI sale representative for further help. Proceeding without 0x0036921D will brick the device at own risk.

5. If you do see 0x0036921D, click the recreate to generate the checksum
6. The last step is to command ROM to execute its program.
7. After above step, the device shall function as normal.