TPS2592XXEVM-531 EVM: TPS2592XX Evaluation Module User's Guide

User's Guide



Literature Number: SLVU923A June 2013—Revised November 2013



Contents

1	Introduction				
	1.1	Features	. 4		
	1.2	Applications	4		
2	Description				
	2.1	Schematic	6		
3	General Configuration and Description				
	3.1	Physical Access	. 7		
	3.2	Test Setup	8		
4	EVM Assembly Drawings and Layout Guidelines				
	4.1	PCB Drawings	9		
5	Bill	of Materials	12		
Revi	sion H	istory	13		



www.ti.com

List of Figures TPS2592XXEVM Schematic 6 2-1. Typical TPS2592XXEVM Test Setup 3-1. Top-Side Placement 9 4-1. 4-2. Top-Side Routing..... 4-3. Bottom-Side Routing **List of Tables** 2-1. TPS2592 Device Options 3-1. 3-2. Test Points 3-3. TPS2592XXEVM Bill of Materials 12 5-1.



Introduction

This User's Guide describes the evaluation module (EVM) for the TPS2592XX (TPS2592XXEVM-531). The TPS2592XXEVM is a 4.5-V to 18-V eFuse allowing for reference-circuit evaluation of Texas Instrument's TPS2592XX with an Integrated-Blocking FET Driver and Adjustable Current Limit. TPS2592XX is available for 4.5-V to 18-V operation with both latching and auto-retry operation.

1.1 **Features**

- TPS2592XX Features
 - 4.5-V to 13-V (typical) bus operation (TPS2592Ax)
 - 4.5-V to 5-V (typical) bus operation (TPS2592Bx)
 - 4.5-V to 18-V (typical) bus operation (TPS2592Zx)
 - Programmable current limit
 - Fixed overvoltage setting (TPS2592Ax and TPS2592Bx)
 - Programmable V_{out} slew rate
 - Programmable UVLO
 - Built-in thermal shutdown
 - Latched-off TPS2592AL, TPS2592BL, TPS2592ZL
 - Auto-retry TPS2592AA, TPS2592BA, TPS2592ZA
- Onboard output-overload circuit
- External blocking FET
- Push button RESET signal
- Copper pour with vias to the internal ground takes advantage of the PowerPAD™ Package
- Onboard transorb is for overvoltage input protection
- Common diode at output prevents negative spike when load is removed while powered on

Applications 1.2

- Server
 - Plug-in circuit boards
 - Redundant array of independent disks (RAID), disk drive
- Telecom
 - Advanced Telecom Computing Architecture (ATCA)
 - Micro-ATCA
- General hot plug
- Thunderbolt power bus protection



Description

TPS2592XXEVM-531 enables full evaluation of the TPS2592XX devices. Refer to the schematic shown in Figure 2-1. Input power is applied at J5 and J7, while J3 and J7 provides the output connection to the load. D3 and C4 provide input protection for the TPS2592XX (U1) while the D4-C1-C2-C6 circuit provides output protection. S1 allows U1 to be RESET or disabled. Circuit faults are observed with D2 and at TP4.

Turnon or inrush slew-rate control is enabled by installing C3 (default) and observed at TP8. The ON and FAULT LEDs (D1 and D2 respectively) are enabled by installing a shunt on J1. TPS2592XXEVM-531 contains an output-overload circuit that enables by applying approximately 5 V between TP1 and TP3.

Table 2-1. TPS2592 Device Options

Part Number	Vin Range	UVLO / OVP	Current Limit (TYP)	Thermal Fault
TPS2592AADRC	9 V to 18 V	10.5 V / 15 V	2 A	Auto-Retry
TPS2592ALDRC	9 V to 18 V	10.5 V / 15 V	2 A	Latched
TPS2592BADRC	4 V to 6 V	4.5 V / 5.8 V	3 A	Auto-Retry
TPS2592BLDRC	4 V to 6 V	4.5 V / 5.8 V	3 A	Latched
TPS2592ZADRC	4.5 V to 18 V ⁽¹⁾	4.5 V / –	2 A	Auto-Retry
TPS2592ZLDRC	4.5 V to 18 V ⁽¹⁾	4.5 V / –	2 A	Latched

The input supply voltage (including input transients) at the VIN pin should not exceed device maximum ratings as specified in the ABSOLUTE MAXIMUM RATINGS of the TPS2592XX data sheet (SLVSC11).

NOTE: The default devices on the EVM boards are TPS2592AA and TPS2592BL, to test other versions of the device, customers are suggested to replace with respective variants.



Schematic www.ti.com

2.1 Schematic

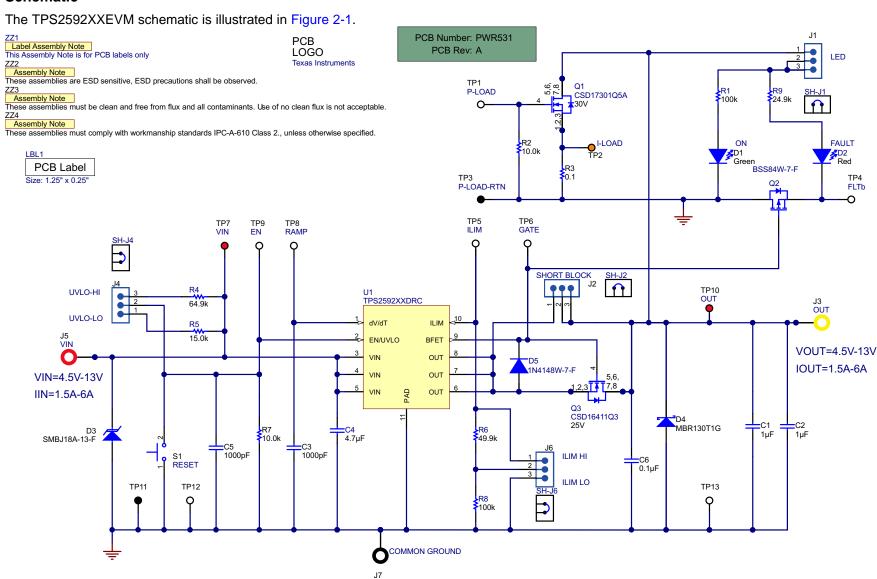


Figure 2-1. TPS2592XXEVM Schematic



General Configuration and Description

3.1 Physical Access

Table 3-1 lists the TPS2592XXEVM connector functionality. Table 3-2 describes the test point availability and Table 3-3 describes the jumper functionality.

Table 3-1. Connector Functionality

Connector	Label	Description
J5 / J7	INPUT / GND	4.5-V to 13-V ⁽¹⁾ input to the EVM.
J3 / J7	OUTPUT / GND	4.5-V to 13-V ⁽¹⁾ output from the EVM.

^{(1) 4.5} V to 18 V for TPS2592Zx versions.

Table 3-2. Test Points

Test Point	Color	Label	Description
TP7 / TP11 / TP12	RED / BLACK / SM ⁽¹⁾	INPUT / GND	4.5-V to 13-V ⁽²⁾ input to the EVM.
TP10 / TP13	RED / SM ⁽¹⁾	OUTPUT / GND	4.5-V to 13-V ⁽²⁾ output from the EVM.
TP9	WHITE	EN	Active-high enables input and active-low fault output
TP8	WHITE	RAMP	Slew rate control
TP6	WHITE	GATE	Blocking FET GATE control
TP5	WHITE	ILIM	Current limit resistor test point
TP1	WHITE	LDEN	Output load enable. Apply 3 to 8 V between TP1 and TP3 to enable U1 overload.
TP3	BLACK	GND	Ground for load circuit
TP2	ORANGE	ILD	Output current monitor. Load current = 10 × voltage on TP2 when the overload circuit is enabled at TP1.

⁽¹⁾ SM = Surface mount.

Table 3-3. Jumpers

Jumper	Label	Description
J1	J1	Install between pins 1 and 2 to enable D1 and D2.
J2	J2	Install between pins 1 and 2 to bypass blocking FET, Q3.
J4	J4	Install between pins 1 and 2 for UVLO = 3.5 V and install between pins 2 and 3 for UVLO = 10.5 V.
J6	J6	Install between pins 1 and 2 for ILIM = 4 A and install between pins 2 and 3 for ILIM = 2.3 A.

^{(2) 4.5} V to 18 V for TPS2592Zx versions.



Test Setup www.ti.com

3.2 Test Setup

Figure 3-1 shows a typical test setup for TPS2592XXEVM. Connect J5 and J7 to the power supply, and J3 and J7 to the load.

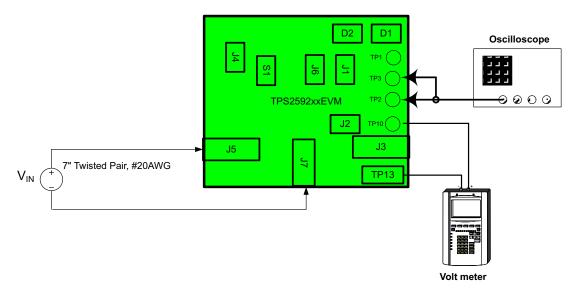


Figure 3-1. Typical TPS2592XXEVM Test Setup



EVM Assembly Drawings and Layout Guidelines

4.1 PCB Drawings

Figure 4-1, Figure 4-2, and Figure 4-3 show component placement and layout of the EVM.

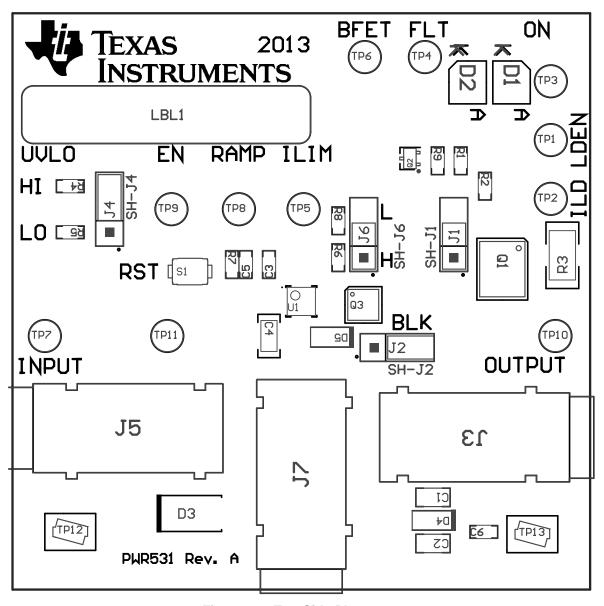


Figure 4-1. Top-Side Placement



PCB Drawings www.ti.com

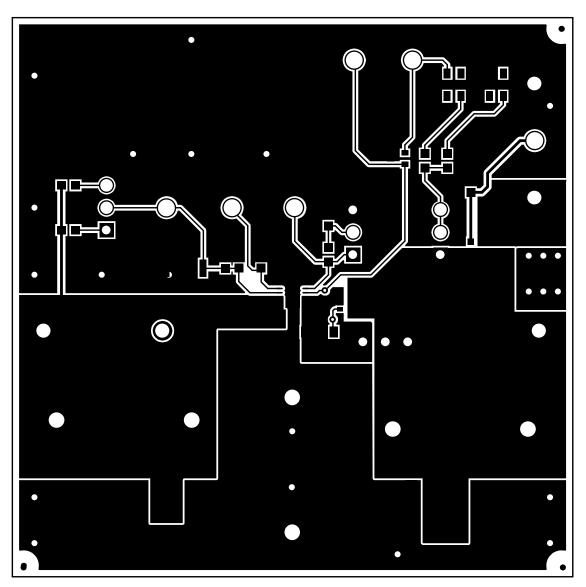


Figure 4-2. Top-Side Routing



www.ti.com PCB Drawings

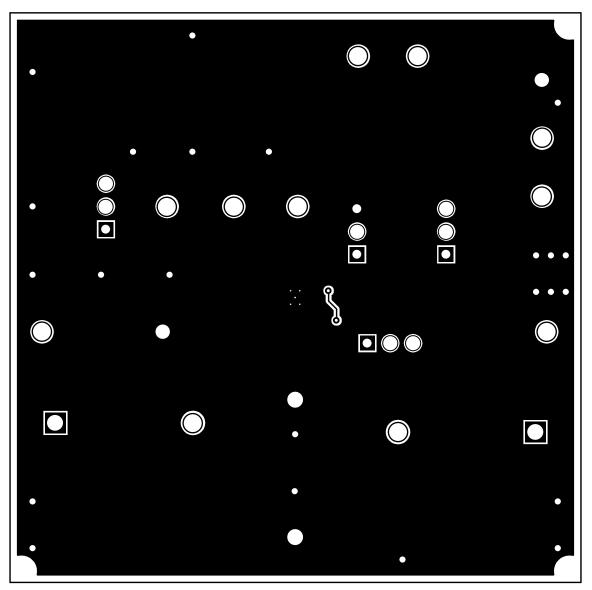


Figure 4-3. Bottom-Side Routing



Bill of Materials

The TPS2592XXEVM bill of materials is shown in Table 5-1.

Table 5-1. TPS2592XXEVM Bill of Materials

Designator	Qty	Value	Description	Package Reference	Part Number	Manufacturer
PCB	1		Printed Circuit Board		PWR531	Any
C1, C2	2	1 μF	CAP, CERM, 1 µF, 25 V, ±10%, X5R, 0805	0805	08053D105KAT2A	AVX
C3, C5	2	1000 pF	CAP, CERM, 1000 pF, 100 V, ±20%, X7R, 0603	0603	06031C102MAT2A	AVX
C4	1	4.7 μF	CAP, CERM, 4.7 µF, 25 V, ±10%, X7R, 1206	1206	C3216X7R1E475K	TDK
C6	1	0.1 μF	CAP, CERM, 0.1 μF, 25 V, ±10%, X7R, 0603	0603	06033C104KAT2A	AVX
D1	1	Green	LED, Green, SMD	Power TOPLED w/lens	LT E63C-CADB-35-L-Z	OSRAM
D2	1	Red	LED, Red, SMD	Power TOPLED w/lens	LS E63F-DBFA-1-Z	OSRAM
D3	1	18 V	Diode, TVS, Uni, 18 V, 600 W, SMB	SMB	SMBJ18A-13-F	Diodes Inc.
D4	1	0.47 V	Diode, Schottky, 30 V, 1 A, SOD-123	SOD-123	MBR130T1G	ON Semiconductor
D5	1	1.25 V	Diode, Ultrafast, 100 V, 0.15 A, SOD-123	SOD-123	1N4148W-7-F	Diodes Inc.
J1, J2, J4, J6	4	1 × 3	Header, TH, 100 mm, 1 x 3, Gold plated, 230 mm above insulator	PBC03SAAN	PBC03SAAN	Sullins Connector Solutions
J3	1	10 A	Standard Banana Jack, insulated, 10 A, yellow	571-0700	571-0700	DEM Manufacturing
J5	1	10 A	Standard Banana Jack, insulated, 10 A, red	571-0500	571-0500	DEM Manufacturing
J7	1	10 A	Standard Banana Jack, insulated, 10 A, black	571-0100	571-0100	DEM Manufacturing
LBL1	1		Thermal Transfer Printable Labels, 1.25 in (W) x 0.250 in (H) — 10,000 per roll	PCB Label 1.25 in (H) x 0.250 in (W)	THT-13-457-10	Brady
Q1	1	30 V	MOSFET, N-CH, 30 V, 100 A, SON 5 mm × 6mm	SON 5 mm × 6 mm	CSD17301Q5A	Texas Instruments
Q2	1	–50 V	MOSFET, P-CH, -50 V, -0.13 A, SOT-323	SOT-323	BSS84W-7-F	Diodes Inc.
Q3	1	25 V	MOSFET, N-CH, 25 V, 56 A, SON 3.3 mm × 3.3 mm	SON 3.3 mm × 3. 3mm	CSD16411Q3	Texas Instruments
R1, R8	2	100 k	RES, 100 kΩ, 1%, 0.1 W, 0603	0603	CRCW0603100KFKEA	Vishay-Dale
R2, R7	2	10 k	RES, 10 kΩ, 1%, 0.1 W, 0603	0603	CRCW060310K0FKEA	Vishay-Dale
R3	1	0.1	RES, 0.1 Ω, 1%, 0.5 W, 2010	2010	WSL2010R1000FEA	Vishay-Dale
R4	1	64.9 k	RES, 64.9 k ohm, 1%, 0.1 W, 0603	0603	CRCW060364K9FKEA	Vishay-Dale
R5	1	15 k	RES, 15 kΩ, 1%, 0.1 W, 0603	0603	CRCW060315K0FKEA	Vishay-Dale
R6	1	49.9 k	RES, 49.9 kΩ, 1%, 0.1 W, 0603	0603	CRCW060349K9FKEA	Vishay-Dale
R9	1	24.9 k	RES, 24.9 kΩ, 1%, 0.1 W, 0603	0603	CRCW060324K9FKEA	Vishay-Dale
S1	1		Switch, Push Button, SMD	2.9 mm × 2 mm × 3. 9mm SMD	SKRKAEE010	Alps
SH-J1, SH-J2, SH- J4, SH-J6	4	1 × 2	Shunt, 100 mm, Gold plated, Black	Shunt	969102-0000-DA	3M
TP1, TP4, TP5, TP6, TP8, TP9	6	White	Test Point, TH, Multipurpose, White	Keystone5012	5012	Keystone
TP2	1	Orange	Test Point, TH, Multipurpose, Orange	Keystone5013	5013	Keystone
TP3, TP11	2	Black	Test Point, TH, Multipurpose, Black	Keystone5011	5011	Keystone
TP7, TP10	2	Red	Test Point, TH, Multipurpose, Red	Keystone5010	5010	Keystone
TP12, TP13	2	SMT	Test Point, SMT, Compact	Testpoint_Keystone_ Compact	5016	Keystone
U1	1		12-V eFuse with Integrated Blocking FET Driver, Auto Retry, DRC0010A	DRC0010A	TPS2592AADRC	Texas Instruments



www.ti.com Revision History

Revision History

CI	Page	
•	Changed '12-V' and '12-V and 5-V' operation to '4.5-V to 18-V' in Introduction section.	4
•	Added '4.5-V to 18-V (typical) bus operation (TPS2592Zx)' in the Features section.	4
•	Added 'TPS2592Ax and TPS2592Bx' to Fixed overvoltage setting bullet in the Features section	4
•	Added 'TPS2592ZL' to Latched-off bullet in the Features section.	4
•	Added 'TPS2592ZA' to Auto-retry bullet in the Features section	4
•	Added 'Thunderbolt power bus protection' to Applications section	4
•	Added two rows and a table note to the bottom of TPS2592 Device Options table	8
•	Added table note to Connector Functionality table	7
	Added table note to Test Points table	

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

EVALUATION BOARD/KIT/MODULE (EVM) ADDITIONAL TERMS

Texas Instruments (TI) provides the enclosed Evaluation Board/Kit/Module (EVM) under the following conditions:

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user indemnifies TI from all claims arising from the handling or use of the goods.

Should this evaluation board/kit not meet the specifications indicated in the User's Guide, the board/kit may be returned within 30 days from the date of delivery for a full refund. THE FOREGOING LIMITED WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. EXCEPT TO THE EXTENT OF THE INDEMNITY SET FORTH ABOVE, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

Please read the User's Guide and, specifically, the Warnings and Restrictions notice in the User's Guide prior to handling the product. This notice contains important safety information about temperatures and voltages. For additional information on TI's environmental and/or safety programs, please visit www.ti.com/esh or contact TI.

No license is granted under any patent right or other intellectual property right of TI covering or relating to any machine, process, or combination in which such TI products or services might be or are used. TI currently deals with a variety of customers for products, and therefore our arrangement with the user is not exclusive. TI assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein.

REGULATORY COMPLIANCE INFORMATION

As noted in the EVM User's Guide and/or EVM itself, this EVM and/or accompanying hardware may or may not be subject to the Federal Communications Commission (FCC) and Industry Canada (IC) rules.

For EVMs **not** subject to the above rules, this evaluation board/kit/module is intended for use for ENGINEERING DEVELOPMENT, DEMONSTRATION OR EVALUATION PURPOSES ONLY and is not considered by TI to be a finished end product fit for general consumer use. It generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to part 15 of FCC or ICES-003 rules, which are designed to provide reasonable protection against radio frequency interference. Operation of the equipment may cause interference with radio communications, in which case the user at his own expense will be required to take whatever measures may be required to correct this interference.

General Statement for EVMs including a radio

User Power/Frequency Use Obligations: This radio is intended for development/professional use only in legally allocated frequency and power limits. Any use of radio frequencies and/or power availability of this EVM and its development application(s) must comply with local laws governing radio spectrum allocation and power limits for this evaluation module. It is the user's sole responsibility to only operate this radio in legally acceptable frequency space and within legally mandated power limitations. Any exceptions to this are strictly prohibited and unauthorized by Texas Instruments unless user has obtained appropriate experimental/development licenses from local regulatory authorities, which is responsibility of user including its acceptable authorization.

For EVMs annotated as FCC - FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant

Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement for Class A EVM devices

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Interference Statement for Class B EVM devices

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For EVMs annotated as IC - INDUSTRY CANADA Compliant

This Class A or B digital apparatus complies with Canadian ICES-003.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Concerning EVMs including radio transmitters

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Concerning EVMs including detachable antennas

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This radio transmitter has been approved by Industry Canada to operate with the antenna types listed in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Cet appareil numérique de la classe A ou B est conforme à la norme NMB-003 du Canada.

Les changements ou les modifications pas expressément approuvés par la partie responsable de la conformité ont pu vider l'autorité de l'utilisateur pour actionner l'équipement.

Concernant les EVMs avec appareils radio

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

[Important Notice for Users of EVMs for RF Products in Japan]

This development kit is NOT certified as Confirming to Technical Regulations of Radio Law of Japan

If you use this product in Japan, you are required by Radio Law of Japan to follow the instructions below with respect to this product:

- Use this product in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
- 2. Use this product only after you obtained the license of Test Radio Station as provided in Radio Law of Japan with respect to this product, or
- 3. Use of this product only after you obtained the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to this product. Also, please do not transfer this product, unless you give the same notice above to the transferee. Please note that if you could not follow the instructions above, you will be subject to penalties of Radio Law of Japan.

Texas Instruments Japan Limited (address) 24-1, Nishi-Shinjuku 6 chome, Shinjuku-ku, Tokyo, Japan

http://www.tij.co.jp

【無線電波を送信する製品の開発キットをお使いになる際の注意事項】

本開発キットは技術基準適合証明を受けておりません。

本製品のご使用に際しては、電波法遵守のため、以下のいずれかの措置を取っていただく必要がありますのでご注意ください。

- 1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用いただく。
- 2. 実験局の免許を取得後ご使用いただく。
- 3. 技術基準適合証明を取得後ご使用いただく。

なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。

上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。

日本テキサス・インスツルメンツ株式会社 東京都新宿区西新宿6丁目24番1号 西新宿三井ビル

http://www.tij.co.jp

EVALUATION BOARD/KIT/MODULE (EVM) WARNINGS, RESTRICTIONS AND DISCLAIMERS

For Feasibility Evaluation Only, in Laboratory/Development Environments. Unless otherwise indicated, this EVM is not a finished electrical equipment and not intended for consumer use. It is intended solely for use for preliminary feasibility evaluation in laboratory/development environments by technically qualified electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems and subsystems. It should not be used as all or part of a finished end product.

Your Sole Responsibility and Risk. You acknowledge, represent and agree that:

- 1. You have unique knowledge concerning Federal, State and local regulatory requirements (including but not limited to Food and Drug Administration regulations, if applicable) which relate to your products and which relate to your use (and/or that of your employees, affiliates, contractors or designees) of the EVM for evaluation, testing and other purposes.
- 2. You have full and exclusive responsibility to assure the safety and compliance of your products with all such laws and other applicable regulatory requirements, and also to assure the safety of any activities to be conducted by you and/or your employees, affiliates, contractors or designees, using the EVM. Further, you are responsible to assure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard.
- 3. Since the EVM is not a completed product, it may not meet all applicable regulatory and safety compliance standards (such as UL, CSA, VDE, CE, RoHS and WEEE) which may normally be associated with similar items. You assume full responsibility to determine and/or assure compliance with any such standards and related certifications as may be applicable. You will employ reasonable safeguards to ensure that your use of the EVM will not result in any property damage, injury or death, even if the EVM should fail to perform as described or expected.
- 4. You will take care of proper disposal and recycling of the EVM's electronic components and packing materials.

Certain Instructions. It is important to operate this EVM within TI's recommended specifications and environmental considerations per the user guidelines. Exceeding the specified EVM ratings (including but not limited to input and output voltage, current, power, and environmental ranges) may cause property damage, personal injury or death. If there are questions concerning these ratings please contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM User's Guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, some circuit components may have case temperatures greater than 60°C as long as the input and output are maintained at a normal ambient operating temperature. These components include but are not limited to linear regulators, switching transistors, pass transistors, and current sense resistors which can be identified using the EVM schematic located in the EVM User's Guide. When placing measurement probes near these devices during normal operation, please be aware that these devices may be very warm to the touch. As with all electronic evaluation tools, only qualified personnel knowledgeable in electronic measurement and diagnostics normally found in development environments should use these EVMs.

Agreement to Defend, Indemnify and Hold Harmless. You agree to defend, indemnify and hold TI, its licensors and their representatives harmless from and against any and all claims, damages, losses, expenses, costs and liabilities (collectively, "Claims") arising out of or in connection with any use of the EVM that is not in accordance with the terms of the agreement. This obligation shall apply whether Claims arise under law of tort or contract or any other legal theory, and even if the EVM fails to perform as described or expected.

Safety-Critical or Life-Critical Applications. If you intend to evaluate the components for possible use in safety critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, such as devices which are classified as FDA Class III or similar classification, then you must specifically notify TI of such intent and enter into a separate Assurance and Indemnity Agreement.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2013, Texas Instruments Incorporated

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have *not* been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.

Products Applications

Audio www.ti.com/audio Automotive and Transportation www.ti.com/automotive Communications and Telecom **Amplifiers** amplifier.ti.com www.ti.com/communications **Data Converters** dataconverter.ti.com Computers and Peripherals www.ti.com/computers **DLP® Products** www.dlp.com Consumer Electronics www.ti.com/consumer-apps

DSP **Energy and Lighting** dsp.ti.com www.ti.com/energy Clocks and Timers www.ti.com/clocks Industrial www.ti.com/industrial Interface interface.ti.com Medical www.ti.com/medical logic.ti.com Logic Security www.ti.com/security

Power Mgmt power.ti.com Space, Avionics and Defense www.ti.com/space-avionics-defense

Microcontrollers microcontroller.ti.com Video and Imaging www.ti.com/video

RFID www.ti-rfid.com

OMAP Applications Processors www.ti.com/omap TI E2E Community e2e.ti.com

Wireless Connectivity <u>www.ti.com/wirelessconnectivity</u>