

TMS320C28x Optimizing C/C++ Compiler v6.1

User's Guide



Literature Number: SPRU514E

April 2012

Preface	9
1 Introduction to the Software Development Tools	12
1.1 Software Development Tools Overview	13
1.2 C/C++ Compiler Overview	14
1.2.1 ANSI/ISO Standard	14
1.2.2 Output Files	15
1.2.3 Compiler Interface	15
1.2.4 Utilities	15
2 Using the C/C++ Compiler	16
2.1 About the Compiler	17
2.2 Invoking the C/C++ Compiler	17
2.3 Changing the Compiler's Behavior With Options	18
2.3.1 Frequently Used Options	26
2.3.2 Miscellaneous Useful Options	27
2.3.3 Run-Time Model Options	28
2.3.4 Symbolic Debugging and Profiling Options	29
2.3.5 Specifying Filenames	31
2.3.6 Changing How the Compiler Interprets Filenames	31
2.3.7 Changing How the Compiler Processes C Files	32
2.3.8 Changing How the Compiler Interprets and Names Extensions	32
2.3.9 Specifying Directories	32
2.3.10 Assembler Options	32
2.3.11 Dynamic Linking	34
2.3.12 Deprecated Options	34
2.4 Controlling the Compiler Through Environment Variables	35
2.4.1 Setting Default Compiler Options (C2000_C_OPTION)	35
2.4.2 Naming an Alternate Directory (C2000_C_DIR)	36
2.5 Controlling the Preprocessor	36
2.5.1 Predefined Macro Names	36
2.5.2 The Search Path for #include Files	37
2.5.3 Generating a Preprocessed Listing File (--preproc_only Option)	38
2.5.4 Continuing Compilation After Preprocessing (--preproc_with_compile Option)	38
2.5.5 Generating a Preprocessed Listing File With Comments (--preproc_with_comment Option)	38
2.5.6 Generating a Preprocessed Listing File With Line-Control Information (--preproc_with_line Option)	39
2.5.7 Generating Preprocessed Output for a Make Utility (--preproc_dependency Option)	39
2.5.8 Generating a List of Files Included With the #include Directive (--preproc_includes Option)	39
2.5.9 Generating a List of Macros in a File (--preproc_macros Option)	39
2.6 Understanding Diagnostic Messages	39
2.6.1 Controlling Diagnostics	40
2.6.2 How You Can Use Diagnostic Suppression Options	41
2.7 Other Messages	42
2.8 Generating Cross-Reference Listing Information (--gen_acp_xref Option)	42
2.9 Generating a Raw Listing File (--gen_acp_raw Option)	43
2.10 Using Inline Function Expansion	44

2.10.1	Inlining Intrinsic Operators	44
2.10.2	Unguarded Definition-Controlled Inlining	44
2.10.3	Guarded Inlining and the <code>_INLINE</code> Preprocessor Symbol	45
2.11	Using Interlist	46
2.12	Enabling Entry Hook and Exit Hook Functions	48
3	Optimizing Your Code	49
3.1	Invoking Optimization	50
3.2	Performing File-Level Optimization (<code>--opt_level=3</code> option)	51
3.2.1	Controlling File-Level Optimization (<code>--std_lib_func_def</code> Options)	51
3.2.2	Creating an Optimization Information File (<code>--gen_opt_info</code> Option)	51
3.3	Performing Program-Level Optimization (<code>--program_level_compile</code> and <code>--opt_level=3</code> options)	52
3.3.1	Controlling Program-Level Optimization (<code>--call_assumptions</code> Option)	52
3.3.2	Optimization Considerations When Mixing C/C++ and Assembly	53
3.4	Link-Time Optimization (<code>--opt_level=4</code> Option)	54
3.4.1	Option Handling	54
3.4.2	Incompatible Types	55
3.5	Special Considerations When Using Optimization	55
3.5.1	Use Caution With <code>asm</code> Statements in Optimized Code	55
3.5.2	Use the Volatile Keyword for Necessary Memory Accesses	55
3.6	Automatic Inline Expansion (<code>--auto_inline</code> Option)	57
3.7	Using the Interlist Feature With Optimization	57
3.8	Debugging and Profiling Optimized Code	60
3.8.1	Debugging Optimized Code (<code>--symdebug:dwarf</code> , <code>--symdebug:coff</code> , and <code>--opt_level</code> Options)	60
3.8.2	Profiling Optimized Code	60
3.9	Controlling Code Size Versus Speed	61
3.10	Increasing Code-Size Optimizations (<code>--opt_for_size</code> Option)	62
3.11	What Kind of Optimization Is Being Performed?	64
3.11.1	Cost-Based Register Allocation	64
3.11.2	Alias Disambiguation	64
3.11.3	Branch Optimizations and Control-Flow Simplification	65
3.11.4	Data Flow Optimizations	65
3.11.5	Expression Simplification	65
3.11.6	Inline Expansion of Functions	65
3.11.7	Function Symbol Aliasing	65
3.11.8	Induction Variables and Strength Reduction	66
3.11.9	Loop-Invariant Code Motion	66
3.11.10	Loop Rotation	66
3.11.11	Instruction Scheduling	66
3.11.12	Register Variables	66
3.11.13	Register Tracking/Targeting	66
3.11.14	Tail Merging	66
3.11.15	Autoincrement Addressing	66
3.11.16	Removing Comparisons to Zero	67
3.11.17	RPTB Generation (for FPU Targets Only)	67
4	Linking C/C++ Code	68
4.1	Invoking the Linker Through the Compiler (<code>-z</code> Option)	69
4.1.1	Invoking the Linker Separately	69
4.1.2	Invoking the Linker as Part of the Compile Step	70
4.1.3	Disabling the Linker (<code>--compile_only</code> Compiler Option)	70
4.2	Linker Code Optimizations	71
4.2.1	Generating Function Subsections (<code>--gen_func_subsections</code> Compiler Option)	71
4.3	Controlling the Linking Process	71
4.3.1	Including the Run-Time-Support Library	71

4.3.2	Run-Time Initialization	72
4.3.3	Initialization by the Interrupt Vector	72
4.3.4	Global Object Constructors	73
4.3.5	Specifying the Type of Global Variable Initialization	73
4.3.6	Specifying Where to Allocate Sections in Memory	74
4.3.7	A Sample Linker Command File	75
4.4	Linking C28x and C2XLP Code	76
5	Post-Link Optimizer	78
5.1	The Post-Link Optimizer's Role in the Software Development Flow	79
5.2	Removing Redundant DP Loops	80
5.3	Tracking DP Values Across Branches	80
5.4	Tracking DP Values Across Function Calls	81
5.5	Other Post-Link Optimizations	81
5.6	Controlling Post-Link Optimizations	82
5.6.1	Excluding Files (-ex Option)	82
5.6.2	Controlling Post-Link Optimization Within an Assembly File	82
5.6.3	Retaining Post-Link Optimizer Output (--keep_asm Option)	82
5.6.4	Disable Optimization Across Function Calls (-nf Option)	82
5.7	Restrictions on Using the Post-Link Optimizer	83
5.8	Naming the Outfile (--output_file Option)	83
6	TMS320C28x C/C++ Language Implementation	84
6.1	Characteristics of TMS320C28x C	85
6.2	Characteristics of TMS320C28x C++	85
6.3	Using MISRA-C:2004	86
6.4	Data Types	87
6.4.1	Support for 64-Bit Integers	87
6.4.2	C28x long double Floating-Point Type Change	88
6.5	Keywords	89
6.5.1	The const Keyword	89
6.5.2	The cregister Keyword	89
6.5.3	The far Keyword	90
6.5.4	The interrupt Keyword	92
6.5.5	The restrict Keyword	93
6.5.6	The volatile Keyword	93
6.6	Accessing far Memory From C++	95
6.6.1	Using the Large Memory Model (--large_memory_model Option)	95
6.6.2	Using Intrinsics to Access far Memory in C++	95
6.7	C++ Exception Handling	96
6.8	Register Variables and Parameters	97
6.9	The asm Statement	97
6.10	Pragma Directives	98
6.10.1	The CHECK_MISRA Pragma	99
6.10.2	The CLINK Pragma	99
6.10.3	The CODE_ALIGN Pragma	99
6.10.4	The CODE_SECTION Pragma	99
6.10.5	The DATA_SECTION Pragma	101
6.10.6	The Diagnostic Message Pragma	103
6.10.7	The FAST_FUNC_CALL Pragma	104
6.10.8	The FUNC_EXT_CALLED Pragma	105
6.10.9	The FUNCTION_OPTIONS Pragma	106
6.10.10	The INTERRUPT Pragma	106
6.10.11	The MUST_ITERATE Pragma	107
6.10.12	The NO_HOOKS Pragma	108

6.10.13	The RESET_MISRA Pragma	108
6.10.14	The RETAIN Pragma	108
6.10.15	The SET_CODE_SECTION and SET_DATA_SECTION Pragmas	109
6.11	The _Pragma Operator	110
6.12	Object File Symbol Naming Conventions (Linknames)	110
6.13	Initializing Static and Global Variables	111
6.13.1	Initializing Static and Global Variables With the Linker	111
6.13.2	Initializing Static and Global Variables With the const Type Qualifier	111
6.14	Changing the ANSI/ISO C Language Mode	112
6.14.1	Compatibility With K&R C (--kr_compatible Option)	112
6.14.2	Enabling Strict ANSI/ISO Mode and Relaxed ANSI/ISO Mode (--strict_ansi and --relaxed_ansi Options)	113
6.14.3	Enabling Embedded C++ Mode (--embedded_cpp Option)	113
6.15	GNU Language Extensions	114
6.15.1	Extensions	114
6.15.2	Function Attributes	115
6.15.3	Variable Attributes	115
6.15.4	Type Attributes	115
6.15.5	Built-In Functions	116
6.16	Compiler Limits	116
7	Run-Time Environment	118
7.1	Memory Model	119
7.1.1	Sections	119
7.1.2	C/C++ System Stack	120
7.1.3	Allocating .const/.econst to Program Memory	121
7.1.4	Dynamic Memory Allocation	122
7.1.5	Initialization of Variables	122
7.1.6	Allocating Memory for Static and Global Variables	122
7.1.7	Field/Structure Alignment	123
7.1.8	Character String Constants	123
7.1.9	far Character String Constants	123
7.2	Register Conventions	124
7.2.1	TMS320C28x Register Use and Preservation	124
7.2.2	Status Registers	125
7.3	Function Structure and Calling Conventions	126
7.3.1	How a Function Makes a Call	126
7.3.2	How a Called Function Responds	127
7.3.3	Special Case for a Called Function (Large Frames)	128
7.3.4	Accessing Arguments and Local Variables	128
7.3.5	Allocating the Frame and Accessing 32-Bit Values in Memory	129
7.4	Interfacing C and C++ With Assembly Language	129
7.4.1	Using Assembly Language Modules With C/C++ Code	129
7.4.2	Accessing Assembly Language Variables From C/C++	131
7.4.3	Sharing C/C++ Header Files With Assembly Source	132
7.4.4	Using Inline Assembly Language	132
7.4.5	Using Intrinsics to Access Assembly Language Statements	133
7.5	Interrupt Handling	138
7.5.1	General Points About Interrupts	138
7.5.2	Using C/C++ Interrupt Routines	139
7.6	Integer Expression Analysis	139
7.6.1	Operations Evaluated With Run-Time-Support Calls	139
7.6.2	C/C++ Code Access to the Upper 16 Bits of 16-Bit Multiply	139
7.7	Floating-Point Expression Analysis	140

7.8	System Initialization	140
7.8.1	Run-Time Stack	140
7.8.2	Automatic Initialization of Variables	141
8	Using Run-Time-Support Functions and Building Libraries	145
8.1	C and C++ Run-Time Support Libraries	146
8.1.1	Linking Code With the Object Library	146
8.1.2	Header Files	146
8.1.3	Modifying a Library Function	146
8.1.4	Minimal Support for Internationalization	147
8.1.5	Allowable Number of Open Files	147
8.1.6	Library Naming Conventions	147
8.2	Far Memory Support	148
8.2.1	Far Versions of Run-Time-Support Functions	148
8.2.2	Global and Static Variables in Run-Time-Support Functions	148
8.2.3	Far Dynamic Memory Allocation in C	149
8.2.4	Far Dynamic Memory Allocation in C++	149
8.3	The C I/O Functions	151
8.3.1	High-Level I/O Functions	151
8.3.2	Overview of Low-Level I/O Implementation	153
8.3.3	Device-Driver Level I/O Functions	156
8.3.4	Adding a User-Defined Device Driver for C I/O	160
8.3.5	The device Prefix	161
8.4	Handling Reentrancy (_register_lock() and _register_unlock() Functions)	163
8.5	Library-Build Process	164
8.5.1	Required Non-Texas Instruments Software	164
8.5.2	Using the Library-Build Process	164
8.5.3	Extending mklib	168
9	C++ Name Demangler	169
9.1	Invoking the C++ Name Demangler	170
9.2	C++ Name Demangler Options	170
9.3	Sample Usage of the C++ Name Demangler	171
10	CLA Compiler	173
10.1	How to Invoke the CLA Compiler	174
10.2	CLA C Language Implementation	175
10.2.1	Characteristics	175
10.2.2	C Language Restrictions	176
10.2.3	Memory Model - Sections	176
10.2.4	Function Structure and Calling Conventions	177
A	Glossary	178

List of Figures

1-1.	TMS320C28x Software Development Flow	13
5-1.	The Post-Link Optimizer in the TMS320C28x Software Development Flow	79
7-1.	Use of the Stack During a Function Call	126
7-2.	Format of Initialization Records in the .cinit Section (Default and far Data)	141
7-3.	Format of Initialization Records in the .pinit Section	142
7-4.	Autoinitialization at Run Time	143
7-5.	Initialization at Load Time	144
10-1.	CLA Compilation Overview	174

List of Tables

2-1.	Processor Options	18
2-2.	Optimization Options	18
2-3.	Debug Options	19
2-4.	Include Options	19
2-5.	Control Options	19
2-6.	Advanced Debug Options	19
2-7.	Language Options	19
2-8.	Parser Preprocessing Options	20
2-9.	Predefined Symbols Options	20
2-10.	Diagnostics Options	20
2-11.	Run-Time Model Options	21
2-12.	Advanced Optimization Options	21
2-13.	Entry/Exit Hook Options	21
2-14.	Library Function Assumptions Options	22
2-15.	Assembler Options	22
2-16.	File Type Specifier Options	22
2-17.	Directory Specifier Options	23
2-18.	Default File Extensions Options	23
2-19.	Command Files Options	23
2-20.	MISRA-C:2004 Options	23
2-21.	Linker Basic Options	24
2-22.	File Search Path Options	24
2-23.	Command File Preprocessing Options	24
2-24.	Diagnostic Options	24
2-25.	Linker Output Options	25
2-26.	Symbol Management Options	25
2-27.	Run-Time Environment Options	25
2-28.	Link-Time Optimization Options	25
2-29.	Miscellaneous Options	25
2-30.	Linker Options For Dynamic Linking	34
2-31.	Compiler Backwards-Compatibility Options Summary	34
2-32.	Predefined C28x Macro Names	36
2-33.	Raw Listing File Identifiers	43
2-34.	Raw Listing File Diagnostic Identifiers	43
3-1.	Options That You Can Use With --opt_level=3	51
3-2.	Selecting a File-Level Optimization Option	51
3-3.	Selecting a Level for the --gen_opt_info Option	51

3-4.	Selecting a Level for the --call_assumptions Option	52
3-5.	Special Considerations When Using the --call_assumptions Option	53
4-1.	Initialized Sections Created by the Compiler	74
4-2.	Uninitialized Sections Created by the Compiler	74
6-1.	TMS320C28x C/C++ Data Types	87
6-2.	Valid Control Registers	89
6-3.	GCC Language Extensions.....	114
7-1.	Summary of Sections and Memory Placement	120
7-2.	Register Use and Preservation Conventions.....	124
7-3.	FPU Register Use and Preservation Conventions.....	124
7-4.	Status Register Fields	125
7-5.	Floating-Point Status Register (STF) Fields For FPU Targets Only	125
7-6.	TMS320C28x C/C++ Compiler Intrinsics	133
7-7.	C/C++ Compiler Intrinsics for FPU	138
8-1.	The mklib Program Options	166
10-1.	C/C++ Compiler Intrinsics for CLA.....	175

Read This First

About This Manual

The *TMS320C28x Optimizing C/C++ Compiler User's Guide* explains how to use these compiler tools:

- Compiler
- Post-link optimizer
- Library build utility
- C++ name demangler

The compiler accepts C and C++ code conforming to the International Organization for Standardization (ISO) standards for these languages. The compiler supports the 1989 version of the C language and the 1998 version of the C++ language.

This user's guide discusses the characteristics of the C/C++ compiler. It assumes that you already know how to write C/C++ programs. *The C Programming Language* (second edition), by Brian W. Kernighan and Dennis M. Ritchie, describes C based on the ISO C standard. You can use the Kernighan and Ritchie (hereafter referred to as K&R) book as a supplement to this manual. References to K&R C (as opposed to ISO C) in this manual refer to the C language as defined in the first edition of Kernighan and Ritchie's *The C Programming Language*.

Notational Conventions

This document uses the following conventions:

- Program listings, program examples, and interactive displays are shown in a special typeface. Interactive displays use a bold version of the special typeface to distinguish commands that you enter from items that the system displays (such as prompts, command output, error messages, etc.).

Here is a sample of C code:

```
#include <stdio.h>
main()
{   printf("hello, cruel world\n");
}
```

- In syntax descriptions, the instruction, command, or directive is in a **bold typeface** and parameters are in an *italic typeface*. Portions of a syntax that are in bold should be entered as shown; portions of a syntax that are in italics describe the type of information that should be entered.
- Square brackets ([and]) identify an optional parameter. If you use an optional parameter, you specify the information within the brackets. Unless the square brackets are in the **bold typeface**, do not enter the brackets themselves. The following is an example of a command that has an optional parameter:

cl2000 [options] [filenames] [--run_linker [link_options] [object files]]
--

- Braces ({ and }) indicate that you must choose one of the parameters within the braces; you do not enter the braces themselves. This is an example of a command with braces that are not included in the actual syntax but indicate that you must specify either the --rom_model or --ram_model option:

cl2000 --silicon_version=28 --run_linker {--rom_model --ram_model} filenames [--output_file= name.out] --library= libraryname

- In assembler syntax statements, column 1 is reserved for the first character of a label or symbol. If the label or symbol is optional, it is usually not shown. If it is a required parameter, it is shown starting against the left margin of the box, as in the example below. No instruction, command, directive, or parameter, other than a symbol or label, can begin in column 1.

<i>symbol</i> .usect "section name", size in bytes[, alignment]
--

- Some directives can have a varying number of parameters. For example, the .byte directive. This syntax is shown as [, ..., parameter].
- The TMS320C2800™ core is referred to as TMS320C28x or C28x.

Related Documentation

You can use the following books to supplement this user's guide:

ANSI X3.159-1989, Programming Language - C (Alternate version of the 1989 C Standard), American National Standards Institute

ISO/IEC 9899:1989, International Standard - Programming Languages - C (The 1989 C Standard), International Organization for Standardization

ISO/IEC 9899:1999, International Standard - Programming Languages - C (The C Standard), International Organization for Standardization

ISO/IEC 14882-1998, International Standard - Programming Languages - C++ (The C++ Standard), International Organization for Standardization

The C Programming Language (second edition), by Brian W. Kernighan and Dennis M. Ritchie, published by Prentice-Hall, Englewood Cliffs, New Jersey, 1988

The Annotated C++ Reference Manual, Margaret A. Ellis and Bjarne Stroustrup, published by Addison-Wesley Publishing Company, Reading, Massachusetts, 1990

C: A Reference Manual (fourth edition), by Samuel P. Harbison, and Guy L. Steele Jr., published by Prentice Hall, Englewood Cliffs, New Jersey

Programming Embedded Systems in C and C++, by Michael Barr, Andy Oram (Editor), published by O'Reilly & Associates; ISBN: 1565923545, February 1999

Programming in C, Steve G. Kochan, Hayden Book Company

The C++ Programming Language (second edition), Bjarne Stroustrup, published by Addison-Wesley Publishing Company, Reading, Massachusetts, 1990

Tool Interface Standards (TIS) DWARF Debugging Information Format Specification Version 2.0, TIS Committee, 1995

DWARF Debugging Information Format Version 3, DWARF Debugging Information Format Workgroup, Free Standards Group, 2005 (<http://dwarfstd.org>)

Related Documentation From Texas Instruments

You can use the following books to supplement this user's guide:

SPRAAB5— [The Impact of DWARF on TI Object Files](#). Describes the Texas Instruments extensions to the DWARF specification.

SPRU430— [TMS320C28x DSP CPU and Instruction Set Reference Guide](#) describes the central processing unit (CPU) and the assembly language instructions of the TMS320C28x fixed-point digital signal processors (DSPs). It also describes emulation features available on these DSPs.

SPRU513— [TMS320C28x Assembly Language Tools User's Guide](#) describes the assembly language tools (assembler and other tools used to develop assembly language code), assembler directives, macros, common object file format, and symbolic debugging directives for the TMS320C28x device.

SPRU566— [TMS320x28xx, 28xxx Peripheral Reference Guide](#) describes the peripheral reference guides of the 28x digital signal processors (DSPs).

SPRU625— [TMS320C28x DSP/BIOS Application Programming Interface \(API\) Reference Guide](#) describes development using DSP/BIOS.

Introduction to the Software Development Tools

The TMS320C28x™ is supported by a set of software development tools, which includes an optimizing C/C++ compiler, an assembler, a linker, and assorted utilities.


This chapter provides an overview of these tools and introduces the features of the optimizing C/C++ compiler. The assembler and linker are discussed in detail in the *TMS320C28x Assembly Language Tools User's Guide*.

Topic	Page
1.1 Software Development Tools Overview	13
1.2 C/C++ Compiler Overview	14

1.1 Software Development Tools Overview

Figure 1-1 illustrates the software development flow. The shaded portion of the figure highlights the most common path of software development for C language programs. The other portions are peripheral functions that enhance the development process.

Figure 1-1. TMS320C28x Software Development Flow

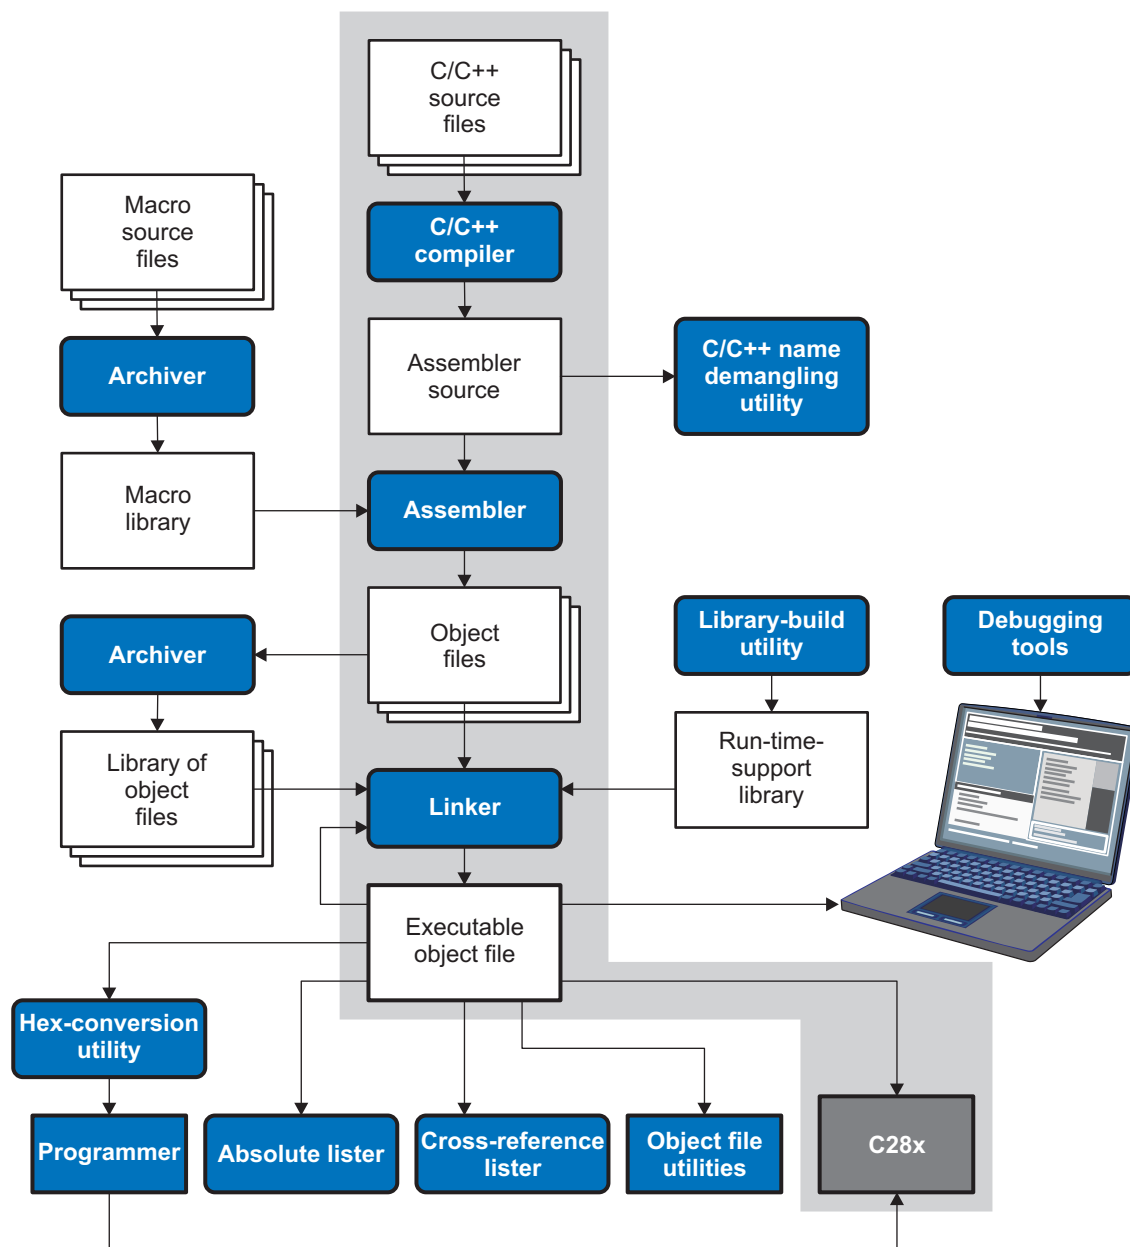

The following list describes the tools that are shown in Figure 1-1:

- The **compiler** accepts C/C++ source code and produces C28x assembly language source code. See [Chapter 2](#).
- The **assembler** translates assembly language source files into machine language relocatable object files. The *TMS320C28x Assembly Language Tools User's Guide* explains how to use the assembler.
- The **linker** combines relocatable object files into a single absolute executable object file. As it creates the executable file, it performs relocation and resolves external references. The linker accepts relocatable object files and object libraries as input. See [Chapter 4](#). The *TMS320C28x Assembly Language Tools User's Guide* provides a complete description of the linker.

- The **archiver** allows you to collect a group of files into a single archive file, called a *library*. Additionally, the archiver allows you to modify a library by deleting, replacing, extracting, or adding members. One of the most useful applications of the archiver is building a library of object files. The *TMS320C28x Assembly Language Tools User's Guide* explains how to use the archiver.
- The **run-time-support libraries** contain the standard ISO C and C++ library functions, compiler-utility functions, floating-point arithmetic functions, and C I/O functions that are supported by the compiler. See [Chapter 8](#).
You can use the **library-build utility** to build your own customized run-time-support library. See [Section 8.5](#). Source code for the standard run-time-support library functions for C and C++ are provided in the self-contained rtssrc.zip file.
- The **hex conversion utility** converts an object file into other object formats. You can download the converted file to an EPROM programmer. The *TMS320C28x Assembly Language Tools User's Guide* explains how to use the hex conversion utility and describes all supported formats.
- The **absolute lister** accepts linked object files as input and creates .abs files as output. You can assemble these .abs files to produce a listing that contains absolute, rather than relative, addresses. Without the absolute lister, producing such a listing would be tedious and would require many manual operations. The *TMS320C28x Assembly Language Tools User's Guide* explains how to use the absolute lister.
- The **cross-reference lister** uses object files to produce a cross-reference listing showing symbols, their definitions, and their references in the linked source files. The *TMS320C28x Assembly Language Tools User's Guide* explains how to use the cross-reference utility.
- The **C++ name demangler** is a debugging aid that converts names mangled by the compiler back to their original names as declared in the C++ source code. As shown in [Figure 1-1](#), you can use the C++ name demangler on the assembly file that is output by the compiler; you can also use this utility on the assembler listing file and the linker map file. See [Chapter 9](#).
- The **post-link optimizer** removes or modifies assembly language instructions to generate better code. The post-link optimizer must be run with the compiler -plink option. See [Chapter 5](#).
- The **disassembler** decodes object files to show the assembly instructions that they represent. The *TMS320C28x Assembly Language Tools User's Guide* explains how to use the disassembler.
- The main product of this development process is an executable object file that can be executed in a **TMS320C28x** device.

1.2 C/C++ Compiler Overview

The following subsections describe the key features of the compiler.

1.2.1 ANSI/ISO Standard

The C and C++ language features in the compiler are implemented in conformance with these ISO standards:

- **ISO-standard C**

The C/C++ compiler conforms to the C Standard ISO/IEC 9889:1990. The ISO standard supercedes and is the same as the ANSI C standard. There is also a 1999 version of the ISO standard, but the TI compiler conforms to the 1990 standard, not the 1999 standard. The language is also described in the second edition of Kernighan and Ritchie's *The C Programming Language* (K&R).

- **ISO-standard C++**

The C/C++ compiler conforms to the C++ Standard ISO/IEC 14882:1998. The language is also described in Ellis and Stroustrup's *The Annotated C++ Reference Manual* (ARM), but this is not the standard. The compiler also supports embedded C++. For a description of *unsupported* C++ features, see [Section 6.2](#).

- **ISO-standard run-time support**

The compiler tools come with an extensive run-time library. All library functions conform to the ISO C/C++ library standard. The library includes functions for standard input and output, string manipulation, dynamic memory allocation, data conversion, timekeeping, trigonometry, and exponential and hyperbolic functions. Functions for signal handling are not included, because these are target-

system specific. For more information, see [Chapter 8](#).

1.2.2 Output Files

These output files are created by the compiler:

- **COFF object files**

Common object file format (COFF) allows you to define your system's memory map at link time. This maximizes performance by enabling you to link C/C++ code and data objects into specific memory areas. COFF also supports source-level debugging.

1.2.3 Compiler Interface

These features enable interfacing with the compiler:

- **Compiler program**

The compiler tools include a compiler program (cl2000) that you use to compile, optimize, assemble, and link programs in a single step. For more information, see [Section 2.1](#).

- **Flexible assembly language interface**

The compiler has straightforward calling conventions, so you can write assembly and C functions that call each other. For more information, see [Chapter 7](#).

1.2.4 Utilities

These features are compiler utilities:

- **Library-build utility**

The library-build utility lets you custom-build object libraries from source for any combination of run-time models. For more information, see [Section 8.5](#).

- **C++ name demangler**

The C++ name demangler (dem2000) is a debugging aid that translates each mangled name it detects in compiler-generated assembly code, disassembly output, or compiler diagnostic messages to its original name found in the C++ source code. For more information, see [Chapter 9](#).

- **Hex conversion utility**

For stand-alone embedded applications, the compiler has the ability to place all code and initialization data into ROM, allowing C/C++ code to run from reset. The COFF files output by the compiler can be converted to EPROM programmer data files by using the hex conversion utility, as described in the *TMS320C28x Assembly Language Tools User's Guide*.

Using the C/C++ Compiler

The compiler translates your source program into machine language object code that the TMS320C28x can execute. Source code must be compiled, assembled, and linked to create an executable object file. All of these steps are executed at once by using the compiler.

Topic	Page
2.1 About the Compiler	17
2.2 Invoking the C/C++ Compiler	17
2.3 Changing the Compiler's Behavior With Options	18
2.4 Controlling the Compiler Through Environment Variables	35
2.5 Controlling the Preprocessor	36
2.6 Understanding Diagnostic Messages	39
2.7 Other Messages	42
2.8 Generating Cross-Reference Listing Information (--gen_acp_xref Option)	42
2.9 Generating a Raw Listing File (--gen_acp_raw Option)	43
2.10 Using Inline Function Expansion	44
2.11 Using Interlist	46
2.12 Enabling Entry Hook and Exit Hook Functions	48

2.1 About the Compiler

The compiler lets you compile, assemble, and optionally link in one step. The compiler performs the following steps on one or more source modules:

- The **compiler** accepts C/C++ source code and assembly code, and produces object code. You can compile C, C++, and assembly files in a single command. The compiler uses the filename extensions to distinguish between different file types. See [Section 2.3.8](#) for more information.
- The **linker** combines object files to create a static executable or dynamic object file. The linker is optional, so you can compile and assemble many modules independently and link them later. See [Chapter 4](#) for information about linking the files.

Invoking the Linker

NOTE: By default, the compiler does not invoke the linker. You can invoke the linker by using the `--run_linker` compiler option.

For a complete description of the assembler and the linker, see the *TMS320C28x Assembly Language Tools User's Guide*.

2.2 Invoking the C/C++ Compiler

To invoke the compiler, enter:

```
cl2000 [options] [filenames] [--run_linker [link_options] object files]
```

cl2000	Command that runs the compiler and the assembler.
<i>options</i>	Options that affect the way the compiler processes input files. The options are listed in Table 2-5 through Table 2-29 .
<i>filenames</i>	One or more C/C++ source files, assembly language source files, linear assembly files, or object files.
--run_linker	Option that invokes the linker. The <code>--run_linker</code> option's short form is <code>-z</code> . See Chapter 4 for more information.
<i>link_options</i>	Options that control the linking process.
<i>object files</i>	Name of the additional object files for the linking process.

The arguments to the compiler are of three types:

- Compiler options
- Link options
- Filenames

The `--run_linker` option indicates linking is to be performed. If the `--run_linker` option is used, any compiler options must precede the `--run_linker` option, and all link options must follow the `--run_linker` option.

Source code filenames must be placed before the `--run_linker` option. Additional object file filenames can be placed after the `--run_linker` option.

For example, if you want to compile two files named `symtab.c` and `file.c`, assemble a third file named `seek.asm`, and link to create an executable program called `myprogram.out`, you will enter:

```
cl2000 -v28 symtab.c file.c seek.asm --run_linker --library=lnk.cmd
      --library=rts2800.lib --output_file=myprogram.out
```

2.3 Changing the Compiler's Behavior With Options

Options control the operation of the compiler. This section provides a description of option conventions and an option summary table. It also provides detailed descriptions of the most frequently used options, including options used for type-checking and assembling.

For a help screen summary of the options, enter **cl2000** with no parameters on the command line.

The following apply to the compiler options:

- Options are preceded by one or two hyphens.
- Options are case sensitive.
- Options are either single letters or sequences of characters.
- Individual options cannot be combined.
- An option with a *required* parameter should be specified with an equal sign before the parameter to clearly associate the parameter with the option. For example, the option to undefine a constant can be expressed as `--undefine=name`. Although not recommended, you can separate the option and the parameter with or without a space, as in `--undefine name` or `-undefinename`.
- An option with an *optional* parameter should be specified with an equal sign before the parameter to clearly associate the parameter with the option. For example, the option to specify the maximum amount of optimization can be expressed as `-O=3`. Although not recommended, you can specify the parameter directly after the option, as in `-O3`. No space is allowed between the option and the optional parameter, so `-O 3` is not accepted.
- Files and options except the `--run_linker` option can occur in any order. The `--run_linker` option must follow all other compile options and precede any link options.

You can define default options for the compiler by using the `C2000_C_OPTION` environment variable. For a detailed description of the environment variable, see [Section 2.4.1](#).

[Table 2-5](#) through [Table 2-29](#) summarize all options (including link options). Use the references in the tables for more complete descriptions of the options.

Table 2-1. Processor Options

Option	Alias	Effect	Section
<code>--silicon_version=28</code>	<code>-v28</code>	Specifies TMS320C28x architecture. When not specified defaults to TMS320C27x.	Section 2.3.3
<code>--large_memory_model</code>	<code>-ml</code>	Generates large memory model code and allows conditional compilation of 16-bit code with large memory model code	Section 2.3.3 , Section 6.6.1
<code>--unified_memory</code>	<code>-mt</code>	Generates code for the unified memory model	Section 2.3.3
<code>--cla_support[=cla0]</code>		Specifies TMS320C28x CLA accelerator support; default is cla0	Section 2.3.3
<code>--float_support={fpu32 softlib fpu64}</code>		Specifies TMS320C28x 32- or 64-bit hardware floating-point support; default is softlib.	Section 2.3.3
<code>--vcu_support[=vcu0]</code>		Specifies C28x VCU coprocessor support; default is vcu0	Section 2.3.3

Table 2-2. Optimization Options⁽¹⁾

Option	Alias	Effect	Section
<code>--opt_level=0</code>	<code>-O0</code>	Optimizes register usage	Section 3.1
<code>--opt_level=1</code>	<code>-O1</code>	Uses <code>-O0</code> optimizations and optimizes locally	Section 3.1
<code>--opt_level=2</code>	<code>-O2</code> or <code>-O</code>	Uses <code>-O1</code> optimizations and optimizes globally (default)	Section 3.1
<code>--opt_level=3</code>	<code>-O3</code>	Uses <code>-O2</code> optimizations and optimizes the file	Section 3.1 Section 3.2
<code>--opt_level=4</code>	<code>-O4</code>	Uses <code>-O3</code> optimizations and performs link-time optimization	Section 3.4
<code>--opt_for_space=n</code>	<code>-ms</code>	Controls code size on four levels (0, 1, 2, and 3)	Section 3.9

⁽¹⁾ **Note:** Machine-specific options (see [Table 2-11](#)) can also affect optimization.

Table 2-3. Debug Options

Option	Alias	Effect	Section
--symdebug:dwarf	-g	Enables symbolic debugging	Section 2.3.4 Section 3.8.1
--symdebug:coff		Enables symbolic debugging using the alternate STABS debugging format.	Section 2.3.4 Section 3.8.1
--symdebug:none		Disables all symbolic debugging	Section 2.3.4
--symdebug:profile_coff		Enables profiling using the alternate STABS debugging format.	Section 2.3.4
--symdebug:skeletal		Enables minimal symbolic debugging that does not hinder optimizations (default behavior)	Section 2.3.4
--optimize_with_debug	-mn	Reenables optimizations disabled with --symdebug:dwarf	Section 3.8.1

Table 2-4. Include Options

Option	Alias	Effect	Section
--include_path=directory	-I	Defines #include search path	Section 2.5.2.1
--preinclude=filename		Includes filename at the beginning of compilation	Section 2.3.2

Table 2-5. Control Options

Option	Alias	Effect	Section
--compile_only	-c	Disables linking (negates --run_linker)	Section 4.1.3
--help	-h	Prints (on the standard output device) a description of the options understood by the compiler.	Section 2.3.1
--run_linker	-z	Enables linking	Section 2.3.1
--skip_assembler	-n	Compiles or assembly optimizes only	Section 2.3.1

Table 2-6. Advanced Debug Options

Option	Alias	Effect	Section
--symdebug:keep_all_types		Keep unreferenced type information	Section 2.3.4

Table 2-7. Language Options

Option	Alias	Effect	Section
--cpp_default	-fg	Processes all source files with a C extension as C++ source files.	Section 2.3.6
--embedded_cpp	-pe	Enables embedded C++ mode	Section 6.14.3
--exceptions		Enables C++ exception handling	Section 6.7
--gcc		Enables support for GCC extensions	Section 6.15
--gen_acp_raw	-pl	Generates a raw listing file	Section 2.9
--gen_acp_xref	-px	Generates a cross-reference listing file	Section 2.8
--keep_unneeded_statics		Keeps unreferenced static variables.	Section 2.3.2
--kr_compatible	-pk	Allows K&R compatibility	Section 6.14.1
--multibyte_chars	-pc	Enables support for multibyte character sequences in comments, string literals and character constants.	--
--no_inlining	-pi	Disables definition-controlled inlining (but --opt_level=3 (or -O3) optimizations still perform automatic inlining)	Section 2.10
--no_intrinsics	-pn	Disables intrinsic functions. No predefinition of compiler-supplied intrinsic functions.	--
--program_level_compile	-pm	Combines source files to perform program-level optimization	Section 3.3
--relaxed_ansi	-pr	Enables relaxed mode; ignores strict ISO violations	Section 6.14.2
--rtti	-rtti	Enables run time type information (RTTI)	--
--static_template_instantiation		Instantiate all template entities with internal linkage	--

Table 2-7. Language Options (continued)

Option	Alias	Effect	Section
--strict_ansi	-ps	Enables strict ISO mode (for C/C++, not K&R C)	Section 6.14.2

Table 2-8. Parser Preprocessing Options

Option	Alias	Effect	Section
--preproc_dependency[= <i>filename</i>]	-ppd	Performs preprocessing only, but instead of writing preprocessed output, writes a list of dependency lines suitable for input to a standard make utility	Section 2.5.7
--preproc_includes[= <i>filename</i>]	-ppi	Performs preprocessing only, but instead of writing preprocessed output, writes a list of files included with the #include directive	Section 2.5.8
--preproc_macros[= <i>filename</i>]	-ppm	Performs preprocessing only. Writes list of predefined and user-defined macros to a file with the same name as the input but with a .pp extension.	Section 2.5.9
--preproc_only	-ppo	Performs preprocessing only. Writes preprocessed output to a file with the same name as the input but with a .pp extension.	Section 2.5.3
--preproc_with_comment	-ppc	Performs preprocessing only. Writes preprocessed output, keeping the comments, to a file with the same name as the input but with a .pp extension.	Section 2.5.5
--preproc_with_compile	-ppa	Continues compilation after preprocessing	Section 2.5.4
--preproc_with_line	-ppl	Performs preprocessing only. Writes preprocessed output with line-control information (#line directives) to a file with the same name as the input but with a .pp extension.	Section 2.5.6

Table 2-9. Predefined Symbols Options

Option	Alias	Effect	Section
--define= <i>name</i> [= <i>def</i>]	-D	Predefines <i>name</i>	Section 2.3.1
--undefine= <i>name</i>	-U	Undefines <i>name</i>	Section 2.3.1

Table 2-10. Diagnostics Options

Option	Alias	Effect	Section
--compiler_revision		Prints out the compiler release revision and exits	--
--diag_error= <i>num</i>	-pdse	Categorizes the diagnostic identified by <i>num</i> as an error	Section 2.6.1
--diag_remark= <i>num</i>	-pdsr	Categorizes the diagnostic identified by <i>num</i> as a remark	Section 2.6.1
--diag_suppress= <i>num</i>	-pds	Suppresses the diagnostic identified by <i>num</i>	Section 2.6.1
--diag_warning= <i>num</i>	-pdsd	Categorizes the diagnostic identified by <i>num</i> as a warning	Section 2.6.1
--display_error_number	-pden	Displays a diagnostic's identifiers along with its text	Section 2.6.1
--emit_warnings_as_errors	-pdew	Treat warnings as errors	Section 2.6.1
--issue_remarks	-pdr	Issues remarks (nonserious warnings)	Section 2.6.1
--no_warnings	-pdw	Suppresses warning diagnostics (errors are still issued)	Section 2.6.1
--quiet	-q	Suppresses progress messages (quiet)	--
--set_error_limit= <i>num</i>	-pdel	Sets the error limit to <i>num</i> . The compiler abandons compiling after this number of errors. (The default is 100.)	Section 2.6.1
--super_quiet	-qq	Super quiet mode	--
--tool_version	-version	Displays version number for each tool	--
--verbose		Display banner and function progress information	--
--verbose_diagnostics	-pdv	Provides verbose diagnostics that display the original source with line-wrap	Section 2.6.1
--write_diagnostics_file	-pdf	Generates a diagnostics information file. Compiler only option.	Section 2.6.1

Table 2-11. Run-Time Model Options

Option	Alias	Effect	Section
--asm_code_fill= <i>value</i>		Specifies assembler fill value for code sections. Default is zero.	Section 2.3.3
--asm_data_fill= <i>value</i>		Specifies fill value for data sections. Default is NOP instructions.	Section 2.3.3
--c2xlp_src_compatible	-m20	Accepts C2xLP assembly instructions	Section 2.3.3
--disable_dp_load_opt	-md	Disables DP load optimizations	Section 2.3.3
--fp_reassoc={on off}		Enables or disables the reassociation of floating-point arithmetic	Section 2.3.3
--gen_func_subsections={on off}	-mo	Puts each function in a separate subsection in the object file	Section 4.2.1
--no_fast_branch	-me	Disables generation of fast branch instructions	Section 2.3.3
--no_rpt	-mi	Disables generation of RPT instructions	Section 2.3.3
--profile:power		Enables power profiling	Section 2.3.4 Section 3.8.2
--protect_volatile	-mv	Enables volatile reference protection	Section 2.3.3
--rpt_threshold= <i>k</i>		Generates RPT loops that iterate <i>k</i> times or less. (<i>k</i> is a constant between 0 and 256.)	Section 2.3.3
--sat_reassoc={on off}		Enables or disables the reassociation of saturating arithmetic. Default is --sat_reassoc=off.	Section 2.3.2

Table 2-12. Advanced Optimization Options⁽¹⁾

Option	Alias	Effect	Section
--auto_inline=[<i>size</i>]	-oi	Sets automatic inlining size (--opt_level=3 only). If <i>size</i> is not specified, the default is 1.	Section 3.6
--call_assumptions=0	-op0	Specifies that the module contains functions and variables that are called or modified from outside the source code provided to the compiler	Section 3.3.1
--call_assumptions=1	-op1	Specifies that the module contains variables modified from outside the source code provided to the compiler but does not use functions called from outside the source code	Section 3.3.1
--call_assumptions=2	-op2	Specifies that the module contains no functions or variables that are called or modified from outside the source code provided to the compiler (default)	Section 3.3.1
--call_assumptions=3	-op3	Specifies that the module contains functions that are called from outside the source code provided to the compiler but does not use variables modified from outside the source code	Section 3.3.1
--gen_opt_info=0	-on0	Disables the optimization information file	Section 3.2.2
--gen_opt_info=1	-on1	Produces an optimization information file	Section 3.2.2
--gen_opt_info=2	-on2	Produces a verbose optimization information file	Section 3.2.2
--opt_for_speed[= <i>n</i>]	-mf	Controls speed over space (0-5 range) (Default is 4.)	Section 3.9
--optimizer_interlist	-os	Interlists optimizer comments with assembly statements	Section 3.7
--remove_hooks_when_inlining		Removes entry/exit hooks for auto-inlined functions	Section 2.12
--single_inline		Inlines functions that are only called once	--
--aliased_variables	-ma	Assumes called functions create hidden aliases (rare)	Section 3.5.2.2

⁽¹⁾ **Note:** Machine-specific options (see [Table 2-11](#)) can also affect optimization.

Table 2-13. Entry/Exit Hook Options

Option	Alias	Effect	Section
--entry_hook[= <i>name</i>]		Enables entry hooks	Section 2.12
--entry_parm={none <i>name</i> address}		Specifies the parameters to the function to the --entry_hook option	Section 2.12
--exit_hook[= <i>name</i>]		Enables exit hooks	Section 2.12
--exit_parm={none <i>name</i> address}		Specifies the parameters to the function to the --exit_hook option	Section 2.12

Table 2-14. Library Function Assumptions Options

Option	Alias	Effect	Section
--printf_support={nofloat full minimal}		Enables support for smaller, limited versions of the printf and sprintf run-time-support functions.	Section 2.3.2
--std_lib_func_defined	-ol1 or -oL1	Informs the optimizer that your file declares a standard library function	Section 3.2.1
--std_lib_func_not_defined	-ol2 or -oL2	Informs the optimizer that your file does not declare or alter library functions. Overrides the -ol0 and -ol1 options (default).	Section 3.2.1
--std_lib_func_redefined	-ol0 or -oL0	Informs the optimizer that your file alters a standard library function	Section 3.2.1

Table 2-15. Assembler Options

Option	Alias	Effect	Section
--keep_asm	-k	Keeps the assembly language (.asm) file	Section 2.3.10
--asm_listing	-al	Generates an assembly listing file	Section 2.3.10
--c_src_interlist	-ss	Interlists C source and assembly statements	Section 2.11 Section 3.7
--src_interlist	-s	Interlists optimizer comments (if available) and assembly source statements; otherwise interlists C and assembly source statements	Section 2.3.1
--absolute_listing	-aa	Enables absolute listing	Section 2.3.10
--asm_define=name[=def]	-ad	Sets the <i>name</i> symbol	Section 2.3.10
--asm_dependency	-apd	Performs preprocessing; lists only assembly dependencies	Section 2.3.10
--asm_includes	-api	Performs preprocessing; lists only included #include files	Section 2.3.10
--asm_remarks	-mw	Enables additional assembly-time checking	Section 2.3.10
--asm_undefine=name	-au	Undefines the predefined constant <i>name</i>	Section 2.3.10
--cdebug_asm_data	-mg	Produces C-type symbolic debugging for assembly variables	Section 2.3.10
--copy_file=filename	-ahc	Copies the specified file for the assembly module	Section 2.3.10
--cross_reference	-ax	Generates the cross-reference file	Section 2.3.10
--flash_prefetch_warn		Assembler warnings for F281X BF flash prefetch issue	Section 2.3.10
--include_file=filename	-ahi	Includes the specified file for the assembly module	Section 2.3.10
--no_const_clink		Stops generation of .clink directives for const global arrays.	Section 2.3.2
--output_all_syms	-as	Puts labels in the symbol table	Section 2.3.10
--preproc_asm	-mx	Preprocesses assembly source, expands assembly macros	Section 2.3.10
--syms_ignore_case	-ac	Makes case insignificant in assembly source files	Section 2.3.10

Table 2-16. File Type Specifier Options

Option	Alias	Effect	Section
--asm_file=filename	-fa	Identifies <i>filename</i> as an assembly source file regardless of its extension. By default, the compiler and assembler treat .asm files as assembly source files.	Section 2.3.6
--c_file=filename	-fc	Identifies <i>filename</i> as a C source file regardless of its extension. By default, the compiler treats .c files as C source files.	Section 2.3.6
--cpp_file=filename	-fp	Identifies <i>filename</i> as a C++ file, regardless of its extension. By default, the compiler treats .C, .cpp, .cc and .cxx files as a C++ files.	Section 2.3.6
--obj_file=filename	-fo	Identifies <i>filename</i> as an object code file regardless of its extension. By default, the compiler and linker treat .obj files as object code files.	Section 2.3.6

Table 2-17. Directory Specifier Options

Option	Alias	Effect	Section
--abs_directory=directory	-fb	Specifies an absolute listing file directory. By default, the compiler uses the .obj directory.	Section 2.3.9
--asm_directory=directory	-fs	Specifies an assembly file directory. By default, the compiler uses the current directory.	Section 2.3.9
--list_directory=directory	-ff	Specifies an assembly listing file and cross-reference listing file directory. By default, the compiler uses the .obj directory.	Section 2.3.9
--obj_directory=directory	-fr	Specifies an object file directory. By default, the compiler uses the current directory.	Section 2.3.9
--output_file=filename	-fe	Specifies a compilation output file name; can override --obj_directory.	Section 2.3.9
--pp_directory=dir		Specifies a preprocessor file directory. By default, the compiler uses the current directory.	Section 2.3.9
--temp_directory=directory	-ft	Specifies a temporary file directory. By default, the compiler uses the current directory.	Section 2.3.9

Table 2-18. Default File Extensions Options

Option	Alias	Effect	Section
--asm_extension=[.]extension	-ea	Sets a default extension for assembly source files	Section 2.3.8
--c_extension=[.]extension	-ec	Sets a default extension for C source files	Section 2.3.8
--cpp_extension=[.]extension	-ep	Sets a default extension for C++ source files	Section 2.3.8
--listing_extension=[.]extension	-es	Sets a default extension for listing files	Section 2.3.8
--obj_extension=[.]extension	-eo	Sets a default extension for object files	Section 2.3.8

Table 2-19. Command Files Options

Option	Alias	Effect	Section
--cmd_file=filename	-@	Interprets contents of a file as an extension to the command line. Multiple -@ instances can be used.	Section 2.3.1

Table 2-20. MISRA-C:2004 Options

Option	Alias	Effect	Section
--check_misra={all required advisory none rulespec}		Enables checking of the specified MISRA-C:2004 rules. Default is all.	Section 2.3.2
--misra_advisory={error warning remark suppress}		Sets the diagnostic severity for advisory MISRA-C:2004 rules	Section 2.3.2
--misra_required={error warning remark suppress}		Sets the diagnostic severity for required MISRA-C:2004 rules	Section 2.3.2

The following tables list the linker options. See the *TMS320C28x Assembly Language Tools User's Guide* for details on these options.

Table 2-21. Linker Basic Options

Option	Alias	Description
--output_file= <i>file</i>	-o	Names the executable output file. The default filename is a.out.
--map_file= <i>file</i>	-m	Produces a map or listing of the input and output sections, including holes, and places the listing in <i>filename</i>
--stack_size= <i>size</i>	[-]stack	Sets C system stack size to <i>size</i> words and defines a global symbol that specifies the stack size. Default = 1K words
--heap_size= <i>size</i>	[-]heap	Sets heap size (for the dynamic memory allocation in C) to <i>size</i> words and defines a global symbol that specifies the heap size. Default = 1K words
--warn_sections	-w	Displays a message when an undefined output section is created

Table 2-22. File Search Path Options

Option	Alias	Description
--library= <i>file</i>	-l	Names an archive library or link command <i>file</i> as linker input
--search_path= <i>pathname</i>	-I	Alters library-search algorithms to look in a directory named with <i>pathname</i> before looking in the default location. This option must appear before the --library option.
--priority	-priority	Satisfies unresolved references by the first library that contains a definition for that symbol
--reread_libs	-x	Forces rereading of libraries, which resolves back references
--disable_auto_rts		Disables the automatic selection of a run-time-support library

Table 2-23. Command File Preprocessing Options

Option	Alias	Description
--define= <i>name=value</i>		Predefines <i>name</i> as a preprocessor macro.
--undefine= <i>name</i>		Removes the preprocessor macro <i>name</i> .
--disable_pp		Disables preprocessing for command files

Table 2-24. Diagnostic Options

Option	Alias	Description
--diag_error= <i>num</i>		Categorizes the diagnostic identified by <i>num</i> as an error
--diag_remark= <i>num</i>		Categorizes the diagnostic identified by <i>num</i> as a remark
--diag_suppress= <i>num</i>		Suppresses the diagnostic identified by <i>num</i>
--diag_warning= <i>num</i>		Categorizes the diagnostic identified by <i>num</i> as a warning
--display_error_number		Displays a diagnostic's identifiers along with its text
--emit_warnings_as_errors	-pdew	Treat warnings as errors
--issue_remarks		Issues remarks (nonserious warnings)
--no_demangle		Disables demangling of symbol names in diagnostics
--no_warnings		Suppresses warning diagnostics (errors are still issued)
--set_error_limit= <i>count</i>		Sets the error limit to <i>count</i> . The linker abandons linking after this number of errors. (The default is 100.)
--verbose_diagnostics		Provides verbose diagnostics that display the original source with line-wrap

Table 2-25. Linker Output Options

Option	Alias	Description
--absolute_exe	-a	Produces an absolute, executable object file. This is the default; if neither --absolute_exe nor --relocatable is specified, the linker acts as if --absolute_exe were specified.
--mapfile_contents=attribute		Controls the information that appears in the map file.
--relocatable	-r	Produces a nonexecutable, relocatable output object file
--rom		Creates a ROM object
--run_abs	-abs	Produces an absolute listing file
--xml_link_info=file		Generates a well-formed XML file containing detailed information about the result of a link

Table 2-26. Symbol Management Options

Option	Alias	Description
--entry_point=symbol	-e	Defines a global symbol that specifies the primary entry point for the executable object file
--globalize=pattern		Changes the symbol linkage to global for symbols that match <i>pattern</i>
--hide=pattern		Hides symbols that match the specified <i>pattern</i>
--localize=pattern		Make the symbols that match the specified <i>pattern</i> local
--make_global=symbol	-g	Makes <i>symbol</i> global (overrides -h)
--make_static	-h	Makes all global symbols static
--no_sym_merge	-b	Disables merge of symbolic debugging information in COFF object files
--no_symtable	-s	Strips symbol table information and line number entries from the executable object file
--scan_libraries	-scanlibs	Scans all libraries for duplicate symbol definitions
--symbol_map=refname=defname		Specifies a symbol mapping; references to the <i>refname</i> symbol are replaced with references to the <i>defname</i> symbol
--undef_sym=symbol	-u	Adds <i>symbol</i> to the symbol table as an unresolved symbol
--unhide=pattern		Excludes symbols that match the specified <i>pattern</i> from being hidden

Table 2-27. Run-Time Environment Options

Option	Alias	Description
--arg_size=size	--args	Reserve <i>size</i> bytes for the argc/argv memory area
--far_heapsize	-farheap	Sets far heap size (words).
--fill_value=value	-f	Sets default fill value for holes within output sections
--ram_model	-cr	Initializes variables at load time
--rom_model	-c	Autoinitializes variables at run time

Table 2-28. Link-Time Optimization Options⁽¹⁾

Option	Alias	Description
--no_postlink_across_calls	-nf	Disable post-link optimizations across functions.
--postlink_exclude	-ex	Exclude files from post-link pass
--postlink_opt	-plink	Post-link optimizations (only after -z)

⁽¹⁾ See [Chapter 5](#) for details.

Table 2-29. Miscellaneous Options

Option	Alias	Description
--disable_clink	-j	Disables conditional linking of COFF object files
--linker_help	[-]help	Displays information about syntax and available options
--preferred_order=function		Prioritizes placement of functions

Table 2-29. Miscellaneous Options (continued)

Option	Alias	Description
<code>--strict_compatibility[=off on]</code>		Performs more conservative and rigorous compatibility checking of input object files. Default is on.

2.3.1 Frequently Used Options

Following are detailed descriptions of options that you will probably use frequently:

--c_src_interlist	Invokes the interlist feature, which interweaves original C/C++ source with compiler-generated assembly language. The interlisted C statements may appear to be out of sequence. You can use the interlist feature with the optimizer by combining the <code>--optimizer_interlist</code> and <code>--c_src_interlist</code> options. See Section 3.7 . The <code>--c_src_interlist</code> option can have a negative performance and/or code size impact.
--cmd_file=filename	Appends the contents of a file to the option set. You can use this option to avoid limitations on command line length or C style comments imposed by the host operating system. Use a <code>#</code> or <code>;</code> at the beginning of a line in the command file to include comments. You can also include comments by delimiting them with <code>/*</code> and <code>*/</code>. To specify options, surround hyphens with quotation marks. For example, <code>--"quiet</code>. You can use the <code>--cmd_file</code> option multiple times to specify multiple files. For instance, the following indicates that file3 should be compiled as source and file1 and file2 are <code>--cmd_file</code> files: <pre>cl2000 -v28 --cmd_file=file1 --cmd_file=file2 file3</pre>
--compile_only	Suppresses the linker and overrides the <code>--run_linker</code> option, which specifies linking. The <code>--compile_only</code> option's short form is <code>-c</code> . Use this option when you have <code>--run_linker</code> specified in the <code>C2000_C_OPTION</code> environment variable and you do not want to link. See Section 4.1.3 .
--define=name[=def]	Predefines the constant <i>name</i> for the preprocessor. This is equivalent to inserting <code>#define name def</code> at the top of each C source file. If the optional <code>[=def]</code> is omitted, the <i>name</i> is set to 1. The <code>--define</code> option's short form is <code>-D</code>. If you want to define a quoted string and keep the quotation marks, do one of the following: - For Windows, use <code>--define=name="\"string def\""</code>. For example, <code>--define=car="\"sedan\""</code> - For UNIX, use <code>--define=name="\"string def\""</code>. For example, <code>--define=car="\"sedan\""</code> - For Code Composer Studio, enter the definition in a file and include that file with the <code>--cmd_file</code> option.
--help	Displays the syntax for invoking the compiler and lists available options. If the <code>--help</code> option is followed by another option or phrase, detailed information about the option or phrase is displayed. For example, to see information about debugging options use <code>--help debug</code> .
--include_path=directory	Adds <i>directory</i> to the list of directories that the compiler searches for <code>#include</code> files. The <code>--include_path</code> option's short form is <code>-I</code> . You can use this option several times to define several directories; be sure to separate the <code>--include_path</code> options with spaces. If you do not specify a directory name, the preprocessor ignores the <code>--include_path</code> option. See Section 2.5.2.1 .
--keep_asm	Retains the assembly language output from the compiler or assembly optimizer. Normally, the compiler deletes the output assembly language file after assembly is complete. The <code>--keep_asm</code> option's short form is <code>-k</code> .

--quiet	Suppresses banners and progress information from all the tools. Only source filenames and error messages are output. The --quiet option's short form is -q.
--run_linker	Runs the linker on the specified object files. The --run_linker option and its parameters follow all other options on the command line. All arguments that follow --run_linker are passed to the linker. The --run_linker option's short form is -z. See Section 4.1 .
--skip_assembler	Compiles only. The specified source files are compiled but not assembled or linked. The --skip_assembler option's short form is -n. This option overrides --run_linker. The output is assembly language output from the compiler.
--src_interlist	Invokes the interlist feature, which interweaves optimizer comments or C/C++ source with assembly source. If the optimizer is invoked (--opt_level= <i>n</i> option), optimizer comments are interlisted with the assembly language output of the compiler, which may rearrange code significantly. If the optimizer is not invoked, C/C++ source statements are interlisted with the assembly language output of the compiler, which allows you to inspect the code generated for each C/C++ statement. The --src_interlist option implies the --keep_asm option. The --src_interlist option's short form is -s.
--tool_version	Prints the version number for each tool in the compiler. No compiling occurs.
--undefine=<i>name</i>	Undefines the predefined constant <i>name</i> . This option overrides any --define options for the specified constant. The --undefine option's short form is -U.
--verbose	Displays progress information and toolset version while compiling. Resets the --quiet option.

2.3.2 Miscellaneous Useful Options

Following are detailed descriptions of miscellaneous options:

--check_misra ={all required advisory none <i>rulespec</i> }	Displays the specified amount or type of MISRA-C documentation. The <i>rulespec</i> parameter is a comma-separated list of specifiers. See Section 6.3 for details.
--fp_reassoc ={on off}	Enables or disables the reassociation of floating-point arithmetic. If --strict_ansi is set, --fp_reassoc=off is set since reassociation of floating-point arithmetic is an ANSI violation.
--keep_unneeded_statics	Does not delete unreferenced static variables. The parser by default remarks about and then removes any unreferenced static variables. The --keep_unneeded_statics option keeps the parser from deleting unreferenced static variables and any static functions that are referenced by these variable definitions. Unreferenced static functions will still be removed.
--no_const_clink	Tells the compiler to not generate .clink directives for const global arrays. By default, these arrays are placed in a .const subsection and conditionally linked.
--misra_advisory ={error warning remark suppress}	Sets the diagnostic severity for advisory MISRA-C:2004 rules.
--misra_required ={error warning remark suppress}	Sets the diagnostic severity for required MISRA-C:2004 rules.
--preinclude = <i>filename</i>	Includes the source code of <i>filename</i> at the beginning of the compilation. This can be used to establish standard macro definitions. The filename is searched for in the directories on the include search list. The files are processed in the order in which they were specified.

--printf_support ={full nofloat minimal}	Enables support for smaller, limited versions of the printf and sprintf run-time-support functions. The valid values are: • full: Supports all format specifiers. This is the default. • nofloat: Excludes support for printing and scanning floating-point values. Supports all format specifiers except %f, %F, %g, %G, %e, and %E. • minimal: Supports the printing and scanning of integer, char, or string values without width or precision flags. Specifically, only the %, %d, %o, %c, %s, and %x format specifiers are supported There is no run-time error checking to detect if a format specifier is used for which support is not included. The --printf_support option precedes the --run_linker option, and must be used when performing the final link.
--sat_reassoc ={on off}	Enables or disables the reassociation of saturating arithmetic.

2.3.3 Run-Time Model Options

These options are specific to the TMS320C28x toolset. See the referenced sections for more information. TMS320C28x-specific assembler options are listed in [Section 2.3.10](#).

--asm_code_fill =value	Specifies fill value to fill the holes in code sections created by the assembler. You can specify a 16-bit value in decimal, octal, or hexadecimal format.
--asm_data_fill =value	Specifies fill value to fill the holes in data sections created by the assembler. You can specify a 16-bit value in decimal, octal, or hexadecimal format.
--c2xlp_src_compatible	Accepts C2xLP assembly instructions and encodes them as equivalent C28x instructions.
--cla_support	Specifies TMS320C28x Control Law Accelerator (CLA) version 0 support. This option is used to compile or assemble code written for the CLA. This option does not need any special library support when linking; the libraries used for C28x with/without FPU support should be sufficient.
--disable_dp_load_opt	Disables the compiler from optimizing redundant loads of the DP register when using DP direct addressing.
--float_support ={fpu32 fpu64}	Specifies TMS320C28x with hardware floating-point support and generates large memory model code. Using --float_support=fpu32 specifies the C28x architecture with 32-bit hardware floating-point support. Using --float_support=fpu64 specifies the C28x architecture with 64-bit hardware floating-point support.
--large_memory_model	Generates large memory model code. This forces the compiler to view the architecture as having a flat 22-bit address space. All pointers are considered to be 22-bit pointers. The main use of --large_memory_model is with C++ code to access memory beyond 16 bits. Also allows conditional compilation of 16-bit code with large memory model. Defines the LARGE_MODEL symbol and sets it to true. For more information, see Section 6.6.1 .
--no_fast_branch	Prevents the compiler from generating TMS320C28x fast branch instructions (BF). Fast branch instructions are generated by the compiler by default when possible.
--no_rpt	Prevents the compiler from generating repeat (RPT) instructions. By default, repeat instructions are generated for certain memcpy operations and certain division operations. However, repeat instructions are not interruptible.

--protect_volatile=num	Enables volatile reference protection. Pipeline conflicts may occur between non-local variables that have been declared volatile. A conflict can occur between a write to one volatile variable that is followed by a read from a different volatile variable. The <code>--protect_volatile</code> option allows at least <i>num</i> instructions to be placed between the two volatile references to ensure the write occurs before the read. The <i>num</i> is optional. If no <i>num</i> is given, the default value is 2. For example, if <code>--protect_volatile=4</code> is used, volatile writes and volatile reads are protected by at least 4 instructions. The peripheral pipeline protection hardware protects all internal peripherals and XINTF zone 1. If you connect peripherals to Xintf zone 0, 2, 6, 7 then you may need to use the <code>--protect_volatile</code> option. Hardware protection or using this option is not required for memories.
--rpt_threshold=k	Generates RPT loops that iterate <i>k</i> times or less (<i>k</i> is a constant between 0 and 256). Multiple RPT's may be generated for the same loop, if iteration count is more than <i>k</i> and if code size does not increase too much. Using this option when optimizing for code size disables RPT loop generation for loops whose iteration count can be greater than <i>k</i>.
--silicon_version=28	Generates code for the TMS320C28x architecture.
--unified_memory	Use the <code>--unified_memory</code> (<code>-mt</code>) option if your memory map is configured as a single unified space; this allows the compiler to generate RPT PREAD instructions for most memcopy calls and structure assignments. This also allows MAC instructions to be generated. The <code>--unified_memory</code> option also allows more efficient data memory instructions to be used to access switch tables.
--vcu_support[=vcu0]	Specifies support for the Viterbi, Complex Math and CRC Unit (VCU), version 0. This option is useful only if the source is in assembly code, written for the VCU. The option is ignored for C/C++ code. This option does not need any special library support at the linker; the libraries used for C28x with/without VCU support should be sufficient.

2.3.4 Symbolic Debugging and Profiling Options

The following options are used to select symbolic debugging or profiling:

--profile:power	Enables power profiling support by inserting NOPs into the frame code. These NOPs can then be instrumented by the power profiling tooling to track the power usage of functions. If the power profiling tool is not used, this option increases the cycle count of each function because of the NOPs. The <code>--profile:power</code> option also disables optimizations that cannot be handled by the power-profiler.
--symdebug:coff	Enables symbolic debugging using the alternate STABS debugging format. This may be necessary to allow debugging with older debuggers or custom tools, which do not read the DWARF format.
--symdebug:dwarf	Generates directives that are used by the C/C++ source-level debugger and enables assembly source debugging in the assembler. The <code>--symdebug:dwarf</code> option's short form is <code>-g</code>. The <code>--symdebug:dwarf</code> option disables many code generator optimizations, because they disrupt the debugger. You can use the <code>--symdebug:dwarf</code> option with the <code>--opt_level</code> (aliased as <code>-O</code>) option to maximize the amount of optimization that is compatible with debugging (see Section 3.8.1). For more information on the DWARF debug format, see <i>The DWARF Debugging Standard</i>.
--symdebug:none	Disables all symbolic debugging output. This option is not recommended; it prevents debugging and most performance analysis capabilities.

- symdebug:profile_coff** Adds the necessary debug directives to the object file which are needed by the profiler to allow function level profiling with minimal impact on optimization (when used). Using --symdebug:coff may hinder some optimizations to ensure that debug ability is maintained, while this option will not hinder optimization.
- You can set breakpoints and profile on function-level boundaries in Code Composer Studio, but you cannot single-step through code as with full debug ability.
- symdebug:skeletal** Generates as much symbolic debugging information as possible without hindering optimization. Generally, this consists of global-scope information only. This option reflects the default behavior of the compiler.

See [Section 2.3.12](#) for a list of deprecated symbolic debugging options.

2.3.5 Specifying Filenames

The input files that you specify on the command line can be C source files, C++ source files, assembly source files, or object files. The compiler uses filename extensions to determine the file type.

Extension	File Type
.asm, .abs, or .s* (extension begins with s)	Assembly source
.c	C source
.C	Depends on operating system
.cpp, .cxx, .cc	C++ source
.obj .o* .dll .so	Object

NOTE: Case Sensitivity in Filename Extensions

Case sensitivity in filename extensions is determined by your operating system. If your operating system is not case sensitive, a file with a .C extension is interpreted as a C file. If your operating system is case sensitive, a file with a .C extension is interpreted as a C++ file.

For information about how you can alter the way that the compiler interprets individual filenames, see [Section 2.3.6](#). For information about how you can alter the way that the compiler interprets and names the extensions of assembly source and object files, see [Section 2.3.9](#).

You can use wildcard characters to compile or assemble multiple files. Wildcard specifications vary by system; use the appropriate form listed in your operating system manual. For example, to compile all of the files in a directory with the extension .cpp, enter the following:

```
c12000 -v28 *.cpp
```

NOTE: No Default Extension for Source Files is Assumed

If you list a filename called example on the command line, the compiler assumes that the entire filename is example not example.c. No default extensions are added onto files that do not contain an extension.

2.3.6 Changing How the Compiler Interprets Filenames

You can use options to change how the compiler interprets your filenames. If the extensions that you use are different from those recognized by the compiler, you can use the filename options to specify the type of file. You can insert an optional space between the option and the filename. Select the appropriate option for the type of file you want to specify:

```
--asm_file=filename    for an assembly language source file
--c_file=filename       for a C source file
--cpp_file=filename     for a C++ source file
--obj_file=filename     for an object file
```

For example, if you have a C source file called file.s and an assembly language source file called assy, use the --asm_file and --c_file options to force the correct interpretation:

```
c12000 -v28 --c_file=file.s --asm_file=assy
```

You cannot use the filename options with wildcard specifications.

2.3.7 Changing How the Compiler Processes C Files

The `--cpp_default` option causes the compiler to process C files as C++ files. By default, the compiler treats files with a `.c` extension as C files. See [Section 2.3.8](#) for more information about filename extension conventions.

2.3.8 Changing How the Compiler Interprets and Names Extensions

You can use options to change how the compiler program interprets filename extensions and names the extensions of the files that it creates. The filename extension options must precede the filenames they apply to on the command line. You can use wildcard specifications with these options. An extension can be up to nine characters in length. Select the appropriate option for the type of extension you want to specify:

<code>--asm_extension=new extension</code>	for an assembly language file
<code>--c_extension=new extension</code>	for a C source file
<code>--cpp_extension=new extension</code>	for a C++ source file
<code>--listing_extension=new extension</code>	sets default extension for listing files
<code>--obj_extension=new extension</code>	for an object file

The following example assembles the file `fit.rrr` and creates an object file named `fit.o`:

```
cl2000 -v28 --asm_extension=.rrr --obj_extension=.o fit.rrr
```

The period (.) in the extension is optional. You can also write the example above as:

```
cl2000 -v28 --asm_extension=rrr --obj_extension=o fit.rrr
```

2.3.9 Specifying Directories

By default, the compiler program places the object, assembly, and temporary files that it creates into the current directory. If you want the compiler program to place these files in different directories, use the following options:

<code>--abs_directory=directory</code>	Specifies the destination directory for absolute listing files. The default is to use the same directory as the object file directory. For example: <code>cl2000 -v28 --abs_directory=d:\abso_list</code>
<code>--asm_directory=directory</code>	Specifies a directory for assembly files. For example: <code>cl2000 -v28 --asm_directory=d:\assembly</code>
<code>--list_directory=directory</code>	Specifies the destination directory for assembly listing files and cross-reference listing files. The default is to use the same directory as the object file directory. For example: <code>cl2000 -v28 --list_directory=d:\listing</code>
<code>--obj_directory=directory</code>	Specifies a directory for object files. For example: <code>cl2000 -v28 --obj_directory=d:\object</code>
<code>--output_file=filename</code>	Specifies a compilation output file name; can override <code>--obj_directory</code> . For example: <code>cl2000 -v28 output_file=transfer</code>
<code>--pp_directory=directory</code>	Specifies a preprocessor file directory for object files (default is <code>.</code>). For example: <code>cl2000 -v28 --pp_directory=d:\preproc</code>
<code>--temp_directory=directory</code>	Specifies a directory for temporary intermediate files. For example: <code>cl2000 -v28 --temp_directory=d:\temp</code>

2.3.10 Assembler Options

Following are assembler options that you can use with the compiler. For more information, see the *TMS320C28x Assembly Language Tools User's Guide*.

--absolute_listing	Generates a listing with absolute addresses rather than section-relative offsets.
--asm_define=name[=def]	Predefines the constant <i>name</i> for the assembler; produces a .set directive for a constant or a .arg directive for a string. If the optional [=def] is omitted, the <i>name</i> is set to 1. If you want to define a quoted string and keep the quotation marks, do one of the following: - For Windows, use --asm_define=name="<i>string def</i>". For example: -asm_define=car="\sedan\" - For UNIX, use --asm_define=name="<i>string def</i>". For example: --asm_define=car='"sedan"' - For Code Composer Studio, enter the definition in a file and include that file with the --cmd_file option.
--asm_dependency	Performs preprocessing for assembly files, but instead of writing preprocessed output, writes a list of dependency lines suitable for input to a standard make utility. The list is written to a file with the same name as the source file but with a .ppa extension.
--asm_includes	Performs preprocessing for assembly files, but instead of writing preprocessed output, writes a list of files included with the #include directive. The list is written to a file with the same name as the source file but with a .ppa extension.
--asm_listing	Produces an assembly listing file.
--asm_remarks	Enables additional assembly-time checking. A warning is generated if a .bss allocation size is greater than 64 words, or a 16-bit immediate operand value resides outside of the -32 768 to 65 535 range.
--asm_undefine=name	Undefines the predefined constant <i>name</i> . This option overrides any --asm_define options for the specified name.
--cdebug_asm_data	Produces C-type symbolic debugging for assembly variables defined in assembly source code using data directives. This support is for basic C types, structures, and arrays.
--copy_file=filename	Copies the specified file for the assembly module; acts like a .copy directive. The file is inserted before source file statements. The copied file appears in the assembly listing files.
--cross_reference	Produces a symbolic cross-reference in the listing file.
--flash_prefetch_warn	Need more information than "Assembler warnings for F281X BF flash prefetch issue."
--include_file=filename	Includes the specified file for the assembly module; acts like a .include directive. The file is included before source file statements. The included file does not appear in the assembly listing files.
--output_all_syms	Puts labels in the symbol table. Label definitions are written to the COFF symbol table for use with symbolic debugging.
--preproc_asm	Expands macros in an assembly file and assembles the expanded file. Expanding macros helps you to debug the assembly file. The --preproc_asm option affects only the assembly file. When --preproc_asm is used, the compiler first invokes the assembler with the --large_memory_model option to generate the macro-expanded source .exp file. Then the .exp file is assembled to generate the object file. The debugger uses the .exp file for debugging. The .exp file is an intermediate file and any update to this file will be lost. You need to make any updates to the original assembly file.
--syms_ignore_case	Makes letter case insignificant in the assembly language source files. For example, --syms_ignore_case makes the symbols ABC and abc equivalent. <i>If you do not use this option, case is significant (this is the default).</i>

2.3.11 Dynamic Linking

The C28x v??.? Code Generation Tools (CGT) support dynamic linking. For details on dynamic linking with the C28x CGT, see the *TMS320C28x Assembly Language Tools User's Guide*.

[Table 2-30](#) provides a brief summary of the linker options that are related to support for the Dynamic Linking Model in the C28x CGT.

Table 2-30. Linker Options For Dynamic Linking

Option	Description
<code>--dynamic[=exe]</code>	Specifies that the result of a link will be a lightweight dynamic executable.
<code>--dynamic=lib</code>	Specifies that the result of a link will be a dynamic library.
<code>--export=symbol</code>	Specifies that <i>symbol</i> is exported by the ELF object that is generated for this link.
<code>--fini=symbol</code>	Specifies the <i>symbol</i> name of the termination code for the output file currently being linked.
<code>--import=symbol</code>	Specifies that <i>symbol</i> is imported by the ELF object that is generated for this link.
<code>--init=symbol</code>	Specifies the <i>symbol</i> name of the initialization code for the output file currently being linked.
<code>--rpath=dir</code>	Adds a directory to the beginning of the dynamic library search path.
<code>--runpath=dir</code>	Adds a directory to the end of the dynamic library search path.
<code>--soname=string</code>	Specifies shared object name to be used to identify this ELF object to the any downstream ELF object consumers.

2.3.12 Deprecated Options

Several compiler options have been deprecated. The compiler continues to accept these options, but they are not recommended for use. Future releases of the tools will not support these options. [Table 2-31](#) lists the deprecated options and the options that have replaced them.

Table 2-31. Compiler Backwards-Compatibility Options Summary

Old Option	Effect	New Option
<code>-gp</code>	Allows function-level profiling of optimized code	<code>--symdebug:dwarf</code> or <code>-g</code>
<code>-gt</code>	Enables symbolic debugging using the alternate STABS debugging format	<code>--symdebug:coff</code>
<code>-gw</code>	Enables symbolic debugging using the DWARF debugging format	<code>--symdebug:dwarf</code> or <code>-g</code>

Additionally, the `--symdebug:profile_coff` option has been added to enable function-level profiling of optimized code with symbolic debugging using the STABS debugging format (the `--symdebug:coff` or `-gt` option).

The `--opt_for_size` option has been replaced by the `--opt_for_space` and `--opt_for_speed` options. The `--disable_pcd` and `--out_as_uout` options are now obsolete.

2.4 Controlling the Compiler Through Environment Variables

An environment variable is a system symbol that you define and assign a string to. Setting environment variables is useful when you want to run the compiler repeatedly without re-entering options, input filenames, or pathnames.

NOTE: C_OPTION and C_DIR

The C_OPTION and C_DIR environment variables are deprecated. Use the device-specific environment variables instead.

2.4.1 Setting Default Compiler Options (C2000_C_OPTION)

You might find it useful to set the compiler, assembler, and linker default options using the C2000_C_OPTION environment variable. If you do this, the compiler uses the default options and/or input filenames that you name C2000_C_OPTION every time you run the compiler.

Setting the default options with these environment variables is useful when you want to run the compiler repeatedly with the same set of options and/or input files. After the compiler reads the command line and the input filenames, it looks for the C2000_C_OPTION environment variable and processes it.

The table below shows how to set the C2000_C_OPTION environment variable. Select the command for your operating system:

Operating System	Enter
UNIX (Bourne shell)	C2000_C_OPTION=" option₁ [option₂ . . .]"; export C2000_C_OPTION
Windows	set C2000_C_OPTION= option₁ [option₂ . . .]

Environment variable options are specified in the same way and have the same meaning as they do on the command line. For example, if you want to always run quietly (the --quiet option), enable C/C++ source interlisting (the --src_interlist option), and link (the --run_linker option) for Windows, set up the C2000_C_OPTION environment variable as follows:

set C2000_C_OPTION=--quiet --src_interlist --run_linker

In the following examples, each time you run the compiler, it runs the linker. Any options following --run_linker on the command line or in C2000_C_OPTION are passed to the linker. Thus, you can use the C2000_C_OPTION environment variable to specify default compiler and linker options and then specify additional compiler and linker options on the command line. If you have set --run_linker in the environment variable and want to compile only, use the compiler --compile_only option. These additional examples assume C2000_C_OPTION is set as shown above:

```
cl2000 -v28 *.c ; compiles and links
cl2000 -v28 --compile_only *.c ; only compiles
cl2000 -v28 *.c --run_linker lnk.cmd ; compiles and links using a command file
cl2000 -v28 --compile_only *.c --run_linker lnk.cmd
; only compiles (--compile_only overrides --run_linker)
```

For details on compiler options, see [Section 2.3](#). For details on linker options, see the *Linker Description* chapter in the *TMS320C28x Assembly Language Tools User's Guide*.

2.4.2 Naming an Alternate Directory (C2000_C_DIR)

The linker uses the C2000_C_DIR environment variable to name alternate directories that contain object libraries. The command syntaxes for assigning the environment variable are:

Operating System	Enter
UNIX (Bourne shell)	C2000_C_DIR=" <i>pathname₁</i> ; <i>pathname₂</i> ;..."; export C2000_C_DIR
Windows	set C2000_C_DIR= <i>pathname₁</i> ; <i>pathname₂</i> ;...

The *pathnames* are directories that contain input files. The pathnames must follow these constraints:

- Pathnames must be separated with a semicolon.
- Spaces or tabs at the beginning or end of a path are ignored. For example, the space before and after the semicolon in the following is ignored:

```
set C2000_C_DIR=c:\path\one\to\tools ; c:\path\two\to\tools
```

- Spaces and tabs are allowed within paths to accommodate Windows directories that contain spaces. For example, the pathnames in the following are valid:

```
set C2000_C_DIR=c:\first path\to\tools;d:\second path\to\tools
```

The environment variable remains set until you reboot the system or reset the variable by entering:

Operating System	Enter
UNIX (Bourne shell)	unset C2000_C_DIR
Windows	set C2000_C_DIR=

2.5 Controlling the Preprocessor

This section describes specific features that control the preprocessor, which is part of the parser. A general description of C preprocessing is in section A12 of K&R. The C/C++ compiler includes standard C/C++ preprocessing functions, which are built into the first pass of the compiler. The preprocessor handles:

- Macro definitions and expansions
- #include files
- Conditional compilation
- Various preprocessor directives, specified in the source file as lines beginning with the # character

The preprocessor produces self-explanatory error messages. The line number and the filename where the error occurred are printed along with a diagnostic message.

2.5.1 Predefined Macro Names

The compiler maintains and recognizes the predefined macro names listed in [Table 2-32](#).

Table 2-32. Predefined C28x Macro Names

Macro Name	Description
<code>__DATE__</code> ⁽¹⁾	Expands to the compilation date in the form <i>mmm dd yyyy</i>
<code>__FILE__</code> ⁽¹⁾	Expands to the current source filename
<code>__LARGE_MODEL__</code>	Defined if large-model code is selected (the -ml option is used); otherwise, it is undefined.
<code>__LINE__</code> ⁽¹⁾	Expands to the current line number
<code>__STDC__</code> ⁽¹⁾	Defined to indicate that compiler conforms to ISO C Standard. See Section 6.1 for exceptions to ISO C conformance.
<code>__STDC_VERSION__</code>	C standard macro
<code>__TI_COMPILER_VERSION__</code>	Defined to a 7-9 digit integer, depending on if X has 1, 2, or 3 digits. The number does not contain a decimal. For example, version 3.2.1 is represented as 3002001. The leading zeros are dropped to prevent the number being interpreted as an octal.

⁽¹⁾ Specified by the ISO standard

Table 2-32. Predefined C28x Macro Names (continued)

Macro Name	Description
<code>__TI_GNU_ATTRIBUTE_SUPPORT__</code>	Defined if GCC extensions are enabled (the <code>--gcc</code> option is used); otherwise, it is undefined.
<code>__TI_STRICT_ANSI_MODE__</code>	Defined if strict ANSI/ISO mode is enabled (the <code>--strict_ansi</code> option is used); otherwise, it is undefined.
<code>__TIME__</code> ⁽¹⁾	Expands to the compilation time in the form <code>"hh:mm:ss"</code>
<code>__TMS320C2000__</code>	Defined for C28x or C27x processor
<code>__TMS320C28XX__</code>	Defined if target is C28x
<code>__TMS320C28XX_FPU32__</code>	Expands to 1 (identifies the C28x processor with 32-bit hardware floating-point support).
<code>__TMS320C28XX_FPU64__</code>	Expands to 1 (identifies the C28x processor with 64-bit hardware floating-point support).
<code>__INLINE</code>	Expands to 1 if optimization is used (<code>--opt_level</code> or <code>-O</code> option); undefined otherwise. Regardless of any optimization, always undefined when <code>--no_inlining</code> is used.

You can use the names listed in [Table 2-32](#) in the same manner as any other defined name. For example,

```
printf ( "%s %s" , __TIME__ , __DATE__ );
```

translates to a line such as:

```
printf ("%s %s" , "13:58:17" , "Jan 14 1997");
```

2.5.2 The Search Path for #include Files

The `#include` preprocessor directive tells the compiler to read source statements from another file. When specifying the file, you can enclose the filename in double quotes or in angle brackets. The filename can be a complete pathname, partial path information, or a filename with no path information.

- If you enclose the filename in double quotes (" "), the compiler searches for the file in the following directories in this order:
 - The directory of the file that contains the `#include` directive and in the directories of any files that contain that file.
 - Directories named with the `--include_path` option.
 - Directories set with the `C2000_C_DIR` environment variable.
- If you enclose the filename in angle brackets (< >), the compiler searches for the file in the following directories in this order:
 - Directories named with the `--include_path` option.
 - Directories set with the `C2000_C_DIR` environment variable.

See [Section 2.5.2.1](#) for information on using the `--include_path` option. See [Section 2.4.2](#) for more information on input file directories.

2.5.2.1 Changing the #include File Search Path (--include_path Option)

The `--include_path` option names an alternate directory that contains `#include` files. The `--include_path` option's short form is `-I`. The format of the `--include_path` option is:

```
--include_path=directory1 [--include_path= directory2 ...]
```

There is no limit to the number of `--include_path` options per invocation of the compiler; each `--include_path` option names one *directory*. In C source, you can use the `#include` directive without specifying any directory information for the file; instead, you can specify the directory information with the `--include_path` option. For example, assume that a file called `source.c` is in the current directory. The file `source.c` contains the following directive statement:

```
#include "alt.h"
```

Assume that the complete pathname for `alt.h` is:

UNIX /tools/files/alt.h
Windows c:\tools\files\alt.h

The table below shows how to invoke the compiler. Select the command for your operating system:

Operating System	Enter
UNIX	cl2000 -v28 --include_path=/tools/files source.c
Windows	cl2000 -v28 --include_path=c:\tools\files source.c

NOTE: Specifying Path Information in Angle Brackets

If you specify the path information in angle brackets, the compiler applies that information relative to the path information specified with `--include_path` options and the `C2000_C_DIR` environment variable.

For example, if you set up `C2000_C_DIR` with the following command:

```
C2000_C_DIR "/usr/include;/usr/ucb"; export C2000_C_DIR
```

or invoke the compiler with the following command:

```
cl2000 -v28 --include_path=/usr/include file.c
```

and `file.c` contains this line:

```
#include <sys/proc.h>
```

the result is that the included file is in the following path:

```
/usr/include/sys/proc.h
```

2.5.3 Generating a Preprocessed Listing File (`--preproc_only` Option)

The `--preproc_only` option allows you to generate a preprocessed version of your source file with an extension of `.pp`. The compiler's preprocessing functions perform the following operations on the source file:

- Each source line ending in a backslash (`\`) is joined with the following line.
- Trigraph sequences are expanded.
- Comments are removed.
- `#include` files are copied into the file.
- Macro definitions are processed.
- All macros are expanded.
- All other preprocessing directives, including `#line` directives and conditional compilation, are expanded.

2.5.4 Continuing Compilation After Preprocessing (`--preproc_with_compile` Option)

If you are preprocessing, the preprocessor performs preprocessing only; it does not compile your source code. To override this feature and continue to compile after your source code is preprocessed, use the `--preproc_with_compile` option along with the other preprocessing options. For example, use `--preproc_with_compile` with `--preproc_only` to perform preprocessing, write preprocessed output to a file with a `.pp` extension, and compile your source code.

2.5.5 Generating a Preprocessed Listing File With Comments (`--preproc_with_comment` Option)

The `--preproc_with_comment` option performs all of the preprocessing functions except removing comments and generates a preprocessed version of your source file with a `.pp` extension. Use the `--preproc_with_comment` option instead of the `--preproc_only` option if you want to keep the comments.

2.5.6 Generating a Preprocessed Listing File With Line-Control Information (--preproc_with_line Option)

By default, the preprocessed output file contains no preprocessor directives. To include the #line directives, use the --preproc_with_line option. The --preproc_with_line option performs preprocessing only and writes preprocessed output with line-control information (#line directives) to a file named as the source file but with a .pp extension.

2.5.7 Generating Preprocessed Output for a Make Utility (--preproc_dependency Option)

The --preproc_dependency option performs preprocessing only, but instead of writing preprocessed output, writes a list of dependency lines suitable for input to a standard make utility. If you do not supply an optional filename, the list is written to a file with the same name as the source file but with a .pp extension.

2.5.8 Generating a List of Files Included With the #include Directive (--preproc_includes Option)

The --preproc_includes option performs preprocessing only, but instead of writing preprocessed output, writes a list of files included with the #include directive. If you do not supply an optional filename, the list is written to a file with the same name as the source file but with a .pp extension.

2.5.9 Generating a List of Macros in a File (--preproc_macros Option)

The --preproc_macros option generates a list of all predefined and user-defined macros. If you do not supply an optional filename, the list is written to a file with the same name as the source file but with a .pp extension. Predefined macros are listed first and indicated by the comment /* Predefined */. User-defined macros are listed next and indicated by the source filename.

2.6 Understanding Diagnostic Messages

One of the compiler's primary functions is to report diagnostics for the source program. The new linker also reports diagnostics. When the compiler or linker detects a suspect condition, it displays a message in the following format:

"file.c", line n : diagnostic severity : diagnostic message

<i>"file.c"</i>	The name of the file involved
<i>line n :</i>	The line number where the diagnostic applies
<i>diagnostic severity</i>	The diagnostic message severity (severity category descriptions follow)
<i>diagnostic message</i>	The text that describes the problem

Diagnostic messages have an associated severity, as follows:

- A **fatal error** indicates a problem so severe that the compilation cannot continue. Examples of such problems include command-line errors, internal errors, and missing include files. If multiple source files are being compiled, any source files after the current one will not be compiled.
- An **error** indicates a violation of the syntax or semantic rules of the C/C++ language. Compilation continues, but object code is not generated.
- A **warning** indicates something that is valid but questionable. Compilation continues and object code is generated (if no errors are detected).
- A **remark** is less serious than a warning. It indicates something that is valid and probably intended, but may need to be checked. Compilation continues and object code is generated (if no errors are detected). By default, remarks are not issued. Use the --issue_remarks compiler option to enable remarks.

Diagnostics are written to standard error with a form like the following example:

```
"test.c", line 5: error: a break statement may only be used within a loop or switch
    break;
    ^
```

By default, the source line is omitted. Use the `--verbose_diagnostics` compiler option to enable the display of the source line and the error position. The above example makes use of this option.

The message identifies the file and line involved in the diagnostic, and the source line itself (with the position indicated by the `^` character) follows the message. If several diagnostics apply to one source line, each diagnostic has the form shown; the text of the source line is displayed several times, with an appropriate position indicated each time.

Long messages are wrapped to additional lines, when necessary.

You can use the `--display_error_number` command-line option to request that the diagnostic's numeric identifier be included in the diagnostic message. When displayed, the diagnostic identifier also indicates whether the diagnostic can have its severity overridden on the command line. If the severity can be overridden, the diagnostic identifier includes the suffix `-D` (for *discretionary*); otherwise, no suffix is present. For example:

```
"Test_name.c", line 7: error #64-D: declaration does not declare anything
    struct {};
    ^
"Test_name.c", line 9: error #77: this declaration has no storage class or type specifier
    xxxxx;
    ^
```

Because an error is determined to be discretionary based on the error severity associated with a specific context, an error can be discretionary in some cases and not in others. All warnings and remarks are discretionary.

For some messages, a list of entities (functions, local variables, source files, etc.) is useful; the entities are listed following the initial error message:

```
"test.c", line 4: error: more than one instance of overloaded function "f"
    matches the argument list:
    function "f(int)"
    function "f(float)"
    argument types are: (double)

    f(1.5);
    ^
```

In some cases, additional context information is provided. Specifically, the context information is useful when the front end issues a diagnostic while doing a template instantiation or while generating a constructor, destructor, or assignment operator function. For example:

```
"test.c", line 7: error: "A::A()" is inaccessible
    B x;
    ^
    detected during implicit generation of "B::B()" at line 7
```

Without the context information, it is difficult to determine to what the error refers.

2.6.1 Controlling Diagnostics

The C/C++ compiler provides diagnostic options to control compiler- and linker-generated diagnostics. The diagnostic options must be specified before the `--run_linker` option.

<code>--diag_error=num</code>	Categorizes the diagnostic identified by <i>num</i> as an error. To determine the numeric identifier of a diagnostic message, use the <code>--display_error_number</code> option first in a separate compile. Then use <code>--diag_error=num</code> to recategorize the diagnostic as an error. You can only alter the severity of discretionary diagnostics.
--------------------------------------	--

--diag_remark=num	Categorizes the diagnostic identified by <i>num</i> as a remark. To determine the numeric identifier of a diagnostic message, use the <code>--display_error_number</code> option first in a separate compile. Then use <code>--diag_remark=num</code> to recategorize the diagnostic as a remark. You can only alter the severity of discretionary diagnostics.
--diag_suppress=num	Suppresses the diagnostic identified by <i>num</i> . To determine the numeric identifier of a diagnostic message, use the <code>--display_error_number</code> option first in a separate compile. Then use <code>--diag_suppress=num</code> to suppress the diagnostic. You can only suppress discretionary diagnostics.
--diag_warning=num	Categorizes the diagnostic identified by <i>num</i> as a warning. To determine the numeric identifier of a diagnostic message, use the <code>--display_error_number</code> option first in a separate compile. Then use <code>--diag_warning=num</code> to recategorize the diagnostic as a warning. You can only alter the severity of discretionary diagnostics.
--display_error_number	Displays a diagnostic's numeric identifier along with its text. Use this option in determining which arguments you need to supply to the diagnostic suppression options (<code>--diag_suppress</code> , <code>--diag_error</code> , <code>--diag_remark</code> , and <code>--diag_warning</code>). This option also indicates whether a diagnostic is discretionary. A discretionary diagnostic is one whose severity can be overridden. A discretionary diagnostic includes the suffix -D; otherwise, no suffix is present. See Section 2.6 .
--emit_warnings_as_errors	Treats all warnings as errors. This option cannot be used with the <code>--no_warnings</code> option. The <code>--diag_remark</code> option takes precedence over this option. This option takes precedence over the <code>--diag_warning</code> option.
--issue_remarks	Issues remarks (nonserious warnings), which are suppressed by default.
--no_warnings	Suppresses warning diagnostics (errors are still issued).
--set_error_limit=num	Sets the error limit to <i>num</i> , which can be any decimal value. The compiler abandons compiling after this number of errors. (The default is 100.)
--verbose_diagnostics	Provides verbose diagnostics that display the original source with line-wrap and indicate the position of the error in the source line
--write_diagnostics_file	Produces a diagnostics information file with the same source file name with an <code>.err</code> extension. (The <code>--write_diagnostics_file</code> option is not supported by the linker.)

2.6.2 How You Can Use Diagnostic Suppression Options

The following example demonstrates how you can control diagnostic messages issued by the compiler. You control the linker diagnostic messages in a similar manner.

```
int one();
int I;
int main()
{
    switch (I){
    case 1;
        return one ();
        break;
    default:
        return 0;
        break;
    }
}
```

If you invoke the compiler with the `--quiet` option, this is the result:

```
"err.c", line 9: warning: statement is unreachable
"err.c", line 12: warning: statement is unreachable
```

Because it is standard programming practice to include break statements at the end of each case arm to avoid the fall-through condition, these warnings can be ignored. Using the `--display_error_number` option, you can find out the diagnostic identifier for these warnings. Here is the result:

```
[err.c]
"err.c", line 9: warning #111-D: statement is unreachable
"err.c", line 12: warning #111-D: statement is unreachable
```

Next, you can use the diagnostic identifier of 111 as the argument to the `--diag_remark` option to treat this warning as a remark. This compilation now produces no diagnostic messages (because remarks are disabled by default).

Although this type of control is useful, it can also be extremely dangerous. The compiler often emits messages that indicate a less than obvious problem. Be careful to analyze all diagnostics emitted before using the suppression options.

2.7 Other Messages

Other error messages that are unrelated to the source, such as incorrect command-line syntax or inability to find specified files, are usually fatal. They are identified by the symbol `>>` preceding the message.

2.8 Generating Cross-Reference Listing Information (--gen_acp_xref Option)

The `--gen_acp_xref` option generates a cross-reference listing file that contains reference information for each identifier in the source file. (The `--gen_acp_xref` option is separate from `--cross_reference`, which is an assembler rather than a compiler option.) The cross-reference listing file has the same name as the source file with a `.crl` extension.

The information in the cross-reference listing file is displayed in the following format:

sym-id name X filename line number column number

<i>sym-id</i>	An integer uniquely assigned to each identifier
<i>name</i>	The identifier name
<i>X</i>	One of the following values:
D	Definition
d	Declaration (not a definition)
M	Modification
A	Address taken
U	Used
C	Changed (used and modified in a single operation)
R	Any other kind of reference
E	Error; reference is indeterminate
<i>filename</i>	The source file
<i>line number</i>	The line number in the source file
<i>column number</i>	The column number in the source file

2.9 Generating a Raw Listing File (--gen_acp_raw Option)

The --gen_acp_raw option generates a raw listing file that can help you understand how the compiler is preprocessing your source file. Whereas the preprocessed listing file (generated with the --preproc_only, --preproc_with_comment, --preproc_with_line, and --preproc_dependency preprocessor options) shows a preprocessed version of your source file, a raw listing file provides a comparison between the original source line and the preprocessed output. The raw listing file has the same name as the corresponding source file with an .rl extension.

The raw listing file contains the following information:

- Each original source line
- Transitions into and out of include files
- Diagnostics
- Preprocessed source line if nontrivial processing was performed (comment removal is considered trivial; other preprocessing is nontrivial)

Each source line in the raw listing file begins with one of the identifiers listed in [Table 2-33](#).

Table 2-33. Raw Listing File Identifiers

Identifier	Definition
N	Normal line of source
X	Expanded line of source. It appears immediately following the normal line of source if nontrivial preprocessing occurs.
S	Skipped source line (false #if clause)
L	Change in source position, given in the following format: L <i>line number filename key</i> Where <i>line number</i> is the line number in the source file. The <i>key</i> is present only when the change is due to entry/exit of an include file. Possible values of <i>key</i> are: 1 = entry into an include file 2 = exit from an include file

The --gen_acp_raw option also includes diagnostic identifiers as defined in [Table 2-34](#).

Table 2-34. Raw Listing File Diagnostic Identifiers

Diagnostic Identifier	Definition
E	Error
F	Fatal
R	Remark
W	Warning

Diagnostic raw listing information is displayed in the following format:

<i>S filename line number column number diagnostic</i>
--

S	One of the identifiers in Table 2-34 that indicates the severity of the diagnostic
<i>filename</i>	The source file
<i>line number</i>	The line number in the source file
<i>column number</i>	The column number in the source file
<i>diagnostic</i>	The message text for the diagnostic

Diagnostics after the end of file are indicated as the last line of the file with a column number of 0. When diagnostic message text requires more than one line, each subsequent line contains the same file, line, and column information but uses a lowercase version of the diagnostic identifier. For more information about diagnostic messages, see [Section 2.6](#).

2.10 Using Inline Function Expansion

When an inline function is called, the C/C++ source code for the function is inserted at the point of the call. This is known as inline function expansion. Inline function expansion is advantageous in short functions for the following reasons:

There are several types of inline function expansion:

- Inlining with intrinsic operators (intrinsics are always inlined)
- Automatic inlining
- Definition-controlled inlining with the unguarded inline keyword
- Definition-controlled inlining with the guarded inline keyword

NOTE: Function Inlining Can Greatly Increase Code Size

Expanding functions inline increases code size, especially inlining a function that is called in a number of places. Function inlining is optimal for functions that are called only from a small number of places and for small functions.

2.10.1 Inlining Intrinsic Operators

There are many intrinsic operators for the C28x. All of them are automatically inlined by the compiler. The inlining happens automatically whether or not you use the optimizer.

For details about intrinsics, and a list of the intrinsics, see [Section 7.4.5](#).

2.10.2 Unguarded Definition-Controlled Inlining

The inline keyword specifies that a function is expanded inline at the point at which it is called rather than by using standard calling procedures. The compiler performs inline expansion of functions declared with the inline keyword.

You must invoke the optimizer with any --opt_level option (--opt_level=0, --opt_level=1, --opt_level=2, or --opt_level=3) to turn on definition-controlled inlining. Automatic inlining is also turned on when using --opt_level=3.

The --no_inlining option turns off definition-controlled inlining. This option is useful when you need a certain level of optimization but do not want definition-controlled inlining.

[Example 2-1](#) shows usage of the inline keyword, where the function call is replaced by the code in the called function.

Example 2-1. Using the Inline Keyword

```
inline float volume_sphere(float r)
{
    return 4.0/3.0 * PI * r * r * r;
}
int foo(...)
{
    ...
    volume = volume_sphere(radius);
    ...
}
```

2.10.3 Guarded Inlining and the `_INLINE` Preprocessor Symbol

When declaring a function in a header file as static inline, you must follow additional procedures to avoid a potential code size increase when inlining is turned off with `--no_inlining` or the optimizer is not run.

To prevent a static inline function in a header file from causing an increase in code size when inlining gets turned off, use the following procedure. This allows external-linkage when inlining is turned off; thus, only one function definition will exist throughout the object files.

- Prototype a static inline version of the function. Then, prototype an alternative, nonstatic, externally-linked version of the function. Conditionally preprocess these two prototypes with the `_INLINE` preprocessor symbol, as shown in [Example 2-2](#).
- Create an identical version of the function definition in a `.c` or `.cpp` file, as shown in [Example 2-3](#).

In the following examples there are two definitions of the `strlen` function. The first ([Example 2-2](#)), in the header file, is an inline definition. This definition is enabled and the prototype is declared as static inline only if `_INLINE` is true (`_INLINE` is automatically defined for you when the optimizer is used and `--no_inlining` is not specified).

The second definition (see [Example 2-3](#)) for the library, ensures that the callable version of `strlen` exists when inlining is disabled. Since this is not an inline function, the `_INLINE` preprocessor symbol is undefined (`#undef`) before `string.h` is included to generate a noninline version of `strlen`'s prototype.

Example 2-2. Header File `string.h`

```

/*****
/* string.h vx.xx
/* Copyright (c) 1993-2006 Texas Instruments Incorporated
/* Excerpted ...
/*****
#ifdef _INLINE
#define _IDECL static inline
#else
#define _IDECL extern _CODE_ACCESS
#endif

_IDECL size_t strlen(const char *_string);

#ifdef _INLINE
/*****
/* strlen
/*****
static inline size_t strlen(const char *string)
{
    size_t    n = (size_t)-1;
    const char *s = string - 1;

    do n++; while (*++s);
    return n
}

#endif

```

Example 2-3. Library Definition File

```

/*****
/*  strlen
*****/
#undef _INLINE

#include <string>
_CODE_ACCESS size_t strlen(const char * string)
{
    size_t    n = (size_t)-1;
    const char *s = string - 1;

    do n++; while (*++s);
    return n;
}

```

2.11 Using Interlist

The compiler tools include a feature that interlists C/C++ source statements into the assembly language output of the compiler. The interlist feature enables you to inspect the assembly code generated for each C statement. The interlist behaves differently, depending on whether or not the optimizer is used, and depending on which options you specify.

The easiest way to invoke the interlist feature is to use the `--c_src_interlist` option. To compile and run the interlist on a program called `function.c`, enter:

```
c12000 -v28 --c_src_interlist function
```

The `--c_src_interlist` option prevents the compiler from deleting the interlisted assembly language output file. The output assembly file, `function.asm`, is assembled normally.

When you invoke the interlist feature without the optimizer, the interlist runs as a separate pass between the code generator and the assembler. It reads both the assembly and C/C++ source files, merges them, and writes the C/C++ statements into the assembly file as comments.

Using the `--c_src_interlist` option can cause performance and/or code size degradation.

[Example 2-4](#) shows a typical interlisted assembly file.

For more information about using the interlist feature with the optimizer, see [Section 3.7](#).

2.12 Enabling Entry Hook and Exit Hook Functions

An entry hook is a routine that is called upon entry to each function in the program. An exit hook is a routine that is called upon exit of each function. Applications for hooks include debugging, trace, profiling, and stack overflow checking.

Entry and exit hooks are enabled using the following options:

--entry_hook[=<i>name</i>]	Enables entry hooks. If specified, the hook function is called <i>name</i> . Otherwise, the default entry hook function name is <code>__entry_hook</code> .
--entry_parm{=<i>name</i> address none}	Specify the parameters to the hook function. The name parameter specifies that the name of the calling function is passed to the hook function as an argument. In this case the signature for the hook function is: <code>void hook(const char *name);</code> The address parameter specifies that the address of the calling function is passed to the hook function. In this case the signature for the hook function is: <code>void hook(void (*addr)());</code> The none parameter specifies that the hook is called with no parameters. This is the default. In this case the signature for the hook function is: <code>void hook(void);</code>
--exit_hook[=<i>name</i>]	Enables exit hooks. If specified, the hook function is called <i>name</i> . Otherwise, the default exit hook function name is <code>__exit_hook</code> .
--exit_parm{=<i>name</i> address none}	Specify the parameters to the hook function. The name parameter specifies that the name of the calling function is passed to the hook function as an argument. In this case the signature for the hook function is: <code>void hook(const char *name);</code> The address parameter specifies that the address of the calling function is passed to the hook function. In this case the signature for the hook function is: <code>void hook(void (*addr)());</code> The none parameter specifies that the hook is called with no parameters. This is the default. In this case the signature for the hook function is: <code>void hook(void);</code>

The presence of the hook options creates an implicit declaration of the hook function with the given signature. If a declaration or definition of the hook function appears in the compilation unit compiled with the options, it must agree with the signatures listed above.

In C++, the hooks are declared extern "C". Thus you can define them in C (or assembly) without being concerned with name mangling.

Hooks can be declared inline, in which case the compiler tries to inline them using the same criteria as other inline functions.

Entry hooks and exit hooks are independent. You can enable one but not the other, or both. The same function can be used as both the entry and exit hook.

You must take care to avoid recursive calls to hook functions. The hook function should not call any function which itself has hook calls inserted. To help prevent this, hooks are not generated for inline functions, or for the hook functions themselves.

You can use the `--remove_hooks_when_inlining` option to remove entry/exit hooks for functions that are auto-inlined by the optimizer.

See [Section 6.10.12](#) for information about the `NO_HOOKS` pragma.

Optimizing Your Code

The compiler tools can perform many optimizations to improve the execution speed and reduce the size of C and C++ programs by simplifying loops, software pipelining, rearranging statements and expressions, and allocating variables into registers.

This chapter describes how to invoke different levels of optimization and describes which optimizations are performed at each level. This chapter also describes how you can use the Interlist feature when performing optimization and how you can profile or debug optimized code.

Topic	Page
3.1 Invoking Optimization	50
3.2 Performing File-Level Optimization (--opt_level=3 option)	51
3.3 Performing Program-Level Optimization (--program_level_compile and --opt_level=3 options)	52
3.4 Link-Time Optimization (--opt_level=4 Option)	54
3.5 Special Considerations When Using Optimization	55
3.6 Automatic Inline Expansion (--auto_inline Option)	57
3.7 Using the Interlist Feature With Optimization	57
3.8 Debugging and Profiling Optimized Code	60
3.9 Controlling Code Size Versus Speed	61
3.10 Increasing Code-Size Optimizations (--opt_for_size Option)	62
3.11 What Kind of Optimization Is Being Performed?	64

3.1 Invoking Optimization

The C/C++ compiler is able to perform various optimizations. High-level optimizations are performed in the optimizer and low-level, target-specific optimizations occur in the code generator. Use high-level optimization levels, such as `--opt_level=2` and `--opt_level=3`, to achieve optimal code.

The easiest way to invoke optimization is to use the compiler program, specifying the `--opt_level=n` option on the compiler command line. You can use `-On` to alias the `--opt_level` option. The *n* denotes the level of optimization (0, 1, 2, and 3), which controls the type and degree of optimization.

- **--opt_level=0 or -O0**

- Performs control-flow-graph simplification
- Allocates variables to registers
- Performs loop rotation
- Eliminates unused code
- Simplifies expressions and statements
- Expands calls to functions declared inline

- **--opt_level=1 or -O1**

Performs all `--opt_level=0` (-O0) optimizations, plus:

- Performs local copy/constant propagation
- Removes unused assignments
- Eliminates local common expressions

- **--opt_level=2 or -O2**

Performs all `--opt_level=1` (-O1) optimizations, plus:

- Performs loop optimizations
- Eliminates global common subexpressions
- Eliminates global unused assignments
- Performs loop unrolling

The optimizer uses `--opt_level=2` (-O2) as the default if you use `--opt_level` (-O) without an optimization level.

- **--opt_level=3 or -O3**

Performs all `--opt_level=2` (-O2) optimizations, plus:

- Removes all functions that are never called
- Simplifies functions with return values that are never used
- Inlines calls to small functions
- Reorders function declarations; the called functions attributes are known when the caller is optimized
- Propagates arguments into function bodies when all calls pass the same value in the same argument position
- Identifies file-level variable characteristics

If you use `--opt_level=3` (-O3), see [Section 3.2](#) and [Section 3.3](#) for more information.

- **--opt_level=4 or -O4**

Performs link-time optimization. See [Section 3.4](#) for details.

The levels of optimizations described above are performed by the stand-alone optimization pass. The code generator performs several additional optimizations, particularly processor-specific optimizations. It does so regardless of whether you invoke the optimizer. These optimizations are always enabled, although they are more effective when the optimizer is used.

3.2 Performing File-Level Optimization (--opt_level=3 option)

The --opt_level=3 option (aliased as the -O3 option) instructs the compiler to perform file-level optimization. You can use the --opt_level=3 option alone to perform general file-level optimization, or you can combine it with other options to perform more specific optimizations. The options listed in [Table 3-1](#) work with --opt_level=3 to perform the indicated optimization:

Table 3-1. Options That You Can Use With --opt_level=3

If You ...	Use this Option	See
Have files that redeclare standard library functions	--std_lib_func_defined --std_lib_func_redefined	Section 3.2.1
Want to create an optimization information file	--gen_opt_level= <i>n</i>	Section 3.2.2
Want to compile multiple source files	--program_level_compile	Section 3.3

3.2.1 Controlling File-Level Optimization (--std_lib_func_def Options)

When you invoke the compiler with the --opt_level=3 option, some of the optimizations use known properties of the standard library functions. If your file redeclares any of these standard library functions, these optimizations become ineffective. Use [Table 3-2](#) to select the appropriate file-level optimization option.

Table 3-2. Selecting a File-Level Optimization Option

If Your Source File...	Use this Option
Declares a function with the same name as a standard library function	--std_lib_func_redefined
Contains but does not alter functions declared in the standard library	--std_lib_func_defined
Does not alter standard library functions, but you used the --std_lib_func_redefined or --std_lib_func_defined option in a command file or an environment variable. The --std_lib_func_not_defined option restores the default behavior of the optimizer.	--std_lib_func_not_defined

3.2.2 Creating an Optimization Information File (--gen_opt_info Option)

When you invoke the compiler with the --opt_level=3 option, you can use the --gen_opt_info option to create an optimization information file that you can read. The number following the option denotes the level (0, 1, or 2). The resulting file has an .nfo extension. Use [Table 3-3](#) to select the appropriate level to append to the option.

Table 3-3. Selecting a Level for the --gen_opt_info Option

If you...	Use this option
Do not want to produce an information file, but you used the --gen_opt_level=1 or --gen_opt_level=2 option in a command file or an environment variable. The --gen_opt_level=0 option restores the default behavior of the optimizer.	--gen_opt_info=0
Want to produce an optimization information file	--gen_opt_info=1
Want to produce a verbose optimization information file	--gen_opt_info=2

3.3 Performing Program-Level Optimization (--program_level_compile and --opt_level=3 options)

You can specify program-level optimization by using the `--program_level_compile` option with the `--opt_level=3` option (aliased as `-O3`). With program-level optimization, all of your source files are compiled into one intermediate file called a *module*. The module moves to the optimization and code generation passes of the compiler. Because the compiler can see the entire program, it performs several optimizations that are rarely applied during file-level optimization:

- If a particular argument in a function always has the same value, the compiler replaces the argument with the value and passes the value instead of the argument.
- If a return value of a function is never used, the compiler deletes the return code in the function.
- If a function is not called directly or indirectly by `main()`, the compiler removes the function.

To see which program-level optimizations the compiler is applying, use the `--gen_opt_level=2` option to generate an information file. See [Section 3.2.2](#) for more information.

In Code Composer Studio, when the `--program_level_compile` option is used, C and C++ files that have the same options are compiled together. However, if any file has a file-specific option that is not selected as a project-wide option, that file is compiled separately. For example, if every C and C++ file in your project has a different set of file-specific options, each is compiled separately, even though program-level optimization has been specified. To compile all C and C++ files together, make sure the files do not have file-specific options. Be aware that compiling C and C++ files together may not be safe if previously you used a file-specific option.

Compiling Files With the --program_level_compile and --keep_asm Options

NOTE: If you compile all files with the `--program_level_compile` and `--keep_asm` options, the compiler produces only one `.asm` file, not one for each corresponding source file.

3.3.1 Controlling Program-Level Optimization (--call_assumptions Option)

You can control program-level optimization, which you invoke with `--program_level_compile --opt_level=3`, by using the `--call_assumptions` option. Specifically, the `--call_assumptions` option indicates if functions in other modules can call a module's external functions or modify a module's external variables. The number following `--call_assumptions` indicates the level you set for the module that you are allowing to be called or modified. The `--opt_level=3` option combines this information with its own file-level analysis to decide whether to treat this module's external function and variable declarations as if they had been declared static. Use [Table 3-4](#) to select the appropriate level to append to the `--call_assumptions` option.

Table 3-4. Selecting a Level for the --call_assumptions Option

If Your Module ...	Use this Option
Has functions that are called from other modules and global variables that are modified in other modules	<code>--call_assumptions=0</code>
Does not have functions that are called by other modules but has global variables that are modified in other modules	<code>--call_assumptions=1</code>
Does not have functions that are called by other modules or global variables that are modified in other modules	<code>--call_assumptions=2</code>
Has functions that are called from other modules but does not have global variables that are modified in other modules	<code>--call_assumptions=3</code>

In certain circumstances, the compiler reverts to a different `--call_assumptions` level from the one you specified, or it might disable program-level optimization altogether. [Table 3-5](#) lists the combinations of `--call_assumptions` levels and conditions that cause the compiler to revert to other `--call_assumptions` levels.

Table 3-5. Special Considerations When Using the --call_assumptions Option

If Your Option is...	Under these Conditions...	Then the --call_assumptions Level...
Not specified	The --opt_level=3 optimization level was specified	Defaults to --call_assumptions=2
Not specified	The compiler sees calls to outside functions under the --opt_level=3 optimization level	Reverts to --call_assumptions=0
Not specified	Main is not defined	Reverts to --call_assumptions=0
--call_assumptions=1 or --call_assumptions=2	No function has main defined as an entry point and functions are not identified by the FUNC_EXT_CALLED pragma	Reverts to --call_assumptions=0
--call_assumptions=1 or --call_assumptions=2	No interrupt function is defined	Reverts to --call_assumptions=0
--call_assumptions=1 or --call_assumptions=2	Functions are identified by the FUNC_EXT_CALLED pragma	Remains --call_assumptions=1 or --call_assumptions=2
--call_assumptions=3	Any condition	Remains --call_assumptions=3

In some situations when you use --program_level_compile and --opt_level=3, you *must* use a --call_assumptions option or the FUNC_EXT_CALLED pragma. See [Section 3.3.2](#) for information about these situations.

3.3.2 Optimization Considerations When Mixing C/C++ and Assembly

If you have any assembly functions in your program, you need to exercise caution when using the --program_level_compile option. The compiler recognizes only the C/C++ source code and not any assembly code that might be present. Because the compiler does not recognize the assembly code calls and variable modifications to C/C++ functions, the --program_level_compile option optimizes out those C/C++ functions. To keep these functions, place the FUNC_EXT_CALLED pragma (see [Section 6.10.8](#)) before any declaration or reference to a function that you want to keep.

Another approach you can take when you use assembly functions in your program is to use the --call_assumptions=*n* option with the --program_level_compile and --opt_level=3 options (see [Section 3.3.1](#)).

In general, you achieve the best results through judicious use of the FUNC_EXT_CALLED pragma in combination with --program_level_compile --opt_level=3 and --call_assumptions=1 or --call_assumptions=2.

If any of the following situations apply to your application, use the suggested solution:

Situation — Your application consists of C/C++ source code that calls assembly functions. Those assembly functions do not call any C/C++ functions or modify any C/C++ variables.

Solution — Compile with --program_level_compile --opt_level=3 --call_assumptions=2 to tell the compiler that outside functions do not call C/C++ functions or modify C/C++ variables. See [Section 3.3.1](#) for information about the --call_assumptions=2 option.

If you compile with the --program_level_compile --opt_level=3 options only, the compiler reverts from the default optimization level (--call_assumptions=2) to --call_assumptions=0. The compiler uses --call_assumptions=0, because it presumes that the calls to the assembly language functions that have a definition in C/C++ may call other C/C++ functions or modify C/C++ variables.

Situation — Your application consists of C/C++ source code that calls assembly functions. The assembly language functions do not call C/C++ functions, but they modify C/C++ variables.

Solution — Try both of these solutions and choose the one that works best with your code:

- Compile with --program_level_compile --opt_level=3 --call_assumptions=1.
- Add the volatile keyword to those variables that may be modified by the assembly functions and compile with --program_level_compile --opt_level=3 --call_assumptions=2.

See [Section 3.3.1](#) for information about the --call_assumptions=*n* option.

Situation — Your application consists of C/C++ source code and assembly source code. The assembly functions are interrupt service routines that call C/C++ functions; the C/C++ functions that the assembly functions call are never called from C/C++. These C/C++ functions act like main: they function as entry points into C/C++.

Solution — Add the volatile keyword to the C/C++ variables that may be modified by the interrupts. Then, you can optimize your code in one of these ways:

- You achieve the best optimization by applying the `FUNC_EXT_CALLED` pragma to all of the entry-point functions called from the assembly language interrupts, and then compiling with `--program_level_compile --opt_level=3 --call_assumptions=2`. *Be sure that you use the pragma with all of the entry-point functions.* If you do not, the compiler might remove the entry-point functions that are not preceded by the `FUNC_EXT_CALLED` pragma.
- Compile with `--program_level_compile --opt_level=3 --call_assumptions=3`. Because you do not use the `FUNC_EXT_CALLED` pragma, you must use the `--call_assumptions=3` option, which is less aggressive than the `--call_assumptions=2` option, and your optimization may not be as effective.

Keep in mind that if you use `--program_level_compile --opt_level=3` without additional options, the compiler removes the C functions that the assembly functions call. Use the `FUNC_EXT_CALLED` pragma to keep these functions.

3.4 Link-Time Optimization (`--opt_level=4` Option)

Link-time optimization is an optimization mode that allows the compiler to have visibility of the entire program. The optimization occurs at link-time instead of compile-time like other optimization levels.

Link-time optimization is invoked by using the `--opt_level=4` option. This option must be used in both the compilation and linking steps. At compile time, the compiler embeds an intermediate representation of the file being compiled into the resulting object file. At link-time this representation is extracted from every object file which contains it, and is used to optimize the entire program.

Link-time optimization provides the same optimization opportunities as program level optimization (Section 3.3), with the following benefits:

- Each source file can be compiled separately. One issue with program-level compilation is that it requires all source files to be passed to the compiler at one time. This often requires significant modification of a customer's build process. With link-time optimization, all files can be compiled separately.
- References to C/C++ symbols from assembly are handled automatically. When doing program-level compilation, the compiler has no knowledge of whether a symbol is referenced externally. When performing link-time optimization during a final link, the linker can determine which symbols are referenced externally and prevent eliminating them during optimization.
- Third party object files can participate in optimization. If a third party vendor provides object files that were compiled with the `--opt_level=4` option, those files participate in optimization along with user-generated files. This includes object files supplied as part of the TI run-time support. Object files that were not compiled with `--opt_level=4` can still be used in a link that is performing link-time optimization. Those files that were not compiled with `--opt_level=4` do not participate in the optimization.
- Source files can be compiled with different option sets. With program-level compilation, all source files must be compiled with the same option set. With link-time optimization files can be compiled with different options. If the compiler determines that two options are incompatible, it issues an error.

3.4.1 Option Handling

When performing link-time optimization, source files can be compiled with different options. When possible, the options that were used during compilation are used during link-time optimization. For options which apply at the program level, `--auto_inline` for instance, the options used to compile the main function are used. If main is not included in link-time optimization, the option set used for the first object file specified on the command line is used. Some options, `--opt_for_speed` for instance, can effect a wide range of optimizations. For these options, the program-level behavior is derived from main, and the local optimizations are obtained from the original option set.

Some options are incompatible when performing link-time optimization. These are usually options which conflict on the command line as well, but can also be options that cannot be handled during link-time optimization.

3.4.2 Incompatible Types

During a normal link, the linker does not check to make sure that each symbol was declared with the same type in different files. This is not necessary during a normal link. When performing link-time optimization, however, the linker must ensure that all symbols are declared with compatible types in different source files. If a symbol is found which has incompatible types, an error is issued. The rules for compatible types are derived from the C and C++ standards.

3.5 Special Considerations When Using Optimization

The compiler is designed to improve your ANSI/ISO-conforming C and C++ programs while maintaining their correctness. However, when you write code for optimization, you should note the special considerations discussed in the following sections to ensure that your program performs as you intend.

3.5.1 Use Caution With *asm* Statements in Optimized Code

You must be extremely careful when using *asm* (inline assembly) statements in optimized code. The compiler rearranges code segments, uses registers freely, and can completely remove variables or expressions. Although the compiler never optimizes out an *asm* statement (except when it is unreachable), the surrounding environment where the assembly code is inserted can differ significantly from the original C/C++ source code.

It is usually safe to use *asm* statements to manipulate hardware controls such as interrupt masks, but *asm* statements that attempt to interface with the C/C++ environment or access C/C++ variables can have unexpected results. After compilation, check the assembly output to make sure your *asm* statements are correct and maintain the integrity of the program.

3.5.2 Use the *Volatile* Keyword for Necessary Memory Accesses

The compiler analyzes data flow to avoid memory accesses whenever possible. If you have code that depends on memory accesses exactly as written in the C/C++ code, you must use the *volatile* keyword to identify these accesses. The compiler does not optimize out any references to volatile variables.

In the following example, the loop waits for a location to be read as 0xFF:

```
unsigned int *ctrl;
while (*ctrl !=0xFF);
```

In this example, **ctrl* is a loop-invariant expression, so the loop is optimized down to a single memory read. To correct this, declare *ctrl* as:

```
volatile unsigned int *ctrl
```

3.5.2.1 Use Caution When Accessing Aliased Variables

Aliasing occurs when a single object can be accessed in more than one way, such as when two pointers point to the same object or when a pointer points to a named object. Aliasing can disrupt optimization because any indirect reference can refer to another object. The compiler analyzes the code to determine where aliasing can and cannot occur, then optimizes as much as possible while still preserving the correctness of the program. The compiler behaves conservatively.

The compiler assumes that if the address of a local variable is passed to a function, the function might change the local by writing through the pointer, but that it will not make its address available for use elsewhere after returning. For example, the called function cannot assign the local's address to a global variable or return it. In cases where this assumption is invalid, use the *-ma* compiler option to force the compiler to assume worst-case aliasing. In worst-case aliasing, any indirect reference (that is, using a pointer) can refer to such a variable.

3.5.2.2 Use the `--aliased_variables` Option to Indicate That the Following Technique Is Used

The compiler, when invoked with optimization, assumes that any variable whose address is passed as an argument to a function will not be subsequently modified by an alias set up in the called function. Examples include:

- Returning the address from a function
- Assigning the address to a global

If you use aliases like this in your code, you must use the `--aliased_variables` option when you are optimizing your code. For example, if your code is similar to this, use the `--aliased_variables` option:

```
int *glob_ptr;

g()
{
    int x = 1;
    int *p = f(&x);

    *p      = 5; /* p aliases x */
    *glob_ptr = 10; /* glob_ptr aliases x */

    h(x);
}

int *f(int *arg)
{
    glob_ptr = arg;
    return arg;
}
```

3.5.2.3 On FPU Targets Only: Use `restrict` Keyword to Indicate That Pointers Are Not Aliased

On FPU targets, with `--opt_level=2`, the optimizer performs dependency analysis. To help the compiler determine memory dependencies, you can qualify a pointer, reference, or array with the `restrict` keyword. The `restrict` keyword is a type qualifier that can be applied to pointers, references, and arrays. Its use represents a guarantee by the programmer that within the scope of the pointer declaration the object pointed to can be accessed only by that pointer. Any violation of this guarantee renders the program undefined. This practice helps the compiler optimize certain sections of code because aliasing information can be more easily determined. This can improve performance and code size, as more FPU operations can be parallelized.

As shown in [Example 3-1](#) and [Example 3-2](#) you can use the `restrict` keyword to tell the compiler that `a` and `b` never point to the same object in `foo`. Furthermore, the compiler is assured that the objects pointed to by `a` and `b` do not overlap in memory.

Example 3-1. Use of the `restrict` Type Qualifier With Pointers

```
void foo(float * restrict a, float * restrict b)
{
    /* foo's code here */
}
```

Example 3-2. Use of the `restrict` Type Qualifier With Pointers

```
void foo(float c[restrict], float d[restrict])
{
    /* foo's code here */
}
```

3.6 Automatic Inline Expansion (--auto_inline Option)

When optimizing with the --opt_level=3 option (aliased as -O3), the compiler automatically inlines small functions. A command-line option, --auto_inline=size, specifies the size threshold. Any function larger than the size threshold is not automatically inlined. You can use the --auto_inline=size option in the following ways:

- If you set the *size* parameter to 0 (--auto_inline=0), automatic inline expansion is disabled.
- If you set the *size* parameter to a nonzero integer, the compiler uses this size threshold as a limit to the size of the functions it automatically inlines. The compiler multiplies the number of times the function is inlined (plus 1 if the function is externally visible and its declaration cannot be safely removed) by the size of the function.

The compiler inlines the function only if the result is less than the size parameter. The compiler measures the size of a function in arbitrary units; however, the optimizer information file (created with the --gen_opt_level=1 or --gen_opt_level=2 option) reports the size of each function in the same units that the --auto_inline option uses.

The --auto_inline=size option controls only the inlining of functions that are not explicitly declared as inline. If you do not use the --auto_inline=size option, the compiler inlines very small functions.

Optimization Level 3 and Inlining

NOTE: In order to turn on automatic inlining, you must use the --opt_level=3 option. If you desire the --opt_level=3 optimizations, but not automatic inlining, use --auto_inline=0 with the --opt_level=3 option.

Inlining and Code Size

NOTE: Expanding functions inline increases code size, especially inlining a function that is called in a number of places. Function inlining is optimal for functions that are called only from a small number of places and for small functions. To prevent increases in code size because of inlining, use the --auto_inline=0 and --no_inlining options. These options, used together, cause the compiler to inline intrinsics only.

3.7 Using the Interlist Feature With Optimization

You control the output of the interlist feature when compiling with optimization (the --opt_level=*n* or -On option) with the --optimizer_interlist and --c_src_interlist options.

- The --optimizer_interlist option interlists compiler comments with assembly source statements.
- The --c_src_interlist and --optimizer_interlist options together interlist the compiler comments and the original C/C++ source with the assembly code.

When you use the --optimizer_interlist option with optimization, the interlist feature does *not* run as a separate pass. Instead, the compiler inserts comments into the code, indicating how the compiler has rearranged and optimized the code. These comments appear in the assembly language file as comments starting with ;**. The C/C++ source code is not interlisted, unless you use the --c_src_interlist option also.

The interlist feature can affect optimized code because it might prevent some optimization from crossing C/C++ statement boundaries. Optimization makes normal source interlisting impractical, because the compiler extensively rearranges your program. Therefore, when you use the --optimizer_interlist option, the compiler writes reconstructed C/C++ statements.

[Example 3-4](#) shows a function that has been compiled with optimization (--opt_level=2) and the --optimizer_interlist option. The assembly file contains compiler comments interlisted with assembly code.

Impact on Performance and Code Size

NOTE: The --c_src_interlist option can have a negative effect on performance and code size.

When you use the `--c_src_interlist` and `--optimizer_interlist` options with optimization, the compiler inserts its comments and the interlist feature runs before the assembler, merging the original C/C++ source into the assembly file.

[Example 3-5](#) shows the function from [Example 3-4](#) compiled with the optimization (`--opt_level=2`) and the `-c_src_interlist` and `--optimizer_interlist` options. The assembly file contains compiler comments and C source interlisted with assembly code.

Example 3-3. C Code for Interlist Illustration

```
int copy (char *str, const char *s, int n)
{
    int i;

    for (i = 0; i < n; i ++)
        *str++ = *s++;
}
```

Example 3-4. The Function From [Example 3-3](#) Compiled With the `-O2` and `--optimizer_interlist` Options

```
*****
/*
; * FNAME: _copy                      FR SIZE: 0          *
; *                                  *
; * FUNCTION ENVIRONMENT              *
; *                                  *
; * FUNCTION PROPERTIES               *
; *                                  *
; *                                0 Parameter, 0 Auto, 0 SOE *
; *                                  *
*****

_copy:
;*** 6 ----- if ( n <= 0 ) goto g4;
; CMPB      AL,#0                      ; |6|
; B         L2,LEQ                     ; |6|
; ; branch occurs ; |6|
; *** ----- #pragma MUST_ITERATE(1, 4294967295, 1)
; *** ----- L$1 = n-1;
; ADDB      AL,#-1
; MOVZ      AR6,AL
L1:
;*** -----g3:
;*** 7 ----- *str++ = *s++;
;*** 7 ----- if ( (--L$1) != (-1) ) goto g3;
; MOV       AL,*XAR5++                 ; |7|
; MOV       *XAR4++,AL                 ; |7|
; BANZ      L1,AR6--
; ; branch occurs ; |7|
; *** -----g4:
; *** ----- return;
L2:
; LRETR
; ; return occurs
```

Example 3-5. The Function From [Example 3-3](#) Compiled with the --opt_level=2, --optimizer_interlist, and -c_src_interlist Options

```

;-----
; 2 | int copy (char *str, const char *s, int n)
;-----

,*****
,* FNAME: _copy                      FR SIZE:  0          *
,*                                  *
,* FUNCTION ENVIRONMENT              *
,*                                  *
,* FUNCTION PROPERTIES               *
,* FUNCTION PROPERTIES               *
,*                                  *
,*                                0 Parameter,  0 Auto,  0 SOE *
,*****

_copy
,* AR4  assigned to _str
,* AR5  assigned to _s
,* AL   assigned to _n
,* AL   assigned to _n
,* AR5  assigned to _s
,* AR4  assigned to _str
,* AR6  assigned to L$1
,*** 6 ----- if ( n <= 0 ) goto g4;
;-----
; 4 | int i;
;-----
;-----
; 6 | for (i = 0; i < n; i++)
;-----
      CMPB      AL,#0              ; |6|
      B         L2,LEQ             ; |6|
      ; branch occurs ; |6|
,*** ----- #pragma MUST_ITERATE(1, 4294967295, 1)
,*** ----- L$1 = n-1;
      ADDB      AL,#-1
      MOVZ      AR6,AL
      NOP
L1:
,*** 7 ----- *str++ = *s++;
,*** 7 ----- if ( (--L$1) != (-1) ) goto g3;
;-----
; 7 | *str++ = *s++;
;-----
      MOV       AL,*XAR5++         ; |7|
      MOV       *XAR4++,AL         ; |7|
      BAZ       L1,AR6--
      ; branch occurs ; |7|
,*** -----g4:
,*** ----- return;
L2:
      LRETR
      ; return occurs

```

3.8 Debugging and Profiling Optimized Code

Debugging fully optimized code is not recommended, because the compiler's extensive rearrangement of code and the many-to-many allocation of variables to registers often make it difficult to correlate source code with object code. Profiling code that has been built with the `--symdebug:dwarf` (aliased as `-g`) option or the `--symdebug:coff` option (STABS debug) is not recommended either, because these options can significantly degrade performance. To remedy these problems, you can use the options described in the following sections to optimize your code in such a way that you can still debug or profile the code.

3.8.1 Debugging Optimized Code (`--symdebug:dwarf`, `--symdebug:coff`, and `--opt_level` Options)

To debug optimized code, use the `--opt_level` (aliased as `-O`) option in conjunction with one of the symbolic debugging options (`--symdebug:dwarf` or `--symdebug:coff`). The symbolic debugging options generate directives that are used by the C/C++ source-level debugger, but they disable many compiler optimizations. When you use the `--opt_level` option (which invokes optimization) with the `--symdebug:dwarf` or `--symdebug:coff` option, you turn on the maximum amount of optimization that is compatible with debugging.

If you want to use symbolic debugging and still generate fully optimized code, use the `--optimize_with_debug` option. This option reenables the optimizations disabled by `--symdebug:dwarf` or `--symdebug:coff`. However, if you use the `--optimize_with_debug` option, portions of the debugger's functionality will be unreliable.

If you are having trouble debugging loops in your code, you can use the `--disable_software_pipelining` option to turn off software pipelining. See for more information.

Symbolic Debugging Options Affect Performance and Code Size

NOTE: Using the `--symdebug:dwarf` or `--symdebug:coff` option can cause a significant performance and code size degradation of your code. Use these options for debugging only. Using `--symdebug:dwarf` or `--symdebug:coff` when profiling is not recommended.

3.8.2 Profiling Optimized Code

To profile optimized code, use optimization (`--opt_level=0` through `--opt_level=3`) without any debug option. By default, the compiler generates a minimal amount of debug information without affecting optimizations, code size, or performance.

If you have a power profiler, use the `--profile:power` option with the `--opt_level` option. The `--profile:power` option produces instrument code for the power profiler.

If you need to profile code at a finer grain than the function level in Code Composer Studio, you can use the `--symdebug:dwarf` or `--symdebug:coff` option, although this is not recommended. You might see a significant performance degradation because the compiler cannot use all optimizations with `--symdebug:dwarf` or `--symdebug:coff`. It is recommended that outside of Code Composer Studio, you use the `clock()` function.

Profile Points

NOTE: In Code Composer Studio, when symbolic debugging is not used, profile points can only be set at the beginning and end of functions.

3.9 Controlling Code Size Versus Speed

The latest mechanism for controlling the goal of optimizations in the compiler is represented by the `--opt_for_speed=num` option. The *num* denotes the level of optimization (0-5), which controls the type and degree of code size or code speed optimization:

- `--opt_for_speed=0`
Enables optimizations geared towards improving the code size with a *high* risk of worsening or impacting performance.
- `--opt_for_speed=1`
Enables optimizations geared towards improving the code size with a *medium* risk of worsening or impacting performance.
- `--opt_for_speed=2`
Enables optimizations geared towards improving the code size with a *low* risk of worsening or impacting performance.
- `--opt_for_speed=3`
Enables optimizations geared towards improving the code performance/speed with a *low* risk of worsening or impacting code size.
- `--opt_for_speed=4`
Enables optimizations geared towards improving the code performance/speed with a *medium* risk of worsening or impacting code size.
- `--opt_for_speed=5`
Enables optimizations geared towards improving the code performance/speed with a *high* risk of worsening or impacting code size.

If you specify the option without a parameter, the default setting is `--opt_for_speed=4`.

The initial mechanism for controlling code space, the `--opt_for_space` option, has the following equivalences with the `--opt_for_speed` option:

<code>--opt_for_space</code>	<code>--opt_for_speed</code>
none	=4
=0	=3
=1	=2
=2	=1
=3	=0

A fast branch (BF) instruction is generated by default when the `--opt_for_speed` option is used. When `--opt_for_speed` is not used, the compiler generates BF instruction only when the condition code is one of NEQ, EQ, NTC and TC. The reason is that BF with these condition codes can be optimized to SBF. There is a code size penalty to use BF instruction when the condition code is NOT one of NEQ, EQ, NTC and TC.

The `--no_fast_branch` option does not control the BF instruction generated under the `--opt_for_speed` option. That is, `--opt_for_speed` overrides `--no_fast_branch`. The `--no_fast_branch` option affects only the BF instruction generated by default for one of NEQ, EQ, NTC and TC.

3.10 Increasing Code-Size Optimizations (--opt_for_size Option)

The --opt_for_size option increases the level of code-size optimizations performed by the compiler. These optimizations are done at the expense of performance. The optimizations include procedural abstraction where common blocks of code are replaced with function calls. For example, prolog and epilog code, certain intrinsics, and other common code sequences, can be replaced with calls to functions that are defined in the run-time library. It is necessary to link with the supplied run-time library when using the --opt_for_size option. It is not necessary to use optimization to invoke the --opt_for_size option.

To illustrate how the --opt_for_size option works, the following describes how prolog and epilog code can be replaced. This code is changed to function calls depending on the number of SOE registers, the size of the frame, and whether a frame pointer is used. These functions are defined in each file with the --opt_for_size option, as shown below:

```
_prolog_c28x_1  
_prolog_c28x_2  
_prolog_c28x_3  
_epilog_c28x_1  
_epilog_c28x_2
```

[Example 3-6](#) provides an example of C code to be compiled with the --opt_for_size option. The resulting output is shown in [Example 3-7](#).

Example 3-6. C Code to Show Code-Size Optimizations

```
extern int x, y, *ptr;  
extern int foo();  
  
int main(int a, int b, int c)  
{  
    ptr[50] = foo();  
    y = ptr[50] + x + y + a + b + c;  
}
```

Example 3-7. Example 3-6 Compiled With the --opt_for_size Option

```

FP      .set      XAR2
        .global   _prolog_c28x_1
        .global   _prolog_c28x_2
        .global   _prolog_c28x_3
        .global   _epilog_c28x_1
        .global   _epilog_c28x_2
        .sect     ".text"
        .global   _main

;*****
;
;* FNAME: _main                      FR SIZE: 6          *
;
;*
;* FUNCTION ENVIRONMENT              *
;*
;* FUNCTION PROPERTIES               *
;*
;*                                0 Parameter, 0 Auto, 6 SOE *
;*****
;

_main:

        FFC       XAR7,_prolog_c28x_1
        MOVZ      AR3,AR4              ; |5|
        MOVZ      AR2,AH               ; |5|
        MOVZ      AR1,AL               ; |5|
        LCR       #_foo                ; |6|
        ; call occurs [#_foo] ; |6|
        MOVW      DP,#_ptr
        MOVL      XAR6,@_ptr           ; |6|
        MOVB      XAR0,#50             ; |6|
        MOVW      DP,#_y
        MOV       *+XAR6[AR0],AL       ; |6|
        MOV       AH,@_y               ; |7|
        MOVW      DP,#_x
        ADD       AH,AL                ; |7|
        ADD       AH,@_x               ; |7|
        ADD       AH,AR3               ; |7|
        ADD       AH,AR1               ; |7|
        ADD       AH,AR2               ; |7|
        MOVB      AL,#0
        MOVW      DP,#_y
        MOV       @_y,AH               ; |7|
        FFC       XAR7,_epilog_c28x_1
        LRETR
        ; return occurs

```

3.11 What Kind of Optimization Is Being Performed?

The TMS320C28x C/C++ compiler uses a variety of optimization techniques to improve the execution speed of your C/C++ programs and to reduce their size.

Following are some of the optimizations performed by the compiler:

Optimization	See
Cost-based register allocation	Section 3.11.1
Alias disambiguation	Section 3.11.1
Branch optimizations and control-flow simplification	Section 3.11.3
Data flow optimizations • Copy propagation • Common subexpression elimination • Redundant assignment elimination	Section 3.11.4
Expression simplification	Section 3.11.5
Inline expansion of functions	Section 3.11.6
Function Symbol Aliasing	Section 3.11.7
Induction variable optimizations and strength reduction	Section 3.11.8
Loop-invariant code motion	Section 3.11.9
Loop rotation	Section 3.11.10
Instruction scheduling	Section 3.11.11

C28x-Specific Optimization	See
Register variables	Section 3.11.12
Register tracking/targeting	Section 3.11.13
Tail merging	Section 3.11.14
Autoincrement addressing	Section 3.11.15
Removing comparisons to zero	Section 3.11.16
RPTB generation (for FPU targets only)	Section 3.11.17

3.11.1 Cost-Based Register Allocation

The compiler, when optimization is enabled, allocates registers to user variables and compiler temporary values according to their type, use, and frequency. Variables used within loops are weighted to have priority over others, and those variables whose uses do not overlap can be allocated to the same register.

Induction variable elimination and loop test replacement allow the compiler to recognize the loop as a simple counting loop and software pipeline, unroll, or eliminate the loop. Strength reduction turns the array references into efficient pointer references with autoincrements.

3.11.2 Alias Disambiguation

C and C++ programs generally use many pointer variables. Frequently, compilers are unable to determine whether or not two or more l values (lowercase L: symbols, pointer references, or structure references) refer to the same memory location. This aliasing of memory locations often prevents the compiler from retaining values in registers because it cannot be sure that the register and memory continue to hold the same values over time.

Alias disambiguation is a technique that determines when two pointer expressions cannot point to the same location, allowing the compiler to freely optimize such expressions.

3.11.3 Branch Optimizations and Control-Flow Simplification

The compiler analyzes the branching behavior of a program and rearranges the linear sequences of operations (basic blocks) to remove branches or redundant conditions. Unreachable code is deleted, branches to branches are bypassed, and conditional branches over unconditional branches are simplified to a single conditional branch.

When the value of a condition is determined at compile time (through copy propagation or other data flow analysis), the compiler can delete a conditional branch. Switch case lists are analyzed in the same way as conditional branches and are sometimes eliminated entirely. Some simple control flow constructs are reduced to conditional instructions, totally eliminating the need for branches.

3.11.4 Data Flow Optimizations

Collectively, the following data flow optimizations replace expressions with less costly ones, detect and remove unnecessary assignments, and avoid operations that produce values that are already computed. The compiler with optimization enabled performs these data flow optimizations both locally (within basic blocks) and globally (across entire functions).

- **Copy propagation.** Following an assignment to a variable, the compiler replaces references to the variable with its value. The value can be another variable, a constant, or a common subexpression. This can result in increased opportunities for constant folding, common subexpression elimination, or even total elimination of the variable.
- **Common subexpression elimination.** When two or more expressions produce the same value, the compiler computes the value once, saves it, and reuses it.
- **Redundant assignment elimination.** Often, copy propagation and common subexpression elimination optimizations result in unnecessary assignments to variables (variables with no subsequent reference before another assignment or before the end of the function). The compiler removes these dead assignments.

3.11.5 Expression Simplification

For optimal evaluation, the compiler simplifies expressions into equivalent forms, requiring fewer instructions or registers. Operations between constants are folded into single constants. For example, $a = (b + 4) - (c + 1)$ becomes $a = b - c + 3$.

3.11.6 Inline Expansion of Functions

The compiler replaces calls to small functions with inline code, saving the overhead associated with a function call as well as providing increased opportunities to apply other optimizations.

3.11.7 Function Symbol Aliasing

The compiler recognizes a function whose definition contains only a call to another function. If the two functions have the same signature (same return value and same number of parameters with the same type, in the same order), then the compiler can make the calling function an alias of the called function.

For example, consider the following:

```
int bbb(int arg1, char *arg2);

int aaa(int n, char *str)
{
    return bbb(n, str);
}
```

For this example, the compiler makes `aaa` an alias of `bbb`, so that at link time all calls to function `aaa` should be redirected to `bbb`. If the linker can successfully redirect all references to `aaa`, then the body of function `aaa` can be removed and the symbol `aaa` is defined at the same address as `bbb`.

3.11.8 Induction Variables and Strength Reduction

Induction variables are variables whose value within a loop is directly related to the number of executions of the loop. Array indices and control variables for loops are often induction variables.

Strength reduction is the process of replacing inefficient expressions involving induction variables with more efficient expressions. For example, code that indexes into a sequence of array elements is replaced with code that increments a pointer through the array.

Induction variable analysis and strength reduction together often remove all references to your loop-control variable, allowing its elimination.

3.11.9 Loop-Invariant Code Motion

This optimization identifies expressions within loops that always compute to the same value. The computation is moved in front of the loop, and each occurrence of the expression in the loop is replaced by a reference to the precomputed value.

3.11.10 Loop Rotation

The compiler evaluates loop conditionals at the bottom of loops, saving an extra branch out of the loop. In many cases, the initial entry conditional check and the branch are optimized out.

3.11.11 Instruction Scheduling

The compiler performs instruction scheduling, which is the rearranging of machine instructions in such a way that improves performance while maintaining the semantics of the original order. Instruction scheduling is used to improve instruction parallelism and hide pipeline latencies. It can also be used to reduce code size.

3.11.12 Register Variables

The compiler helps maximize the use of registers for storing local variables, parameters, and temporary values. Accessing variables stored in registers is more efficient than accessing variables in memory. Register variables are particularly effective for pointers.

3.11.13 Register Tracking/Targeting

The compiler tracks the contents of registers to avoid reloading values if they are used again soon. Variables, constants, and structure references such as (a.b) are tracked through straight-line code. Register targeting also computes expressions directly into specific registers when required, as in the case of assigning to register variables or returning values from functions.

3.11.14 Tail Merging

If you are optimizing for code size, tail merging can be very effective for some functions. Tail merging finds basic blocks that end in an identical sequence of instructions and have a common destination. If such a set of blocks is found, the sequence of identical instructions is made into its own block. These instructions are then removed from the set of blocks and replaced with branches to the newly created block. Thus, there is only one copy of the sequence of instructions, rather than one for each block in the set.

3.11.15 Autoincrement Addressing

For pointer expressions of the form *p++, the compiler uses efficient C28x autoincrement addressing modes. In many cases, where code steps through an array in a loop such as below, the loop optimizations convert the array references to indirect references through autoincremented register variable pointers.

```
for (I = 0; I <N; ++I) a(I)...
```

3.11.16 Removing Comparisons to Zero

Because most of the 32-bit instructions and some of the 16-bit instructions can modify the status register when the result of their operation is 0, explicit comparisons to 0 may be unnecessary. The C28x C/C++ compiler removes comparisons to 0 if a previous instruction can be modified to set the status register appropriately.

3.11.17 RPTB Generation (for FPU Targets Only)

When the target has hardware floating-point support, some loops can be converted to hardware loops called repeat blocks (RPTB). Normally, a loop looks like this:

```
Label:
    ...loop body...
    SUB loop_count
    CMP
    B    Label
```

The same loop, when converted to a RPTB loop, looks like this:

```
RPTB    end_label, loop_count
    ...loop body...
end_label:
```

A repeat block loop is loaded into a hardware buffer and executed for the specified number of iterations. This kind of loop has minimal or zero branching overhead, and can improve performance. The loop count is stored in a special register RB (repeat block register), and the hardware seamlessly decrements the count without any explicit subtractions. Thus, there is no overhead due to the subtract, the compare, and the branch. The only overhead is due to the RPTB instruction that executes once before the loop. The RPTB instruction takes one cycle if the number of iterations is a constant, and 4 cycles otherwise. This overhead is incurred once per loop.

There are limitations on the minimum and maximum loop size for a loop to qualify for becoming a repeat block, due to the presence of the buffer. Also, the loop cannot contain any inner loops or function calls.

Linking C/C++ Code

The C/C++ compiler and assembly language tools provide two methods for linking your programs:

- You can compile individual modules and link them together. This method is especially useful when you have multiple source files.
- You can compile and link in one step. This method is useful when you have a single source module.

This chapter describes how to invoke the linker with each method. It also discusses special requirements of linking C/C++ code, including the run-time-support libraries, specifying the type of initialization, and allocating the program into memory. For a complete description of the linker, see the *TMS320C28x Assembly Language Tools User's Guide*.

Topic	Page
4.1 Invoking the Linker Through the Compiler (-z Option)	69
4.2 Linker Code Optimizations	71
4.3 Controlling the Linking Process	71
4.4 Linking C28x and C2XLP Code	76

4.1 Invoking the Linker Through the Compiler (-z Option)

This section explains how to invoke the linker after you have compiled and assembled your programs: as a separate step or as part of the compile step.

4.1.1 Invoking the Linker Separately

This is the general syntax for linking C/C++ programs as a separate step:

```
cl2000 -v28 --run_linker [--rom_model | --ram_model] filenames
[options] [--output_file= name.out] --library= library [lnk.cmd]
```

cl2000 -v28 --run_linker	The command that invokes the linker. The -v28 is the alias for --silicon_version=28.
--rom_model --ram_model	Options that tell the linker to use special conventions defined by the C/C++ environment. When you use cl2000 -v28 --run_linker, you must use --rom_model or --ram_model . The --rom_model option uses automatic variable initialization at run time; the --ram_model option uses variable initialization at load time.
<i>filenames</i>	Names of object files, linker command files, or archive libraries. The default extension for all input files is <i>.obj</i> ; any other extension must be explicitly specified. The linker can determine whether the input file is an object or ASCII file that contains linker commands. The default output filename is <i>a.out</i> , unless you use the --output_file option to name the output file.
<i>options</i>	Options affect how the linker handles your object files. Linker options can only appear after the --run_linker option on the command line, but otherwise may be in any order. (Options are discussed in detail in the <i>TMS320C28x Assembly Language Tools User's Guide</i> .)
--output_file= name.out	Names the output file.
--library= library	Identifies the appropriate archive library containing C/C++ run-time-support and floating-point math functions, or linker command files. If you are linking C/C++ code, you must use a run-time-support library. You can use the libraries included with the compiler, or you can create your own run-time-support library. If you have specified a run-time-support library in a linker command file, you do not need this parameter. The --library option's short form is -l .
<i>lnk.cmd</i>	Contains options, filenames, directives, or commands for the linker.

When you specify a library as linker input, the linker includes and links only those library members that resolve undefined references. The linker uses a default allocation algorithm to allocate your program into memory. You can use the **MEMORY** and **SECTIONS** directives in the linker command file to customize the allocation process. For information, see the *TMS320C28x Assembly Language Tools User's Guide*.

You can link a C/C++ program consisting of object files *prog1.obj*, *prog2.obj*, and *prog3.obj*, with an executable object file filename of *prog.out* with the command:

```
cl2000 --silicon_version=28 --run_linker --rom_model prog1 prog2 prog3
--output_file=prog.out --library=rts28.lib
```

4.1.2 Invoking the Linker as Part of the Compile Step

This is the general syntax for linking C/C++ programs as part of the compile step:

```
cl2000 -v28filenames [options] --run_linker {--rom_model | --ram_model} filenames
[options] [--output_file= name.out] --library= library [lnk.cmd]
```

The **--run_linker** option divides the command line into the compiler options (the options before **--run_linker**) and the linker options (the options following **--run_linker**). The **--run_linker** option must follow all source files and compiler options on the command line.

All arguments that follow **--run_linker** on the command line are passed to the linker. These arguments can be linker command files, additional object files, linker options, or libraries. These arguments are the same as described in [Section 4.1.1](#).

All arguments that precede **--run_linker** on the command line are compiler arguments. These arguments can be C/C++ source files, assembly files, or compiler options. These arguments are described in [Section 2.2](#).

You can compile and link a C/C++ program consisting of object files prog1.c, prog2.c, and prog3.c, with an executable object file filename of prog.out with the command:

```
cl2000 -v28 prog1.c prog2.c prog3.c --run_linker --rom_model --output_file=prog.out
--library=rts28.lib
```

NOTE: Order of Processing Arguments in the Linker

The order in which the linker processes arguments is important. The compiler passes arguments to the linker in the following order:

1. Object filenames from the command line
 2. Arguments following the **--run_linker** option on the command line
 3. Arguments following the **--run_linker** option from the C2000_C_OPTION environment variable
-

4.1.3 Disabling the Linker (--compile_only Compiler Option)

You can override the **--run_linker** option by using the **--compile_only** compiler option. The **--run_linker** option's short form is **-z** and the **--compile_only** option's short form is **-c**.

The **--compile_only** option is especially helpful if you specify the **--run_linker** option in the C2000_C_OPTION environment variable and want to selectively disable linking with the **--compile_only** option on the command line.

4.2 Linker Code Optimizations

4.2.1 Generating Function Subsections (*--gen_func_subsections* Compiler Option)

When the linker places code into an executable file, it allocates all the functions in a single source file as a group. This means that if any function in a file needs to be linked into an executable, then all the functions in the file are linked in. This can be undesirable if a file contains many functions and only a few are required for an executable.

This situation may exist in libraries where a single file contains multiple functions, but the application only needs a subset of those functions. An example is a library .obj file that contains a signed divide routine and an unsigned divide routine. If the application requires only signed division, then only the signed divide routine is required for linking. By default, both the signed and unsigned routines are linked in since they exist in the same .obj file.

The *--gen_func_subsections* compiler option remedies this problem by placing each function in a file in its own subsection. Thus, only the functions that are referenced in the application are linked into the final executable. This can result in an overall code size reduction.

4.3 Controlling the Linking Process

Regardless of the method you choose for invoking the linker, special requirements apply when linking C/C++ programs. You must:

- Include the compiler's run-time-support library
- Specify the type of boot-time initialization
- Determine how you want to allocate your program into memory

This section discusses how these factors are controlled and provides an example of the standard default linker command file.

For more information about how to operate the linker, see the linker description in the *TMS320C28x Assembly Language Tools User's Guide*

4.3.1 Including the Run-Time-Support Library

You must link all C/C++ programs with a run-time-support library. The library contains standard C/C++ functions as well as functions used by the compiler to manage the C/C++ environment. The following sections describe two methods for including the run-time-support library.

4.3.1.1 Automatic Run-Time-Support Library Selection

If the *--rom_model* or *--ram_model* option is specified during the linker and the entry point for the program (normally *c_int00*) is not resolved by any specified object file or library, the linker attempts to automatically include the best compatible run-time-support library for your program. The chosen run-time-support library is linked in after any other libraries specified with the *--library* option on the command line. Alternatively, you can force the linker to choose an appropriate run-time-support library by specifying "libc.a" as an argument to the *--library* option, or when specifying the run-time-support library name explicitly in a linker command file.

The automatic selection of a run-time-support library can be disabled with the *--disable_auto_rts* option.

If the *--issue_remarks* option is specified before the *--run_linker* option during the linker, a remark is generated indicating which run-time support library was linked in. If a different run-time-support library is desired, you must specify the name of the desired run-time-support library using the *--library* option and in your linker command files when necessary.

Example 4-1. Using the *--issue_remarks* Option

```
cl2000 -v28 --issue_remarks main.c --run_linker --rom_model
<Linking>
```

Example 4-1. Using the `--issue_remarks` Option (continued)

```
remark: linking in "libc.a"

remark: linking in "rts2800-eh.lib" in place of "libc.a"
```

4.3.1.2 Manual Run-Time-Support Library Selection

You should use the `--library` linker option to specify which C28x run-time-support library to use. The `--library` option also tells the linker to look at the `--search_path` options and then the `C2000_C_DIR` environment variable to find an archive path or object file. To use the `--library` linker option, type on the command line:

```
cl2000 -v28 --run_linker {--rom_model | --ram_model} filenames --library= libraryname
```

4.3.1.3 Library Order for Searching for Symbols

Generally, you should specify the run-time-support library as the last name on the command line because the linker searches libraries for unresolved references in the order that files are specified on the command line. If any object files follow a library, references from those object files to that library are not resolved. You can use the `--reread_libs` option to force the linker to reread all libraries until references are resolved. Whenever you specify a library as linker input, the linker includes and links only those library members that resolve undefined references.

By default, if a library introduces an unresolved reference and multiple libraries have a definition for it, then the definition from the same library that introduced the unresolved reference is used. Use the `--priority` option if you want the linker to use the definition from the first library on the command line that contains the definition.

4.3.2 Run-Time Initialization

You must link all C/C++ programs with code to initialize and execute the program called a bootstrap routine. The bootstrap routine is responsible for the following tasks:

1. Set up status and configuration registers
2. Set up the stack and secondary system stack
3. Process the `.cinit` run-time initialization table to autoinitalize global variables (when using the `--rom_model` option)
4. Call all global object constructors (`.pinit`)
5. Call the function `main`
6. Call `exit` when `main` returns

A sample bootstrap routine is `_c_int00`, provided in `boot.obj` in `rts2800.lib`. The entry point is usually set to the starting address of the bootstrap routine.

NOTE: The `_c_int00` Symbol

If you use the `--ram_model` or `--rom_model` link option, `_c_int00` is automatically defined as the entry point for the program.

4.3.3 Initialization by the Interrupt Vector

If your program is expected to run from RESET, you must set up the reset vector to branch to `_c_int00`. Referring to `_c_int00` causes `boot.obj` to be loaded from the library. The `_c_int00` routine will initialize the program's state. The `boot.obj` code places the address of `_c_int00` into a section named `.reset`. The section can then be allocated at the reset vector location using the linker.

A sample interrupt vector is provided in `vectors.obj` in `rts2800.lib`. For C28x, the first few lines of the vector are:

```
.def _Reset
.ref _c_int00
_Reset: .vec _c_int00, USE_RETA
```

4.3.4 Global Object Constructors

Global C++ variables that have constructors and destructors require their constructors to be called during program initialization and their destructors to be called during program termination. The C++ compiler produces a table of constructors to be called at startup.

Constructors for global objects from a single module are invoked in the order declared in the source code, but the relative order of objects from different object files is unspecified.

Global constructors are called after initialization of other global variables and before the function `main` is called. Global destructors are invoked during the function exit, similar to functions registered through `atexit`.

[Section 7.8.2.4](#) discusses the format of the global constructor table.

4.3.5 Specifying the Type of Global Variable Initialization

The C/C++ compiler produces data tables for initializing global variables. [Section 7.8.2.1](#) discusses the format of these initialization tables. The initialization tables are used in one of the following ways:

- Global variables are initialized at *run time*. Use the `--rom_model` linker option (see [Section 7.8.2.2](#)).
- Global variables are initialized at *load time*. Use the `--ram_model` linker option (see [Section 7.8.2.3](#)).

When you link a C/C++ program, you must use either the `--rom_model` or `--ram_model` option. These options tell the linker to select initialization at run time or load time.

When you compile and link programs, the `--rom_model` option is the default. If used, the `--rom_model` option must follow the `--run_linker` option (see [Section 4.1](#)). The following list outlines the linking conventions used with `--rom_model` or `--ram_model`:

- The symbol `_c_int00` is defined as the program entry point; it identifies the beginning of the C/C++ boot routine in `boot.obj`. When you use `--rom_model` or `--ram_model`, `_c_int00` is automatically referenced, ensuring that `boot.obj` is automatically linked in from the run-time-support library.
- The initialization output section is padded with a termination record so that the loader (load-time initialization) or the boot routine (run-time initialization) knows when to stop reading the initialization tables.
- When initializing at load time (the `--ram_model` option), the following occur:
 - The linker sets the initialization table symbol to `-1`. This indicates that the initialization tables are not in memory, so no initialization is performed at run time.
 - The `STYP_COPY` flag is set in the initialization table section header. `STYP_COPY` is the special attribute that tells the loader to perform autoinitialization directly and not to load the initialization table into memory. The linker does not allocate space in memory for the initialization table.
- When autoinitializing at run time (`--rom_model` option), the linker defines the initialization table symbol as the starting address of the initialization table. The boot routine uses this symbol as the starting point for autoinitialization.

4.3.6 Specifying Where to Allocate Sections in Memory

The compiler produces relocatable blocks of code and data. These blocks, called *sections*, are allocated in memory in a variety of ways to conform to a variety of system configurations.

The compiler creates two basic kinds of sections: initialized and uninitialized. [Table 4-1](#) summarizes the initialized sections. [Table 4-2](#) summarizes the uninitialized sections.

Table 4-1. Initialized Sections Created by the Compiler

Name	Contents	Restrictions
.cinit	Tables for explicitly initialized global and static variables	Program
.const	Global and static const variables that are explicitly initialized and contain string literals	Low 64K
.econst	Far constant variables	Anywhere in data
.pinit	Table of constructors to be called at startup	Program
.switch	Jump tables for large switch statements	Program with -mt option Data without -mt option
.text	Executable code and constants	Program

Table 4-2. Uninitialized Sections Created by the Compiler

Name	Contents	Restrictions
.bss	Global and static variables	Low 64K
.ebss	Far global/static variables	Anywhere in data
.stack	Stack	Low 64K
.sysmem	Memory for malloc functions (heap)	Low 64K
.esysmem	Memory for far_malloc functions	Anywhere in data

The C/C++ run-time environment supports placing the system heap (.esysmem section) in far memory by providing far_malloc routines.

When you link your program, you must specify where to allocate the sections in memory. In general, initialized sections are linked into ROM or RAM; uninitialized sections are linked into RAM. With the exception of .text, the initialized and uninitialized sections created by the compiler cannot be allocated into internal program memory. See [Section 7.1.1](#) for a complete description of how the compiler uses these sections.

The linker provides MEMORY and SECTIONS directives for allocating sections. For more information about allocating sections into memory, see the *TMS320C28x Assembly Language Tools User's Guide*.

4.3.7 A Sample Linker Command File

[Example 4-2](#) shows a typical linker command file that links a C program. The command file in this example is named `lnk.cmd`. It links three object files (`a.obj`, `b.obj`, and `c.obj`) and creates a program (`prog.out`) and a map file (`prog.map`).

To link the program, enter the following:

```
cl2000 -v28 --run_linker lnk.cmd
```

The `MEMORY` and possibly the `SECTIONS` directives, might require modification to work with your system. See the *TMS320C28x Assembly Language Tools User's Guide* for more information on these directives.

Example 4-2. Linker Command File

```
a.obj b.obj c.obj          /* Input filenames */
--output_file=prog.out     /* Options */
--map_file=prog.map
--library=rts2800.lib      /* Get run-time support */

MEMORY                     /* MEMORY directive */
{
    RAM:  origin = 100h     length = 0100h
    ROM:  origin = 01000h   length = 0100h
}

SECTIONS                   /* SECTIONS directive */
{
    .text:  > ROM
    .data:  > ROM
    .bss:   > RAM
    .pinit: > ROM
    .cinit: > ROM
    .switch: > ROM
    .const: > RAM
    .stack: > RAM
    .sysmem: > RAM
}
```

4.4 Linking C28x and C2XLP Code

The error in the C28x linker to prevent linking code with a 64-word page size (C28x) and a 128-word page size (C2XLP) has been changed to a warning. It is possible to call a C2XLP assembly function from C28x C/C++ code. One possible way is to replace the call to the C2XLP function with a veneer function that correctly sets up the arguments and call stack for the C2XLP code. For example, to make a call to a C2XLP function expecting five integer arguments, change the C28x code to:

```
extern void foo_veneer(int, int, int, int, int);
void bar()
{
    /* replace the C2XLP call with a veneer call */
    /* foo(1, 2, 3, 4, 5); */
    foo_veneer(1, 2, 3, 4, 5);
}
```

[Example 4-3](#) illustrates how the veneer function might look:

Example 4-3. Veneer Function for Linking C2xx and C2XLP Code

```
.sect ".text"
.global _foo_veneer
.global _foo
_foo_veneer:
    ;save registers
    PUSH AR1:AR0
    PUSH AR3:AR2
    PUSH AR5:AR4

    ;set the size of the C2XLP frame (including args size)
    ADDB SP,#10

    ;push args onto the C2XLP frame
    MOV *-SP[10],AL ;copy arg 1
    MOV *-SP[9],AH ;copy arg 2
    MOV *-SP[8],AR4 ;copy arg 3
    MOV *-SP[7],AR5 ;copy arg 4
    MOV AL,*-SP[19]
    MOV *-SP[6],AL ;copy arg 5

    ;save the return address
    MOV *-SP[5],#_label

    ;set AR1,ARP
    MOV AL,SP
    SUBB AL,#3
    MOV AR1,AL
    NOP *ARP1

    ;jump to C2XLP function
    LB _foo
_label:

    ;restore register
    POP AR5:AR4
    POP AR3:AR2
    POP AR1:AR0LRETR
```

Since the veneer function frame will act as the frame for all C2XLP calls, it is necessary to add sufficient size to the frame for any subsequent calls made by the first C2XLP function.

Global variables will be placed in the .bss sections for C28x C/C++ code. A C2XLP .bss section is not guaranteed to begin on a 128-word boundary when linked with C28x code. To avoid this problem, define a new section, change the C2XLP globals to the new section, and update the linker command file to ensure this new section begins at a 128-word boundary.

Post-Link Optimizer

The TMS320C28x post-link optimizer removes or modifies assembly language instructions to generate better code. The post-link optimizer examines the final addresses of symbols determined by linking and uses this information to make code changes.


Post-link optimization requires the `-plink` compiler option. The `-plink` compiler option invokes added passes of the tools that include running the absolute lister and rerunning the assembler and linker. You must use the `-plink` option following the `--run_linker` option.

Topic	Page
5.1 The Post-Link Optimizer's Role in the Software Development Flow	79
5.2 Removing Redundant DP Loops	80
5.3 Tracking DP Values Across Branches	80
5.4 Tracking DP Values Across Function Calls	81
5.5 Other Post-Link Optimizations	81
5.6 Controlling Post-Link Optimizations	82
5.7 Restrictions on Using the Post-Link Optimizer	83
5.8 Naming the Outfile (--output_file Option)	83

5.1 The Post-Link Optimizer's Role in the Software Development Flow

The post-link optimizer is not part of the normal development flow. Figure 5-1 shows the flow including the post-link optimizer; this flow occurs only when you use the compiler and the -plink option.

Figure 5-1. The Post-Link Optimizer in the TMS320C28x Software Development Flow

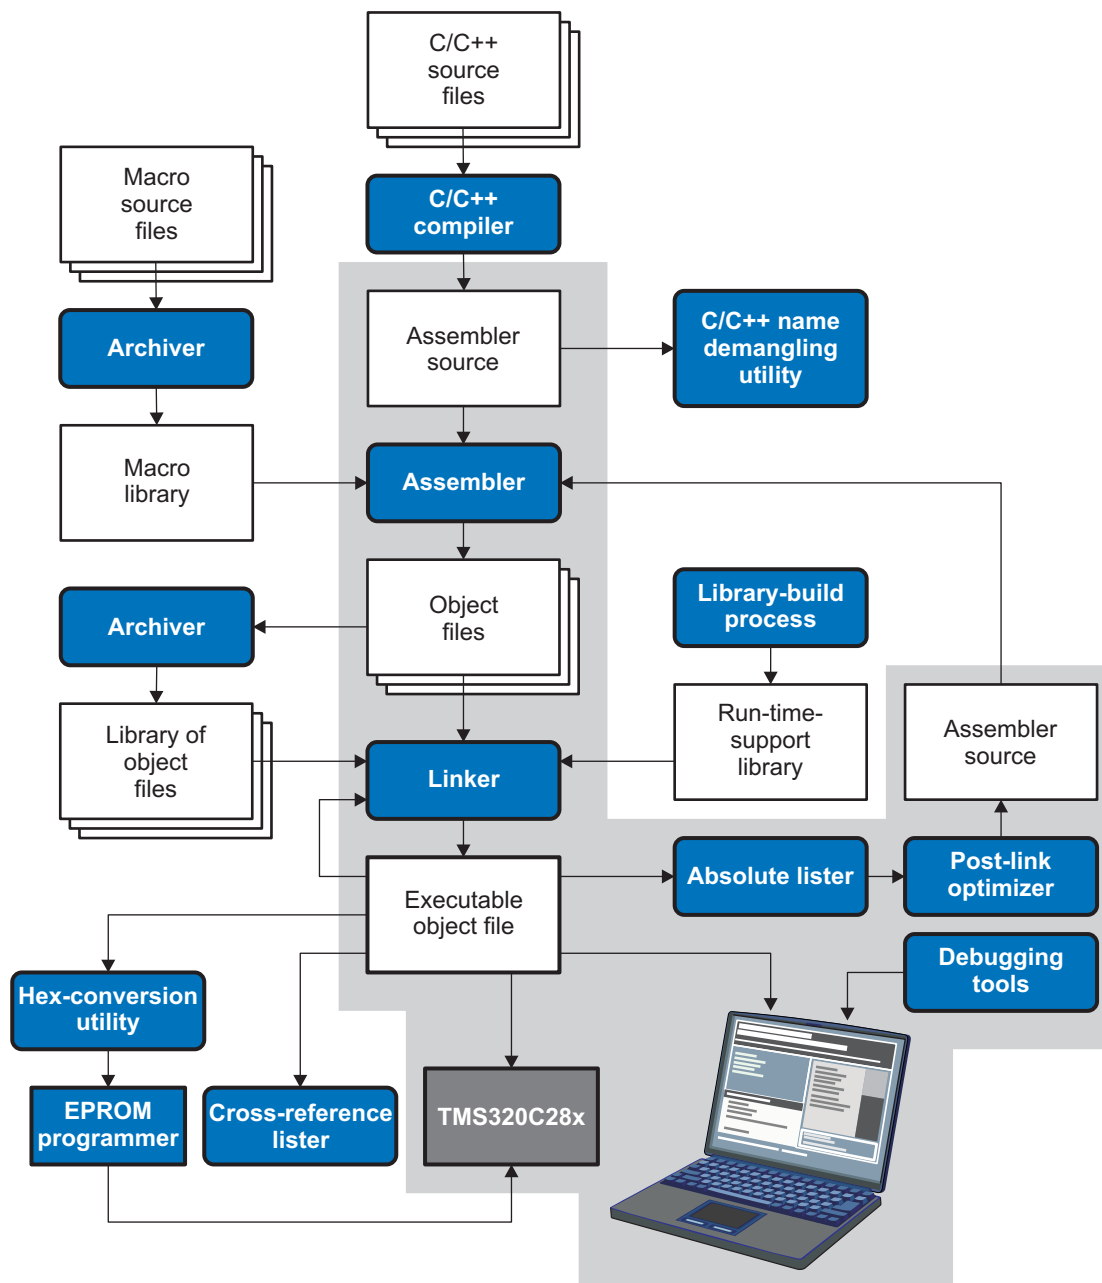

As the flow shows, the absolute lister (abs2000) is also part of the post-link optimizing process. The absolute lister outputs the absolute addresses of all globally defined symbols and coff sections. The post-link optimizer takes .abs files as input and uses these addresses to perform optimizations. The output is a .pl file, which is an optimized version of the original .asm file. The flow then reruns the assembler and linker to produce a final output file.

The described flow is supported only when you use the compiler (cl2000 -v28) and the -plink option. If you use a batch file to invoke each tool individually, you must adapt the flow to use the compiler instead. In addition, you must use the --output_file option to specify an output file name when using the -plink option. See Section 5.8 for more details.

For example, replace these lines:

```
cl2000 -v28 file1.asm file1.obj
cl2000 -v28 file2.asm file2.obj
cl2000 -v28 --run_linker file1.obj file2.obj lnk.cmd --output_file=prog.out
```

with this line:

```
cl2000 -v28 file1.asm file2.asm --run_linker lnk.cmd --output_file=prog.out -plink
```

Post-link optimization is not supported for FPU targets.

5.2 Removing Redundant DP Loops

Post-link optimization reduces the difficulty of managing the DP register by removing redundant DP loads. It does this by tracking the current value of the DP and determining whether the address in a MOV DP,#address instruction is located on the same 64-word page to which the DP is currently pointing. If the address can be accessed using the current DP value, the instruction is redundant and can be removed. For example, consider the following code segment:

```
MOVZ    DP, #name1
ADD     @name1, #10
MOVZ    DP, #name2
ADD     @name2, #10
```

If name1 and name2 are linked to the same page, the post-link optimizer determines that loading DP with the address of name2 is not necessary, and it comments out the redundant load.

```
MOVZ    DP, #name1
ADD     @name1, #10
; <<REDUNDANT>>      MOVZ    DP, #name2
ADD     @name2, #10
```

This optimization can be used on C files as well. Even though the compiler manages the DP for all global variable references that are defined within a module, it conservatively emits DP loads for any references to global variables that are externally defined. Using the post-link optimizer can help reduce the number of DP loads in these instances.

5.3 Tracking DP Values Across Branches

In order to track DP values across branches, the post-link optimizer requires that there are no indirect calls or branches, and all possible branch destinations have labels. If an indirect branch or call is encountered, the post-link optimizer will only track the DP value within a basic block. Branch destinations without labels may cause incorrect output from the post-link optimizer.

If the post-link optimizer encounters indirect calls or branches, it issues the following warning:

```
NO POST LINK OPTIMIZATION DONE ACROSS BRANCHES
Branch/Call must have labeled destination
```

This warning is issued so that if the file is a hand written assembly file, you can try to change the indirect call/branch to a direct one to obtain the best optimization from the post linker.

5.4 Tracking DP Values Across Function Calls

The post-link optimizer optimizes DP loads after a call to a function if the function is defined in the same file scope. For example, consider the following post-link optimized code:

```
_main:
    LCR    #_foo
    MOVB   AL, #0
; <<REDUNDANT>>    MOVZ    DP, #_g2
    MOV    @_g2, #20
    LRETR

.global   _foo
_foo:
    MOVZ   DP, #g1
    MOV    @_g1, #10
    LRETR
```

The MOVZ DP after the function call to _foo is removed by the post-link optimizer as the variables _g1 and _g2 are in the same page and the function _foo already set the DP.

In order for the post-link optimizer to optimize across the function calls, the functions should have only one return statement. If you are running the post-link optimizer on hand written assembly that has more than one return statement per function, the post-link optimization output can be incorrect. You can turn off the optimization across function calls by specifying the -nf option after the -plink option.

5.5 Other Post-Link Optimizations

An externally defined symbol used as a constant operand forces the assembler to choose a 16-bit encoding to hold the immediate value. Since the post-link optimizer has access to the externally defined symbol value, it replaces a 16-bit encoding with an 8-bit encoding when possible. For example:

```
.ref ext_sym ; externally defined to be 4
:
:
:
ADD AL, #ext_sym ; assembly will encode ext_sym with 16 bits
```

Since ext_sym is externally defined, the assembler chooses a 16-bit encoding for ext_sym. The post-link optimizer changes the encoding of ext_sym to an 8-bit encoding:

```
.ref ext_sym
:
:
:
; << ADD=>ADDB>> ADD AL, #ext_sym
ADDB AL, #ext_sym
```

Similarly the post-link optimizer attempts to reduce the following 2-word instructions to 1-word instructions:

2-Word Instructions	1-Word Instructions
ADD ACC, #imm	ADDB ACC, #imm
ADD AL, #imm	ADDB AL, #imm
AND AL, #imm	ANDB AL, #imm
CMP AL, #imm	CMPB AL, #imm
MOVL XARn, #imm	MOVB XARn, #imm
OR AL, #imm	ORB AL, #imm
SUB ACC, #imm	SUBB ACC, #imm
SUB AL, #imm	SUBB AL, #imm
XOR AL, #imm	XORB AL, #imm

5.6 Controlling Post-Link Optimizations

There are three ways to control post-link optimizations: by excluding files, by inserting specific comments within an assembly file, and by manually editing the post-link optimization file.

5.6.1 Excluding Files (-ex Option)

Specific files can be excluded from the post-link optimization process by using the `-ex` option. The files to be excluded must follow the `-ex` option and include file extensions. The `-ex` option must be used after the `-plink` option and no other option may follow. For example:

```
cl2000 -v28 file1.asm file2.asm file3.asm --keep_asm --run_linker lnk.cmd -plink -o=prog.out -
ex=file3.asm
```

The file3.asm will be excluded from the post-link optimization process.

5.6.2 Controlling Post-Link Optimization Within an Assembly File

Within an assembly file, post-link optimizations can be disabled or enabled by using two specially formatted comment statements:

```
; //NOPLINK//
; //PLINK//
```

Assembly statements following the NOPLINK comment are not optimized. Post-link optimization can be reenabled using the //PLINK// comment.

The PLINK and NOPLINK comment format is not case sensitive. There can be white space between the semicolon and PLINK delimiter. The PLINK and NOPLINK comments must appear on a separate line, alone, and must begin in column 1. For example:

```
; //PLINK//
```

5.6.3 Retaining Post-Link Optimizer Output (--keep_asm Option)

The `--keep_asm` option allows you to retain any post-link files (.pl) and .absolute listing files (.abs) generated by the `-plink` option. Using the `--keep_asm` option lets you view any changes the post-link optimizer makes.

The .pl files contain the commented out statement shown with `<<REDUNDANT>>` or any improvements to instructions, such as `<<ADD=>ADDB>>`. The .pl files are assembled and linked again to exclude the commented out lines.

5.6.4 Disable Optimization Across Function Calls (-nf Option)

The `-nf` option disables the post-link optimization across function calls. The post-link optimizer recognizes the function end by the return statement and assumes there is only one return statement per function. In some hand written assembly code, it is possible to have more than one return statement per function. In such cases, the output of the post-link optimization can be incorrect. You can turn off the optimization across function calls by using the `-nf` option. This option affects all the files.

5.7 Restrictions on Using the Post-Link Optimizer

The following restrictions affect post-link optimization:

- Post-link optimization is not supported on FPU targets.
- Branches or calls to unlabeled destinations invalidate DP load optimizations. All branch destinations must have labels.
- If the position of the data sections depends on the size of the code sections, the data page layout information used to decide which DP load instructions to remove may no longer be valid.

For example, consider the following link command file:

```
SECTIONS
{
    .text    > MEM,
    .mydata  > MEM,}
```

A change in the size of the .text section after optimizing causes the .mydata section to shift. Ensuring that all output data sections are aligned on a 64-word boundary removes this shifting issue. For example, consider the following link command file:

```
SECTIONS
{
    .text > MEM,
    .mydata align = 64 > MEM,}
```

5.8 Naming the Outfile (--output_file Option)

When using the -plink option, you must include the --output_file option. If the output filename is specified in a linker command file, the compiler does not have access to the filename to pass it along to other phases of post-link optimization, and the process will fail. For example:

```
cl2000 -v28 file1.c file2.asm --run_linker --output_file=prog.out lnk.cmd -plink
```

Because the post-link optimization flow uses the absolute lister, abs2000, it must be included in your path.

TMS320C28x C/C++ Language Implementation

The C/C++ compiler supports the C/C++ language standard that was developed by a committee of the American National Standards Institute (ANSI) and subsequently adopted by the International Standards Organization (ISO).

The C++ language supported by the C28x is defined by the ANSI/ISO/IEC 14882:1998 standard with certain exceptions.

Topic	Page
6.1 Characteristics of TMS320C28x C	85
6.2 Characteristics of TMS320C28x C++	85
6.3 Using MISRA-C:2004	86
6.4 Data Types	87
6.5 Keywords	89
6.6 Accessing far Memory From C++	95
6.7 C++ Exception Handling	96
6.8 Register Variables and Parameters	97
6.9 The asm Statement	97
6.10 Pragma Directives	98
6.11 The _Pragma Operator	110
6.12 Object File Symbol Naming Conventions (Linknames)	110
6.13 Initializing Static and Global Variables	111
6.14 Changing the ANSI/ISO C Language Mode	112
6.15 GNU Language Extensions	114
6.16 Compiler Limits	116

6.1 Characteristics of TMS320C28x C

The compiler supports the C language as defined by ISO/IEC 9899:1990, which is equivalent to American National Standard for Information Systems-Programming Language C X3.159-1989 standard, commonly referred to as C89, published by the American National Standards Institute. The compiler can also accept many of the language extensions found in the GNU C compiler (see [Section 6.15](#)). The compiler does not support C99.

The ANSI/ISO standard identifies some features of the C language that are affected by characteristics of the target processor, run-time environment, or host environment. For reasons of efficiency or practicality, this set of features can differ among standard compilers.

Unsupported features of the C library are:

- The run-time library has minimal support for wide and multi-byte characters. The type `wchar_t` is implemented as `int`. The wide character set is equivalent to the set of values of type `char`. The library includes the header files `<wchar.h>` and `<wctype.h>`, but does not include all the functions specified in the standard. So-called multi-byte characters are limited to single characters. There are no shift states. The mapping between multi-byte characters and wide characters is simple equivalence; that is, each wide character maps to and from exactly a single multi-byte character having the same value.
- The run-time library includes the header file `<locale.h>`, but with a minimal implementation. The only supported locale is the C locale. That is, library behavior that is specified to vary by locale is hard-coded to the behavior of the C locale, and attempting to install a different locale by way of a call to `setlocale()` will return `NULL`.

6.2 Characteristics of TMS320C28x C++

The C28x compiler supports C++ as defined in the ANSI/ISO/IEC 14882:1998 standard, including these features:

- Complete C++ standard library support, with exceptions noted below.
- Templates
- Exceptions, which are enabled with the `--exceptions` option; see [Section 6.7](#).
- Run-time type information (RTTI), which can be enabled with the `--rtti` compiler option.

The *exceptions* to the standard are as follows:

- The compiler does not support embedded C++ run-time-support libraries.
- The `<complex>` header and its functions are not included in the library.
- The library supports wide chars (`wchar_t`), in that template functions and classes that are defined for `char` are also available for `wchar_t`. For example, wide char stream classes `wios`, `wiostream`, `wstreambuf` and so on (corresponding to char classes `ios`, `iostream`, `streambuf`) are implemented. However, there is no low-level file I/O for wide chars. Also, the C library interface to wide char support (through the C++ headers `<wchar>` and `<wctype>`) is limited as described above in the C library.
- If the definition of an inline function contains a static variable, and it appears in multiple compilation units (usually because it's a member function of a class defined in a header file), the compiler generates multiple copies of the static variable rather than resolving them to a single definition. The compiler emits a warning (#1369) in such cases.
- Two-phase name binding in templates, as described in `[tesp.res]` and `[temp.dep]` of the standard, is not implemented.
- The `export` keyword for templates is not implemented.
- A `typedef` of a function type cannot include member function cv-qualifiers.
- A partial specialization of a class member template cannot be added outside of the class definition.

6.3 Using MISRA-C:2004

You can alter your code to work with the MISRA-C:2004 rules. The following enable/disable the rules:

- The `--check_misra` option enables checking of the specified MISRA-C:2004 rules.
- The `CHECK_MISRA` pragma enables/disables MISRA-C:2004 rules at the source level. This pragma is equivalent to using the `--check_misra` option. See [Section 6.10.1](#).
- `RESET_MISRA` pragma resets the specified MISRA-C:2004 rules to the state they were before any `CHECK_MISRA` pragmas were processed. See [Section 6.10.13](#).

The syntax of the option and pragmas is:

```
--check_misra={all|required|advisory|none|rulespec}
#pragma CHECK_MISRA ("{all|required|advisory|none|rulespec}");
#pragma RESET_MISRA ("{all|required|advisory|rulespec}");
```

The *rulespec* parameter is a comma-separated list of these specifiers:

- `[-]X` Enable (or disable) all rules in topic X.
- `[-]X-Z` Enable (or disable) all rules in topics X through Z.
- `[-]X.A` Enable (or disable) rule A in topic X.
- `[-]X.A-C` Enable (or disable) rules A through C in topic X.

Example: `--check_misra=1-5,-1.1,7.2-4`

- Checks topics 1 through 5
- Disables rule 1.1 (all other rules from topic 1 remain enabled)
- Checks rules 2 through 4 in topic 7

Two options control the severity of certain MISRA-C:2004 rules:

- The `--misra_required` option sets the diagnostic severity for required MISRA-C:2004 rules.
- The `--misra_advisory` option sets the diagnostic severity for advisory MISRA-C:2004 rules.

The syntax for these options is:

```
--misra_advisory={error|warning|remark|suppress}
--misra_required={error|warning|remark|suppress}
```

6.4 Data Types

[Table 6-1](#) lists the size, representation, and range of each scalar data type for the C28x compiler. Many of the range values are available as standard macros in the header file limits.h.

Table 6-1. TMS320C28x C/C++ Data Types

Type	Size	Representation	Range	
			Minimum	Maximum
char, signed char	16 bits	ASCII	-32 768	32 767
unsigned char	16 bits	ASCII	0	65 535
short	16 bits	2s complement	-32 768	32 767
unsigned short	16 bits	Binary	0	65 535
int, signed int	16 bits	2s complement	-32 768	32 767
unsigned int	16 bits	Binary	0	65 535
long, signed long	32 bits	2s complement	-2 147 483 648	2 147 483 647
unsigned long	32 bits	Binary	0	4 294 967 295
long long, signed long long	64 bits	2s complement	-9 223 372 036 854 775 808	9 223 372 036 854 775 807
unsigned long long	64 bits	Binary	0	18 446 744 073 709 551 615
enum	16 bits	2s complement	-32 768	32 767
float	32 bits	IEEE 32-bit	1.19 209 290e-38 ⁽¹⁾	3.40 282 35e+38
double	32 bits	IEEE 32-bit	1.19 209 290e-38 ⁽¹⁾	3.40 282 35e+38
long double	64 bits	IEEE 64-bit	2.22 507 385e-308 ⁽¹⁾	1.79 769 313e+308
pointers	16 bits	Binary	0	0xFFFF
far pointers	22 bits	Binary	0	0x3FFFFFF

⁽¹⁾ Figures are minimum precision.

NOTE: TMS320C28x Byte is 16 Bits

By ANSI/ISO C definition, the sizeof operator yields the number of bytes required to store an object. ANSI/ISO further stipulates that when sizeof is applied to char, the result is 1. Since the TMS320C28x char is 16 bits (to make it separately addressable), a byte is also 16 bits. This yields results you may not expect; for example, size of (int) = = 1 (not 2). TMS320C28x bytes and words are equivalent (16 bits). To access data in increments of 8 bits, use the __byte() and __mov_byte() intrinsics described in [Section 7.4.5](#).

6.4.1 Support for 64-Bit Integers

The TMS320C28x compiler supports the long long and unsigned long long data types. The range values are available as standard macros in the header file limits.h.

The long long data types are stored in register pairs. In memory they are stored as 64-bit objects at word (32-bit) aligned addresses.

A long long integer constant can have an ll or LL suffix. Without the suffix the value of the constant determines the type of the constant.

The formatting rules for long long in C I/O require ll in the format string. For example:

```
printf("%lld", 0x0011223344556677);
printf("%llx", 0x0011223344556677);
```

The run-time-support library functions, labs(), strtoll() and strtoull(), are added.

6.4.2 C28x long double Floating-Point Type Change

When compiling C/C++ code for the TMS320C28x only, the long double floating point type is now IEEE 64-bit double precision. No other floating-point types have changed formats. C28x floating point types are:

Type	Format
float	IEEE 32-bit single precision
double	IEEE 32-bit single precision
long double	IEEE 64-bit double precision

When you initialize a long double to a constant, you must use the l or L suffix. The constant is treated as a double type without the suffix and the run-time support double-to-long conversion routine is called for the initialization. This could result in the loss of precision. For example:

```
long double a = 12.34L; /* correctly initializes to double precision */
long double b = 56.78; /* converts single precision value to double precision */
```

The formatting rules for long doubles in C I/O require a capital 'L' in the format string. For example:

```
printf("%Lg", 1.23L);
printf("%Le", 3.45L);
```

In response to the change in the long double type to 64-bit IEEE double-precision format, the C28x calling conventions have changed.

All long double arguments are passed by reference. A long double return value is returned by reference. The first two long double arguments will pass their addresses in XAR4 and XAR5. All other long double arguments will have their addresses passed on the stack. It is necessary to assume that these long double address will be in far memory. Therefore, the called function will always read 32-bits for the addresses of long double arguments.

If a function returns a long double, the function making that call will place the return address in XAR6. For example:

```
long double foo(long double a, long double b, long double c)
{
    long double d = a + b + c;
    return d;
}

long double a = 1.2L;
long double b = 2.2L;
long double c = 3.2L;
long double d;

void bar()
{
    d = foo(a, b, c);
}
```

In function bar(), at the call to foo(), the register values are:

Register	Equals
XAR4	The address of a
XAR5	The address of b
*-SP[2]	The address of c
XAR6	The address of d

The run-time-support library has been updated to include the necessary long double arithmetic operations and conversion functions. All C27x/C28x floating-point run-time-support routines have had their names updated. For example, a previous call to the floating point add routine was:

```
LCR F$$ADD
```

This has been updated to:

```
LCR FS$$ADD ; single-precision add
```

```
LCR FD$$ADD ; double-precision add
```

Any C28x routine that calls floating-point arithmetic or conversion routines will need to be recompiled.

6.5 Keywords

The C28x C/C++ compiler supports the standard `const`, `register`, and `volatile` keywords. In addition, the C/C++ compiler extends the C/C++ language through the support of the `cregister` and `interrupt` keywords. In C mode, the C/C++ compiler supports the `far` keyword. The compiler also supports the `restrict` keyword for FPU targets; for other targets `restrict` is ignored.

6.5.1 The `const` Keyword

The C/C++ compiler supports the ANSI/ISO standard keyword `const`. This keyword gives you greater optimization and control over allocation of storage for certain data objects. You can apply the `const` qualifier to the definition of any variable or array to ensure that its value is not altered.

If you define an object as `const`, the `.const` section allocates storage for the object. The `const` data storage allocation rule has two exceptions:

- If the keyword `volatile` is also specified in the definition of an object (for example, `volatile const int x`). Volatile keywords are assumed to be allocated to RAM. (The program does not modify a `const volatile` object, but something external to the program might.)
- If the object has automatic storage (function scope).

In both cases, the storage for the object is the same as if the `const` keyword were not used.

The placement of the `const` keyword within a definition is important. For example, the first statement below defines a constant pointer `p` to a variable `int`. The second statement defines a variable pointer `q` to a constant `int`:

```
int * const p = &x;
const int * q = &x;
```

Using the `const` keyword, you can define large constant tables and allocate them into system ROM. For example, to allocate a ROM table, you could use the following definition:

```
const int digits[] = {0,1,2,3,4,5,6,7,8,9};
```

6.5.2 The `cregister` Keyword

The compiler extends the C/C++ language by adding the `cregister` keyword to allow high level language access to control registers.

When you use the `cregister` keyword on an object, the compiler compares the name of the object to a list of standard control registers for the C28x (see [Table 6-2](#)). If the name matches, the compiler generates the code to reference the control register. If the name does not match, the compiler issues an error.

Table 6-2. Valid Control Registers

Register	Description
IER	Interrupt enable register
IFR	Interrupt flag register

The `cregister` keyword can be used only in file scope. The `cregister` keyword is not allowed on any declaration within the boundaries of a function. It can only be used on objects of type integer or pointer. The `cregister` keyword is not allowed on objects of any floating-point type or on any structure or union objects.

The `cregister` keyword does not imply that the object is volatile. If the control register being referenced is volatile (that is, can be modified by some external control), then the object must be declared with the `volatile` keyword also.

To use the control registers in [Table 6-2](#), you must declare each register as follows. The c28x.h include file defines all the control registers through this syntax:

```
extern cregister volatile unsigned int register ;
```

Once you have declared the register, you can use the register name directly, though in a limited manner. IFR is read only and can be set only by using the | (OR) operation with an immediate. IFR can be cleared only by using the & (AND) operation with an immediate. For example:

```
IFR |= 0x4;
IFR &= 0x0800
```

The IER register also can be used in an assignment other than OR and AND. Since the C28x architecture has limited instructions to manipulate these registers, the compiler terminates with the following message if illegal use of these registers is found:

```
>>> Illegal use of control register
```

See [Example 6-1](#) for an example that declares and uses control registers.

Example 6-1. Define and Use Control Registers

```
extern cregister volatile unsigned int IFR;
extern cregister volatile unsigned int IER;
extern int x;

main()
{
    IER = x;
    IER |= 0x100;
    printf("IER = %x\n", IER);

    IFR &= 0x100;
    IFR |= 0x100;
```

6.5.3 The far Keyword

The default address space of the C/C++ compiler is limited to the low 64K of memory. All pointers have a default size of 16 bits. The TMS320C28x supports addressing beyond 16 bits. In C, the compiler can access up to four megawords of data by extending the C language with the use of the far type qualifier. A far pointer has a 22-bit size.

Far support in C++

NOTE: The TMS320C/C++ compiler does not support the far keyword in C++. Access to far objects in C++ is available through the use of the large memory model option or through intrinsics. For more information, see [Section 6.6](#).

6.5.3.1 Semantics

Declaring an object far designates that the object be placed in far memory. This is accomplished by reserving space for that object in a different section than the default .bss. Global variables declared far are placed in a section called .ebss. This section can then be linked anywhere in the TMS320C28x data address space. const objects declared far are similarly placed in the .econst section.

Pointers that are declared to point at far objects have a size of 22 bits. They require two memory locations to store and require the XAR registers to perform addressing.

Pointer Distinction

NOTE: There is a distinction between declaring a pointer that points at far data (far int *pf) and declaring the pointer itself as far (int*far fp;).

Only global and static variables can be declared far. Nonstatic variables defined in a function (automatic storage class) cannot be far because these variables are allocated on the stack. The compiler will issue a warning and treat these variables as near.

It is meaningless to declare structure members as far. A structure declared far implies that all of its members are far.

6.5.3.2 Syntax

The compiler recognizes far or __far as synonymous keywords. The far keyword acts as a type qualifier. When declaring variables, far is used similarly to the type qualifiers const and volatile. [Example 6-2](#) shows the correct way to declare variables.

Example 6-2. Declaring Variables

```
int far sym;           // sym is located in far memory.
far int sym;           // sym is located in far memory.

struct S far s1;       // Likewise for structure s1.

int far *ptr;           // This declares a pointer that points to a far int.
                        // The variable ptr is itself near.

int * far ptr;          // This declares a pointer to a near int. The variable
                        // ptr, however, is located in far memory.

int far * far ptr;      // The pointer and the object it points to are both far.

int far *func();        // Function that returns a pointer to a far int.

int far *memcpy_ff(far void *dest, const far void *src, int count);
                        // Function that takes two far pointers as arguments
                        // and returns a far pointer.

int *far func()         // ERROR: Declares the function as far. Since the
                        // program address space is flat 22-bit, this has no
                        // meaning. Far applies to data only.

int func();
{
int far x;              // ERROR: Far only applies to global/static variables.
:                       // Auto variables on the stack are required to be near
:

int far *ptr            // Ok, since the pointer is on the stack, but points
                        // to far
}

struct S               // Declaring structure members as far is meaningless,
{                       // unless it's a pointer to far. Structure objects
int a;                 // can, of course, be declared far.
int far b;
int far *ptr;
};
```

6.5.3.3 far Run-Time Library Support

The run-time library has been extended to include far versions of most run-time-support functions that have pointers as arguments, return values, or that reference run-time-support global variables. There is also support for managing a far heap. Far run-time-support does not include the C I/O routines or any functions that reference C I/O routines. For more information about far run-time support, see [Section 8.2](#).

6.5.3.4 far Pointer Math

The ANSI/ISO standard states that valid pointer operations are assignment of pointers of the same type, adding or subtracting a pointer and an integer, subtracting or comparing two pointers to members of the same array, and assigning or comparing to zero. All other pointer arithmetic is illegal.

These rules apply to far pointers. The result of subtracting two far pointers is a 16-bit integer type. This implies that the compiler does not support pointer subtraction for arrays larger than 64K words in size.

6.5.3.5 far String Constants

For information about placing string constants in far memory, see [Section 7.1.8](#) and [Section 7.1.9](#).

6.5.3.6 Allocating .econst to Program Memory

For information about how to copy the .econst section from program to data memory at boot time, see [Section 7.1.3](#).

6.5.4 The interrupt Keyword

The compiler extends the C/C++ language by adding the interrupt keyword, which specifies that a function is treated as an interrupt function.

Functions that handle interrupts follow special register-saving rules and a special return sequence. The implementation stresses safety. The interrupt routine does not assume that the C run-time conventions for the various CPU register and status bits are in effect; instead, it re-establishes any values assumed by the run-time environment. When C/C++ code is interrupted, the interrupt routine must preserve the contents of all machine registers that are used by the routine or by any function called by the routine. When you use the interrupt keyword with the definition of the function, the compiler generates register saves based on the rules for interrupt functions and the special return sequence for interrupts.

You can only use the interrupt keyword with a function that is defined to return void and that has no parameters. The body of the interrupt function can have local variables and is free to use the stack or global variables. For example:

```
interrupt void int_handler()
{
    unsigned int flags;
    ...
}
```

The name c_int00 is the C/C++ entry point. This name is reserved for the system reset interrupt. This special interrupt routine initializes the system and calls the function main. Because it has no caller, c_int00 does not save any registers.

Use the alternate keyword, __interrupt, if you are writing code for strict ANSI/ISO mode (using the --strict_ansi compiler option).

HWI Objects and the interrupt Keyword

NOTE: The interrupt keyword must not be used when BIOS HWI objects are used in conjunction with C functions. The HWI_enter/HWI_exit macros and the HWI dispatcher contain this functionality, and the use of the C modifier can cause negative results.

6.5.5 The restrict Keyword

To help the compiler determine memory dependencies, you can qualify a pointer, reference, or array with the restrict keyword. The restrict keyword is a type qualifier that can be applied to pointers, references, and arrays. Its use represents a guarantee by you, the programmer, that within the scope of the pointer declaration the object pointed to can be accessed only by that pointer. Any violation of this guarantee renders the program undefined. This practice helps the compiler optimize certain sections of code because aliasing information can be more easily determined.

In [Example 6-3](#), the restrict keyword is used to tell the compiler that the function func1 is never called with the pointers a and b pointing to objects that overlap in memory. You are promising that accesses through a and b will never conflict; therefore, a write through one pointer cannot affect a read from any other pointers. The precise semantics of the restrict keyword are described in the 1999 version of the ANSI/ISO C Standard.

Example 6-3. Use of the restrict Type Qualifier With Pointers

```
void func1(int * restrict a, int * restrict b)
{
    /* func1's code here */
}
```

[Example 6-4](#) illustrates using the restrict keyword when passing arrays to a function. Here, the arrays c and d should not overlap, nor should c and d point to the same array.

Example 6-4. Use of the restrict Type Qualifier With Arrays

```
void func2(int c[restrict], int d[restrict])
{
    int i;

    for(i = 0; i < 64; i++)
    {
        c[i] += d[i];
        d[i] += 1;
    }
}
```

At this time the restrict keyword is useful only for FPU targets. For non-FPU targets restrict is ignored.

6.5.6 The volatile Keyword

The compiler eliminates redundant memory accesses whenever possible, using data flow analysis to figure out when it is legal. However, some memory accesses may be special in some way that the compiler cannot see, and in such cases you must use the volatile keyword to prevent the compiler from optimizing away something important. The compiler does not optimize out any accesses to variables declared volatile. The number and order of accesses of a volatile variable are exactly as they appear in the C/C++ code, no more and no less.

There are different ways to understand how volatile works, but fundamentally it is a hint to the compiler that something it cannot understand is going on, and so the compiler should not try to be over-clever.

Any variable which might be modified by something external to the obvious control flow of the program (such as an interrupt service routine) must be declared volatile. This tells the compiler that an interrupt function might modify the value at any time, so the compiler should not perform optimizations which will change the number or order of accesses of that variable. This is the primary purpose of the volatile keyword.

In the following example, the loop intends to wait for a location to be read as 0xFF:

```
unsigned int *ctrl;
while (*ctrl !=0xFF);
```

However, in this example, `*ctrl` is a loop-invariant expression, so the loop is optimized down to a single-memory read. To get the desired result, define `ctrl` as:

```
volatile unsigned int *ctrl;
```

Here the `*ctrl` pointer is intended to reference a hardware location, such as an interrupt flag.

Volatile must also be used when accessing memory locations that represent memory-mapped peripheral devices. Such memory locations might change value in ways that the compiler cannot predict. These locations might change if accessed, or when some other memory location is accessed, or when some signal occurs.

Volatile must also be used for local variables in a function which calls `setjmp`, if the value of the local variables needs to remain valid if a `longjmp` occurs.

Example 6-5. Volatile for Local Variables With `setjmp`

```
#include <stdlib.h>
jmp_buf context;
void function()
{
    volatile int x = 3;
    switch(setjmp(context))
    {
        case 0: setup(); break;
        default:
        {
            printf("x == %d\n", x); /* We can only reach here if longjmp
                                     has occurred; because x's lifetime
                                     begins before the setjmp and lasts
                                     through the longjmp, the C standard
                                     requires x be declared "volatile" */

            break;
        }
    }
}
```

6.6 Accessing far Memory From C++

Accessing far memory is handled differently with C and C++ code. The following sections describe accessing far memory from C++ using the `-ml` option or intrinsics. See [Section 6.5.3](#) for information on using the `far` keyword to access far memory from C code.

6.6.1 Using the Large Memory Model (`--large_memory_model` Option)

Since there is no support for the `far` keyword in C++ code, the large memory model option is provided. The `--large_memory_model` option forces the compiler to view the TMS320C28x architecture as having a flat 22-bit address space. When you compile with the `--large_memory_model` option, all pointers are considered to be 22-bit pointers. There is no 64K word limit on a data type size.

The assembler `--large_memory_model` option is used to allow conditional compilation of 16-bit code with large memory model code. The `LARGE_MODEL` symbol is predefined by the assembler and automatically set to false unless the `--large_memory_model` option is used. When compiling for FPU targets, large memory model is assumed. The compiler aborts with an error message if the small model is specified with `--float_support={fpu32|fpu64}`.

The run-time-support libraries support the large memory model through conditional compilation. When compiling the run-time-support libraries, the `LARGE_MODEL` symbol must be defined. This symbol is needed if any of the run-time-support functions that pass a `size_t` argument or return a `size_t` argument are accessed in your code. This symbol is also needed if the run-time-support `va_arg` or `offsetof( )` macro is used. Therefore, you should use the `--define` compiler option (see [Section 2.3.1](#)) to predefine the `LARGE_MODEL` symbol when compiling under the large memory model.

6.6.2 Using Intrinsics to Access far Memory in C++

The `far` keyword extends the C language only. There is no support for the `far` keyword in C++. Intrinsics are provided to allow access to far memory in C++, along with heap management support routines in the C++ run-time-support library if the large memory model is not used. The intrinsics accept a long integer type that represents an address. The return value of the intrinsic is an implicit far pointer that can be dereferenced to provide access to these basic data types: word, long, float, long long, and long double.

- `__farptr_to_word` (long address)
- `__farptr_to_long` (long address)
- `__farptr_to_float` (long address)
- `__farptr_to_llong` (long address)
- `__farptr_to_ldouble` (long address)

There are two methods used for generating long addresses that can access far memory:

- You can use the C++ run-time-support library heap management functions which are provided in the C++ run-time-support library:
 - `long far_calloc` (unsigned long num, unsigned long size)
 - `long far_malloc` (unsigned long size)
 - `long far_realloc` (long ptr, unsigned long size)
 - `void far_free` (long ptr)

These functions allocate memory in the far heap. The intrinsics can then be used to access that memory. For example:

```
#include <stdlib.h>;
```

```
extern int x;
extern long y;
extern float z;
```

```
extern void func1 (int a);
extern void func2 (long b);
extern void func3 (float c);
```

```
//create a far object on the heap
```

```

long farint = far_malloc (sizeof (int))
long farlong = far_malloc (sizeof (long));
long farfloat = far_malloc (sizeof (float));

//assign a value to the far object
*__farptr_to_word (farint) = 1;
*__farptr_to_word (farint) = x;
*__farptr_to_long (farlong) = 78934;
*__farptr_to_long (farlong) = y;
*__farptr_to_float (farfloat) = 4.56;
*__farptr_to_float (farfloat) = z;

//use far object in expression
x = *__farptr_to_word (farint) + x;
y = *__farptr_to_long (farlong) + y;
z = *__farptr_to_float (farfloat) + z;

//use as argument to function
func1 (*__farptr_to_word (farint));
func2 (*__farptr_to_long (farlong));
func3 (*__farptr_to_float (farfloat));

//free the far object
far_free (farint);
far_free (farlong);
far_free (farfloat);

```

- The `DATA_SECTION` pragma can be used along with inline assembly to place variables in a data section that is linked in far memory. The in-line assembly is used to create a long address to those variables. The intrinsics can then be used to access those variables. For example:

```

#pragma DATA_SECTION (var, ".mydata")
int var;
extern const long var_addr;
asm ("\t .sect .const");
asm ("var_addr .long var");
int x;
x = *__farptr_to_word (var_addr);

```

6.7 C++ Exception Handling

The compiler supports all the C++ exception handling features as defined by the ANSI/ISO 14882 C++ Standard. More details are discussed in *The C++ Programming Language, Third Edition* by Bjarne Stroustrup.

The compiler `--exceptions` option enables exception handling. The compiler's default is no exception handling support.

For exceptions to work correctly, all C++ files in the application must be compiled with the `--exceptions` option, regardless of whether exceptions occur in a particular file. Mixing exception-enabled object files and libraries with object files and libraries that do not have exceptions enabled can lead to undefined behavior.

Exception handling requires support in the run-time-support library, which come in exception-enabled and exception-disabled forms; you must link with the correct form. When using automatic library selection (the default), the linker automatically selects the correct library [Section 4.3.1.1](#). If you select the library manually, you must use run-time-support libraries whose name contains `_eh` if you enable exceptions.

Using `--exceptions` causes the compiler to insert exception handling code. This code will increase the code size of the program and execution time, even if no exceptions are thrown.

See [Section 8.1](#) for details on the run-time libraries.

6.8 Register Variables and Parameters

The C/C++ compiler treats register variables (variables defined with the register keyword) differently, depending on whether you use the `--opt_level (-O)` option.

- **Compiling with optimization**

The compiler ignores any register definitions and allocates registers to variables and temporary values by using an algorithm that makes the most efficient use of registers.

- **Compiling without optimization**

If you use the register keyword, you can suggest variables as candidates for allocation into registers. The compiler uses the same set of registers for allocating temporary expression results as it uses for allocating register variables.

The compiler attempts to honor all register definitions. If the compiler runs out of appropriate registers, it frees a register by moving its contents to memory. If you define too many objects as register variables, you limit the number of registers the compiler has for temporary expression results. This limit causes excessive movement of register contents to memory.

Any object with a scalar type (integral, floating point, or pointer) can be defined as a register variable. The register designator is ignored for objects of other types, such as arrays.

The register storage class is meaningful for parameters as well as local variables. Normally, in a function, some of the parameters are copied to a location on the stack where they are referenced during the function body. The compiler copies a register parameter to a register instead of the stack, which speeds access to the parameter within the function.

For more information about register conventions, see [Section 7.2](#).

6.9 The asm Statement

The C/C++ compiler can embed assembly language instructions or directives directly into the assembly language output of the compiler. This capability is an extension to the C/C++ language—the *asm* statement. The *asm* (or `__asm`) statement provides access to hardware features that C/C++ cannot provide. The *asm* statement is syntactically like a call to a function named *asm*, with one string constant argument:

```
asm(" assembler text ");
```

The compiler copies the argument string directly into your output file. The assembler text must be enclosed in double quotes. All the usual character string escape codes retain their definitions. For example, you can insert a `.byte` directive that contains quotes as follows:

```
asm("STR: .byte \"abc\"");
```

The inserted code must be a legal assembly language statement. Like all assembly language statements, the line of code inside the quotes must begin with a label, a blank, a tab, or a comment (asterisk or semicolon). The compiler performs no checking on the string; if there is an error, the assembler detects it. For more information about the assembly language statements, see the *TMS320C28x Assembly Language Tools User's Guide*.

The *asm* statements do not follow the syntactic restrictions of normal C/C++ statements. Each can appear as a statement or a declaration, even outside of blocks. This is useful for inserting directives at the very beginning of a compiled module.

Use the alternate statement `__asm("assembler text")` if you are writing code for strict ANSI/ISO C mode (using the `--strict_ansi` option).

NOTE: Avoid Disrupting the C/C++ Environment With asm Statements

Be careful not to disrupt the C/C++ environment with asm statements. The compiler does not check the inserted instructions. Inserting jumps and labels into C/C++ code can cause unpredictable results in variables manipulated in or around the inserted code. Directives that change sections or otherwise affect the assembly environment can also be troublesome.

Be especially careful when you use optimization with asm statements. Although the compiler cannot remove asm statements, it can significantly rearrange the code order near them and cause undesired results.

NOTE: Use Single asm Statement for the RPT Instruction

When adding a C28x RPT instruction, do not use a separate asm statement for RPT and the repeated instruction. The compiler could insert debug directives between asm directives and the assembler does not allow any directives between the RPT and the repeated instruction. For example, to insert a RPT MAC instruction, use the following:

```
asm("\tRPT #10\n\t|MAC P, *XAR4++, *XAR7++");
```

6.10 Pragma Directives

Pragma directives tell the compiler how to treat a certain function, object, or section of code. The C28x C/C++ compiler supports the following pragmas:

- CHECK_MISRA (See [Section 6.10.1](#))
- CLINK (See [Section 6.10.2](#))
- CODE_ALIGN (See [Section 6.10.3](#))
- CODE_SECTION (See [Section 6.10.4](#))
- DATA_SECTION (See [Section 6.10.5](#))
- DIAG_SUPPRESS, DIAG_REMARK, DIAG_WARNING, DIAG_ERROR, and DIAG_DEFAULT (See [Section 6.10.6](#))
- FAST_FUNC_CALL (See [Section 6.10.7](#))
- FUNC_EXT_CALLED (See [Section 6.10.8](#))
- FUNCTION_OPTIONS (See [Section 6.10.9](#))
- INTERRUPT (See [Section 6.10.10](#))
- MUST_ITERATE (See [Section 6.10.11](#))
- NO_HOOKS (See [Section 6.10.12](#))
- RESET_MISRA (See [Section 6.10.13](#))
- RETAIN (See [Section 6.10.14](#))
- SET_CODE_SECTION (See [Section 6.10.15](#))
- SET_DATA_SECTION (See [Section 6.10.15](#))
- UNROLL (See)

The arguments *func* and *symbol* cannot be defined or declared inside the body of a function. You must specify the pragma outside the body of a function; and the pragma specification must occur before any declaration, definition, or reference to the func or symbol argument. If you do not follow these rules, the compiler issues a warning and may ignore the pragma.

For the pragmas that apply to functions or symbols (except CLINK and RETAIN), the syntax for the pragmas differs between C and C++. In C, you must supply the name of the object or function to which you are applying the pragma as the first argument. In C++, the name is omitted; the pragma applies to the declaration of the object or function that follows it.

6.10.1 The CHECK_MISRA Pragma

The CHECK_MISRA pragma enables/disables MISRA-C:2004 rules at the source level. This pragma is equivalent to using the --check_misra option.

The syntax of the pragma in C is:

```
#pragma CHECK_MISRA (" {all|required|advisory|none|rulespec} ");
```

The *rulespec* parameter is a comma-separated list of specifiers. See [Section 6.3](#) for details.

The RESET_MISRA pragma can be used to reset any CHECK_MISRA pragmas; see [Section 6.10.13](#).

6.10.2 The CLINK Pragma

The CLINK pragma can be applied to a code or data symbol. It causes a .link directive to be generated into the section that contains the definition of the symbol. The .link directive indicates to the linker that the section is eligible for removal during conditional linking. Therefore, if the section is not referenced by any other section in the application that is being compiled and linked, it will not be included in the output file result of the link.

The syntax of the pragma in C/C++ is:

```
#pragma CLINK (symbol )
```

The RETAIN pragma has the opposite effect of the CLINK pragma. See [Section 6.10.14](#) for more details.

6.10.3 The CODE_ALIGN Pragma

The CODE_ALIGN pragma aligns *func* along the specified alignment. The alignment *constant* must be a power of 2. The CODE_ALIGN pragma is useful if you have functions that you want to start at a certain boundary.

The syntax of the pragma in C is:

```
#pragma CODE_ALIGN ( func, constant );
```

The syntax of the pragma in C++ is:

```
#pragma CODE_ALIGN ( constant );
```

6.10.4 The CODE_SECTION Pragma

The CODE_SECTION pragma allocates space for the *symbol* in C, or the next symbol declared in C++, in a section named *section name*.

The syntax of the pragma in C is:

```
#pragma CODE_SECTION (symbol , "section name ")
```

The syntax of the pragma in C++ is:

```
#pragma CODE_SECTION (" section name ")
```

The CODE_SECTION pragma is useful if you have code objects that you want to link into an area separate from the .text section.

The following examples demonstrate the use of the CODE_SECTION pragma.

Example 6-6. Using the CODE_SECTION Pragma C Source File

```
char bufferA[80];
char bufferB[80];

#pragma CODE_SECTION(funcA, "codeA")

char funcA(int i);
char funcB(int i);

void main()
{
    char c;
    c = funcA(1);
    c = funcB(2);
}

char funcA (int i)
{
    return bufferA[i];
}

char funcB (int j)
{
    return bufferB[j];
}
```

Example 6-7. Generated Assembly Code From [Example 6-6](#)

```
.sect ".text"
.global _main;

*****
;* FNAME: _main                      FR SIZE: 2          *
;*                                  *
;* FUNCTION ENVIRONMENT              *
;*                                  *
;* FUNCTION PROPERTIES               *
;*                                  *
;*                                0 Parameter, 1 Auto, 0 SOE *
;*                                  *
*****

:_main:
    ADDB     SP,#2
    MOVB     AL,#1                ; |12|
    LCR      #_funcA              ; |12|
                                ; call occurs [#_funcA] ; |12|
    MOV      *-SP[1],AL           ; |12|
    MOVB     AL,#1                ; |13|
    LCR      #_funcB              ; |13|
                                ; call occurs [#_funcB] ; |13|
    MOV      *-SP[1],AL           ; |13|
    SUBB     SP,#2
    LRETR
    ; return occurs

    .sect "codeA"
    .global _funcA
*****
;* FNAME: _funcA                    FR SIZE: 1          *
;*                                  *
;* FUNCTION ENVIRONMENT              *
;*                                  *
;* FUNCTION PROPERTIES               *
```

Example 6-7. Generated Assembly Code From Example 6-6 (continued)

```

,*                                     0 Parameter, 1 Auto, 0 SOE      *
,* ****                                     ****
,*
_funcA:
    ADDB      SP, #1
    MOV       *-SP[1], AL          ; |17|
    MOVZ      AR6, *-SP[1]         ; |18|
    ADD       AR6, #_bufferA       ; |18|
    SUBB      SP, #1               ; |18|
    MOV       AL, *+XAR6[0]        ; |18|
    LRETR
    ;return occurs

    .sect     ".text"
    .global  _funcB;

,* ****                                     ****
,* FNAME: _funcB                      FR SIZE: 1                *
,* ****                                     ****
,* FUNCTION ENVIRONMENT                *
,* ****                                     ****
,* FUNCTION PROPERTIES                *
,* ****                                     ****
,*                                     0 Parameter, 1 Auto, 0 SOE      *
,* ****                                     ****
,*
_funcB:
    ADDB      SP, #1
    MOV       *-SP[1], AL          ; |22|
    MOVZ      AR6, *-SP[1]         ; |23|
    ADD       AR6, #_bufferB       ; |23|
    SUBB      SP, #1               ; |23|
    MOV       AL, *+XAR6[0]        ; |23|
    LRETR
    ;return occurs

```

6.10.5 The DATA_SECTION Pragma

The DATA_SECTION pragma allocates space for the *symbol* in C, or the next symbol declared in C++, in a section named *section name*.

The syntax of the pragma in C is:

```
#pragma DATA_SECTION ( symbol , " section name ");
```

The syntax of the pragma in C++ is:

```
#pragma DATA_SECTION (" section name ");
```

The DATA_SECTION pragma is useful if you have data objects that you want to link into an area separate from the .bss section.

Example 6-8 through Example 6-10 demonstrate the use of the DATA_SECTION pragma.

Example 6-8. Using the DATA_SECTION Pragma C Source File

```

#pragma DATA_SECTION(bufferB, "my_sect")
char bufferA[512];
char bufferB[512];

```

Example 6-9. Using the DATA_SECTION Pragma C++ Source File

```
char bufferA[512];  
#pragma DATA_SECTION("my_sect")  
char bufferB[512];
```

Example 6-10. Using the DATA_SECTION Pragma Assembly Source File

```
        .global _bufferA  
        .bss    _bufferA, 512, 4  
        .global _bufferB  
_bufferB: .usect  "my_sect", 512, 4
```

6.10.6 The Diagnostic Message Pragmas

The following pragmas can be used to control diagnostic messages in the same ways as the corresponding command line options:

Pragma	Option	Description
DIAG_SUPPRESS <i>num</i>	-pds= <i>num</i> [, <i>num</i> ₂ , <i>num</i> ₃ ...]	Suppress diagnostic <i>num</i>
DIAG_REMARK <i>num</i>	-pdsr= <i>num</i> [, <i>num</i> ₂ , <i>num</i> ₃ ...]	Treat diagnostic <i>num</i> as a remark
DIAG_WARNING <i>num</i>	-pdsw= <i>num</i> [, <i>num</i> ₂ , <i>num</i> ₃ ...]	Treat diagnostic <i>num</i> as a warning
DIAG_ERROR <i>num</i>	-pdse= <i>num</i> [, <i>num</i> ₂ , <i>num</i> ₃ ...]	Treat diagnostic <i>num</i> as an error
DIAG_DEFAULT <i>num</i>	n/a	Use default severity of the diagnostic

The syntax of the pragmas in C is:

```
#pragma DIAG_XXX [=]num[, num2, num3...]
```

The diagnostic affected (*num*) is specified using either an error number or an error tag name. The equal sign (=) is optional. Any diagnostic can be overridden to be an error, but only diagnostics with a severity of discretionary error or below can have their severity reduced to a warning or below, or be suppressed. The diag_default pragma is used to return the severity of a diagnostic to the one that was in effect before any pragmas were issued (i.e., the normal severity of the message as modified by any command-line options).

The diagnostic identifier number is output along with the message when the -pden command line option is specified.

6.10.7 The FAST_FUNC_CALL Pragma

The FAST_FUNC_CALL pragma, when applied to a function, generates a TMS320C28x FFC instruction to call the function instead of the CALL instruction. Refer to the *TMS320C28x DSP CPU and Instruction Set User's Guide* for more details on the FFC instruction.

The syntax of the pragma in C is:

```
#pragma FAST_FUNC_CALL ( func );
```

The syntax of the pragma in C++ is:

```
#pragma FAST_FUNC_CALL ( func );
```

The FAST_FUNC_CALL pragma should be applied only to a call to an assembly function that returns with the LB *XAR7 instruction. See [Section 7.4.1](#) for information on combining C/C++ and assembly code.

Since this pragma should be applied only to assembly functions, if the compiler finds a definition for *func* in the file scope, it issues a warning and ignores the pragma.

The following example demonstrates the use of the FAST_FUNC_CALL pragma.

Example 6-11. Using the FAST_FUNC_CALL Pragma Assembly Function

```
_add_long:
    ADD ACC, *-SP[2]
    LB *XAR7
```

Example 6-12. Using the FAST_FUNC_CALL Pragma C Source File

```
#pragma FAST_FUNC_CALL (add_long);

long add_long(long, long);

void foo()
{
    long x, y;
    x = 0xffff;
    y = 0xff;
    y = add_long(x, y);
}
```

Example 6-13. Generated Assembly File

```

*****
/*
/* FNAME: _foo                                FR SIZE: 6          *
/*
/*
/* FUNCTION ENVIRONMENT                        *
/*
/*
/* FUNCTION PROPERTIES                        *
/*
/*                                2 Parameter, 4 Auto, 0 SOE      *
/*
*****

foo:
    ADDB    SP,#6
    MOVB    ACC,#255
    MOVL    XAR6,#65535                ; |8|
    MOVL    *-SP[6],ACC
    MOVL    *-SP[2],ACC                ; |10|
    MOVL    *-SP[4],XAR6                ; |8|
    MOVL    ACC,*-SP[4]                ; |10|
    FFC     XAR7,#_add_long            ; |10|
    ; call occurs [#_add_long]         ; |10|
    MOVL    *-SP[6],ACC                ; |10|
    SUBB    SP,#6
    LRETR
    ; return occurs

```

6.10.8 The FUNC_EXT_CALLED Pragma

When you use the `--program_level_compile` option, the compiler uses program-level optimization. When you use this type of optimization, the compiler removes any function that is not called, directly or indirectly, by main. You might have C/C++ functions that are called by hand-coded assembly instead of main.

The `FUNC_EXT_CALLED` pragma specifies to the optimizer to keep these C functions or any other functions that these C/C++ functions call. These functions act as entry points into C/C++.

The pragma must appear before any declaration or reference to the function that you want to keep. In C, the argument *func* is the name of the function that you do not want removed. In C++, the pragma applies to the next function declared.

The syntax of the pragma in C is:

```
#pragma FUNC_EXT_CALLED ( func );
```

The syntax of the pragma in C++ is:

```
#pragma FUNC_EXT_CALLED;
```

Except for `_c_int00`, which is the name reserved for the system reset interrupt for C/C++ programs, the name of the interrupt (the *func* argument) does not need to conform to a naming convention.

When you use program-level optimization, you may need to use the `FUNC_EXT_CALLED` pragma with certain options. See [Section 3.3.2](#).

6.10.9 The **FUNCTION_OPTIONS** Pragma

The **FUNCTION_OPTIONS** pragma allows you to compile a specific function in a C or C++ file with additional command-line compiler options. The affected function will be compiled as if the specified list of options appeared on the command line after all other compiler options. In C, the pragma is applied to the function specified. In C++, the pragma is applied to the next function.

The syntax of the pragma in C is:

```
#pragma FUNCTION_OPTIONS ( func, "additional options" );
```

The syntax of the pragma in C++ is:

```
#pragma FUNCTION_OPTIONS( "additional options" );
```

6.10.10 The **INTERRUPT** Pragma

The **INTERRUPT** pragma enables you to handle interrupts directly with C code. In C, the argument *func* is the name of a function. In C++, the pragma applies to the next function declared.

The syntax of the pragma in C is:

```
#pragma INTERRUPT ( func );
```

The syntax of the pragma in C++ is:

```
#pragma INTERRUPT ;
```

The code for the function will return via the IRP (interrupt return pointer).

Except for `_c_int00`, which is the name reserved for the system reset interrupt for C programs, the name of the interrupt (the *func* argument) does not need to conform to a naming convention.

On the FPU, there are two kinds of interrupts - High Priority Interrupt (HPI) and Low Priority Interrupt (LPI). High priority interrupts use a fast context save and cannot be nested. Low priority interrupts behave like normal C28x interrupts and can be nested.

The kind of interrupt can be specified by way of the interrupt pragma using an optional second argument. The C syntax of the pragma is:

```
#pragma INTERRUPT ( func , {HPI|LPI} );
```

The syntax of the pragma in C++ is:

```
#pragma INTERRUPT ( {HPI|LPI} );
```

To specify an HPI interrupt use HPI. To specify an LPI interrupt use LPI. On FPU, if no interrupt priority is specified LPI is assumed. Interrupts specified with the interrupt keyword also default to LPI.

HWI Objects and the **INTERRUPT Pragma**

NOTE: The **INTERRUPT** pragma must not be used when BIOS HWI objects are used in conjunction with C functions. The `HWI_enter/HWI_exit` macros and the HWI dispatcher contain this functionality, and the use of the C modifier can cause negative results.

6.10.11 The MUST_ITERATE Pragma

The MUST_ITERATE pragma specifies to the compiler certain properties of a loop. You guarantee that these properties are always true. Through the use of the MUST_ITERATE pragma, you can guarantee that a loop executes a specific number of times. Anytime the UNROLL pragma is applied to a loop, MUST_ITERATE should be applied to the same loop. For loops the MUST_ITERATE pragma's third argument, *multiple*, is the most important and should always be specified.

Furthermore, the MUST_ITERATE pragma should be applied to any other loops as often as possible. This is because the information provided via the pragma (especially the minimum number of iterations) aids the compiler in choosing the best loops and loop transformations (that is, software pipelining and nested loop transformations). It also helps the compiler reduce code size.

No statements are allowed between the MUST_ITERATE pragma and the for, while, or do-while loop to which it applies. However, other pragmas, such as UNROLL and PROB_ITERATE, can appear between the MUST_ITERATE pragma and the loop.

6.10.11.1 The MUST_ITERATE Pragma Syntax

The syntax of the pragma for C and C++ is:

```
#pragma MUST_ITERATE ( min, max, multiple );
```

The arguments *min* and *max* are programmer-guaranteed minimum and maximum trip counts. The trip count is the number of times a loop iterates. The trip count of the loop must be evenly divisible by *multiple*. All arguments are optional. For example, if the trip count could be 5 or greater, you can specify the argument list as follows:

```
#pragma MUST_ITERATE(5);
```

However, if the trip count could be any nonzero multiple of 5, the pragma would look like this:

```
#pragma MUST_ITERATE(5, , 5); /* Note the blank field for max */
```

It is sometimes necessary for you to provide min and multiple in order for the compiler to perform unrolling. This is especially the case when the compiler cannot easily determine how many iterations the loop will perform (that is, the loop has a complex exit condition).

When specifying a multiple via the MUST_ITERATE pragma, results of the program are undefined if the trip count is not evenly divisible by *multiple*. Also, results of the program are undefined if the trip count is less than the minimum or greater than the maximum specified.

If no min is specified, zero is used. If no max is specified, the largest possible number is used. If multiple MUST_ITERATE pragmas are specified for the same loop, the smallest max and largest min are used.

6.10.11.2 Using MUST_ITERATE to Expand Compiler Knowledge of Loops

Through the use of the MUST_ITERATE pragma, you can guarantee that a loop executes a certain number of times. The example below tells the compiler that the loop is guaranteed to run exactly 10 times:

```
#pragma MUST_ITERATE(10,10);
```

```
for(i = 0; i < trip_count; i++) { ...
```

In this example, the compiler attempts to generate a software pipelined loop even without the pragma. However, if MUST_ITERATE is not specified for a loop such as this, the compiler generates code to bypass the loop, to account for the possibility of 0 iterations. With the pragma specification, the compiler knows that the loop iterates at least once and can eliminate the loop-bypassing code.

MUST_ITERATE can specify a range for the trip count as well as a factor of the trip count. For example:

```
pragma MUST_ITERATE(8, 48, 8);
```

```
for(i = 0; i < trip_count; i++) { ...
```

This example tells the compiler that the loop executes between 8 and 48 times and that the trip_count variable is a multiple of 8 (8, 16, 24, 32, 40, 48). The multiple argument allows the compiler to unroll the loop.

You should also consider using `MUST_ITERATE` for loops with complicated bounds. In the following example:

```
for(i2 = ipos[2]; i2 < 40; i2 += 5) { ...
```

The compiler would have to generate a divide function call to determine, at run time, the exact number of iterations performed. The compiler will not do this. In this case, using `MUST_ITERATE` to specify that the loop always executes eight times allows the compiler to attempt to generate a software pipelined loop:

```
#pragma MUST_ITERATE(8, 8);
```

```
for(i2 = ipos[2]; i2 < 40; i2 += 5) { ...
```

6.10.12 The `NO_HOOKS` Pragma

The `NO_HOOKS` pragma prevents entry and exit hook calls from being generated for a function.

The syntax of the pragma in C is:

```
#pragma NO_HOOKS ( func );
```

The syntax of the pragma in C++ is:

```
#pragma NO_HOOKS;
```

See [Section 2.12](#) for details on entry and exit hooks.

6.10.13 The `RESET_MISRA` Pragma

The `RESET_MISRA` pragma resets the specified MISRA-C:2004 rules to the state they were before any `CHECK_MISRA` pragmas (see [Section 6.10.1](#)) were processed. For instance, if a rule was enabled on the command line but disabled in the source, the `RESET_MISRA` pragma resets it to enabled. This pragma accepts the same format as the `--check_misra` option, except for the "none" keyword.

The syntax of the pragma in C is:

```
#pragma RESET_MISRA (" {all|required|advisory|rulespec} ")
```

The *rulespec* parameter is a comma-separated list of specifiers. See [Section 6.3](#) for details.

6.10.14 The `RETAIN` Pragma

The `RETAIN` pragma can be applied to a code or data symbol. It causes a `.retain` directive to be generated into the section that contains the definition of the symbol. The `.retain` directive indicates to the linker that the section is ineligible for removal during conditional linking. Therefore, regardless whether or not the section is referenced by another section in the application that is being compiled and linked, it will be included in the output file result of the link.

The syntax of the pragma in C/C++ is:

```
#pragma RETAIN ( symbol )
```

The `CLINK` pragma has the opposite effect of the `RETAIN` pragma. See [Section 6.10.2](#) for more details.

6.10.15 The SET_CODE_SECTION and SET_DATA_SECTION Pragmas

These pragmas can be used to set the section for all declarations below the pragma.

The syntax of the pragmas in C/C++ is:

```
#pragma SET_CODE_SECTION ("section name")
```

```
#pragma SET_DATA_SECTION ("section name")
```

In [Example 6-14](#) x and y are put in the section mydata. To reset the current section to the default used by the compiler, a blank parameter should be passed to the pragma. An easy way to think of the pragma is that it is like applying the CODE_SECTION or DATA_SECTION pragma to all symbols below it.

Example 6-14. Setting Section With SET_DATA_SECTION Pragma

```
#pragma SET_DATA_SECTION("mydata")
int x;
int y;
#pragma SET_DATA_SECTION()
```

The pragmas apply to both declarations and definitions. If applied to a declaration and not the definition, the pragma that is active at the declaration is used to set the section for that symbol. Here is an example:

Example 6-15. Setting a Section With SET_CODE_SECTION Pragma

```
#pragma SET_CODE_SECTION("func1")
extern void func1();
#pragma SET_CODE_SECTION()
...
void func1() { ... }
```

In [Example 6-15](#) func1 is placed in section func1. If conflicting sections are specified at the declaration and definition, a diagnostic is issued.

The current CODE_SECTION and DATA_SECTION pragmas and GCC attributes can be used to override the SET_CODE_SECTION and SET_DATA_SECTION pragmas. For example:

Example 6-16. Overriding SET_DATA_SECTION Setting

```
#pragma DATA_SECTION(x, "x_data")
#pragma SET_DATA_SECTION("mydata")
int x;
int y;
#pragma SET_DATA_SECTION()
```

In [Example 6-16](#) x is placed in x_data and y is placed in mydata. No diagnostic is issued for this case.

The pragmas work for both C and C++. In C++, the pragmas are ignored for templates and for implicitly created objects, such as implicit constructors and virtual function tables.

6.11 The `_Pragma` Operator

The C28x C/C++ compiler supports the C99 preprocessor `_Pragma()` operator. This preprocessor operator is similar to `#pragma` directives. However, `_Pragma` can be used in preprocessing macros (`#defines`).

The syntax of the operator is:

```
_Pragma (" string_literal ");
```

The argument *string_literal* is interpreted in the same way the tokens following a `#pragma` directive are processed. The *string_literal* must be enclosed in quotes. A quotation mark that is part of the *string_literal* must be preceded by a backward slash.

You can use the `_Pragma` operator to express `#pragma` directives in macros. For example, the `DATA_SECTION` syntax:

```
#pragma DATA_SECTION( func ," section " );
```

Is represented by the `_Pragma()` operator syntax:

```
_Pragma ("DATA_SECTION( func ,\" section \")")
```

The following code illustrates using `_Pragma` to specify the `DATA_SECTION` pragma in a macro:

```
...

#define EMIT_PRAGMA(x) _Pragma(#x)
#define COLLECT_DATA(var) EMIT_PRAGMA(DATA_SECTION(var, "mysection"))

COLLECT_DATA(x)
int x;

...
```

The `EMIT_PRAGMA` macro is needed to properly expand the quotes that are required to surround the section argument to the `DATA_SECTION` pragma.

6.12 Object File Symbol Naming Conventions (Linknames)

Each externally visible identifier is assigned a unique symbol name to be used in the object file, a so-called *linkname*. This name is assigned by the compiler according to an algorithm which depends on the name, type, and source language of the symbol. This algorithm may add a prefix to the identifier (typically an underscore), and it may *mangle* the name. This algorithm may *mangle* the name.

The linkname for all objects and functions is the same as the name in the C source with an added underscore prefix. This prevents any C identifier from colliding with any identifier in the assembly code namespace, such as an assembler keyword.

Name mangling encodes the types of the parameters of a function in the linkname for a function. Name mangling only occurs for C++ functions which are not declared 'extern "C"'. Mangling allows function overloading, operator overloading, and type-safe linking. Be aware that the return value of the function is not encoded in the mangled name, as C++ functions cannot be overloaded based on the return value.

The mangling algorithm used closely follows that described in The Annotated Reference Manual (ARM).

For example, the general form of a C++ linkname for a function named `func` is:

```
_func__F parmcodes
```

Where *parmcodes* is a sequence of letters that encodes the parameter types of `func`.

For this simple C++ source file:

```
int foo(int i){ }    //global C++ function
```

This is the resulting assembly code:

```
_foo__Fi
```

The linkname of foo is `_foo__Fi`, indicating that foo is a function that takes a single argument of type int. To aid inspection and debugging, a name demangling utility is provided that demangles names into those found in the original C++ source. See [Chapter 9](#) for more information.

6.13 Initializing Static and Global Variables

The ANSI/ISO C standard specifies that global (extern) and static variables without explicit initializations must be initialized to 0 before the program begins running. This task is typically done when the program is loaded. Because the loading process is heavily dependent on the specific environment of the target application system, the compiler itself makes no provision for initializing to 0 otherwise uninitialized static storage class variables at run time. It is up to your application to fulfill this requirement.

Initialize Global Objects

NOTE: You should explicitly initialize all global objects which you expected the compiler would set to zero by default.

6.13.1 Initializing Static and Global Variables With the Linker

If your loader does not preinitialize variables, you can use the linker to preinitialize the variables to 0 in the object file. For example, in the linker command file, use a fill value of 0 in the .bss section:

```
SECTIONS
{
    ...

    .bss: {} = 0x00;
    ...
}
```

Because the linker writes a complete load image of the zeroed .bss section into the output COFF file, this method can have the unwanted effect of significantly increasing the size of the output file (but not the program).

If you burn your application into ROM, you should explicitly initialize variables that require initialization. The preceding method initializes .bss to 0 only at load time, not at system reset or power up. To make these variables 0 at run time, explicitly define them in your code.

For more information about linker command files and the SECTIONS directive, see the linker description information in the *TMS320C28x Assembly Language Tools User's Guide*.

6.13.2 Initializing Static and Global Variables With the const Type Qualifier

Static and global variables of type `const` without explicit initializations are similar to other static and global variables because they might not be preinitialized to 0 (for the same reasons discussed in [Section 6.13](#)). For example:

```
const int zero;      /* may not be initialized to 0 */
```

However, the initialization of `const` global and static variables is different because these variables are declared and initialized in a section called .const. For example:

```
const int zero = 0   /* guaranteed to be 0 */
```

This corresponds to an entry in the .const section:

```
.sect .const
_zero
.word 0
```

This feature is particularly useful for declaring a large table of constants, because neither time nor space is wasted at system startup to initialize the table. Additionally, the linker can be used to place the .const section in ROM.

You can use the `DATA_SECTION` pragma to put the variable in a section other than .const. For example, the following C code:

```
#pragma DATA_SECTION (var, ".mysect");
```

```
const int zero=0;

is compiled into this assembly code:

.sect      .mysect
_zero
.word     0
```

6.14 Changing the ANSI/ISO C Language Mode

The `--kr_compatible`, `--relaxed_ansi`, and `--strict_ansi` options let you specify how the C/C++ compiler interprets your source code. You can compile your source code in the following modes:

- Normal ANSI/ISO mode
- K&R C mode
- Relaxed ANSI/ISO mode
- Strict ANSI/ISO mode

The default is normal ANSI/ISO mode. Under normal ANSI/ISO mode, most ANSI/ISO violations are emitted as errors. Strict ANSI/ISO violations (those idioms and allowances commonly accepted by C/C++ compilers, although violations with a strict interpretation of ANSI/ISO), however, are emitted as warnings. Language extensions, even those that conflict with ANSI/ISO C, are enabled.

K&R C mode does not apply to C++ code.

6.14.1 Compatibility With K&R C (`--kr_compatible` Option)

The ANSI/ISO C/C++ language is a superset of the de facto C standard defined in Kernighan and Ritchie's *The C Programming Language*. Most programs written for other non-ANSI/ISO compilers correctly compile and run without modification.

There are subtle changes, however, in the language that can affect existing code. Appendix C in *The C Programming Language* (second edition, referred to in this manual as K&R) summarizes the differences between ANSI/ISO C and the first edition's C standard (the first edition is referred to in this manual as K&R C).

To simplify the process of compiling existing C programs with the ANSI/ISO C/C++ compiler, the compiler has a K&R option (`--kr_compatible`) that modifies some semantic rules of the language for compatibility with older code. In general, the `--kr_compatible` option relaxes requirements that are stricter for ANSI/ISO C than for K&R C. The `--kr_compatible` option does not disable any new features of the language such as function prototypes, enumerations, initializations, or preprocessor constructs. Instead, `--kr_compatible` simply liberalizes the ANSI/ISO rules without revoking any of the features.

The specific differences between the ANSI/ISO version of C and the K&R version of C are as follows:

- The integral promotion rules have changed regarding promoting an unsigned type to a wider signed type. Under K&R C, the result type was an unsigned version of the wider type; under ANSI/ISO, the result type is a signed version of the wider type. This affects operations that perform differently when applied to signed or unsigned operands; namely, comparisons, division (and mod), and right shift:

```
unsigned short u;
int i;
if (u < i)          /* SIGNED comparison, unless --kr_compatible used */
```
- ANSI/ISO prohibits combining two pointers to different types in an operation. In most K&R compilers, this situation produces only a warning. Such cases are still diagnosed when `--kr_compatible` is used, but with less severity:

```
int *p;
char *q = p;        /* error without --kr_compatible, warning with --kr_compatible */
```
- External declarations with no type or storage class (only an identifier) are illegal in ANSI/ISO but legal in K&R:

```
a;                  /* illegal unless --kr_compatible used */
```
- ANSI/ISO interprets file scope definitions that have no initializers as *tentative definitions*. In a single module, multiple definitions of this form are fused together into a single definition. Under K&R, each definition is treated as a separate definition, resulting in multiple definitions of the same object and

usually an error. For example:

```
int a;
int a;           /* illegal if --kr_compatible used, OK if not */
```

Under ANSI/ISO, the result of these two definitions is a single definition for the object a. For most K&R compilers, this sequence is illegal, because int a is defined twice.

- ANSI/ISO prohibits, but K&R allows objects with external linkage to be redeclared as static:

```
extern int a;
static int a;    /* illegal unless --kr_compatible used */
```

- Unrecognized escape sequences in string and character constants are explicitly illegal under ANSI/ISO but ignored under K&R:

```
char c = '\q';   /* same as 'q' if --kr_compatible used, error if not */
```

- ANSI/ISO specifies that bit fields must be of type int or unsigned. With --kr_compatible, bit fields can be legally defined with any integral type. For example:

```
struct s
{
    short f : 2;    /* illegal unless --kr_compatible used */
};
```

- K&R syntax allows a trailing comma in enumerator lists:

```
enum { a, b, c, }; /* illegal unless --kr_compatible used */
```

- K&R syntax allows trailing tokens on preprocessor directives:

```
#endif NAME      /* illegal unless --kr_compatible used */
```

6.14.2 Enabling Strict ANSI/ISO Mode and Relaxed ANSI/ISO Mode (--strict_ansi and --relaxed_ansi Options)

Use the --strict_ansi option when you want to compile under strict ANSI/ISO mode. In this mode, error messages are provided when non-ANSI/ISO features are used, and language extensions that could invalidate a strictly conforming program are disabled. Examples of such extensions are the inline and asm keywords.

Use the --relaxed_ansi option when you want the compiler to ignore strict ANSI/ISO violations rather than emit a warning (as occurs in normal ANSI/ISO mode) or an error message (as occurs in strict ANSI/ISO mode). In relaxed ANSI/ISO mode, the compiler accepts extensions to the ANSI/ISO C standard, even when they conflict with ANSI/ISO C. The GCC language extensions described in [Section 6.15](#) are available in relaxed ANSI/ISO mode.

6.14.3 Enabling Embedded C++ Mode (--embedded_cpp Option)

The compiler supports the compilation of embedded C++. In this mode, some features of C++ are removed that are of less value or too expensive to support in an embedded system. When compiling for embedded C++, the compiler generates diagnostics for the use of omitted features.

Embedded C++ is enabled by compiling with the --embedded_cpp option.

Embedded C++ omits these C++ features:

- Templates
- Exception handling
- Run-time type information
- The new cast syntax
- The keyword mutable
- Multiple inheritance
- Virtual inheritance

Under the standard definition of embedded C++, namespaces and using-declarations are not supported. The C28x compiler nevertheless allows these features under embedded C++ because the C++ run-time-support library makes use of them. Furthermore, these features impose no run-time penalty.

The TMS320C28x compiler defines the `_embedded_cplusplus` macro for embedded C++ compile.

The run-time-support libraries supplied with the compiler can be used to link with a module compiled for embedded C++.

The compiler does not support embedded C++ run-time-support libraries.

6.15 GNU Language Extensions

The GNU compiler collection (GCC) defines a number of language features not found in the ANSI/ISO C and C++ standards. The definition and examples of these extensions (for GCC version 3.4) can be found at the GNU web site, <http://gcc.gnu.org/onlinedocs/gcc-3.4.6/gcc/C-Extensions.html>.

Most of these extensions are also available for C++ source code.

6.15.1 Extensions

Most of the GCC language extensions are available in the TI compiler when compiling in relaxed ANSI mode (`--relaxed_ansi`) or if the `--gcc` option is used.

The extensions that the TI compiler supports are listed in [Table 6-3](#), which is based on the list of extensions found at the GNU web site. The shaded rows describe extensions that are not supported.

Table 6-3. GCC Language Extensions

Extensions	Descriptions
Statement expressions	Putting statements and declarations inside expressions (useful for creating smart 'safe' macros)
Local labels	Labels local to a statement expression
Labels as values	Pointers to labels and computed gotos
Nested functions	As in Algol and Pascal, lexical scoping of functions
Constructing calls	Dispatching a call to another function
Naming types ⁽¹⁾	Giving a name to the type of an expression
typeof operator	typeof referring to the type of an expression
Generalized lvalues	Using question mark (?) and comma (,) and casts in lvalues
Conditionals	Omitting the middle operand of a ?: expression
long long	Double long word integers and long long int type
Hex floats	Hexadecimal floating-point constants
Complex	Data types for complex numbers
Zero length	Zero-length arrays
Variadic macros	Macros with a variable number of arguments
Variable length	Arrays whose length is computed at run time
Empty structures	Structures with no members
Subscripting	Any array can be subscripted, even if it is not an lvalue.
Escaped newlines	Slightly looser rules for escaped newlines
Multi-line strings ⁽¹⁾	String literals with embedded newlines
Pointer arithmetic	Arithmetic on void pointers and function pointers
Initializers	Non-constant initializers
Compound literals	Compound literals give structures, unions, or arrays as values
Designated initializers	Labeling elements of initializers
Cast to union	Casting to union type from any member of the union
Case ranges	'Case 1 ... 9' and such
Mixed declarations	Mixing declarations and code
Function attributes	Declaring that functions have no side effects, or that they can never return
Attribute syntax	Formal syntax for attributes
Function prototypes	Prototype declarations and old-style definitions

⁽¹⁾ Feature defined for GCC 3.0; definition and examples at <http://gcc.gnu.org/onlinedocs/gcc-3.0.4/gcc/C-Extensions.html>

Table 6-3. GCC Language Extensions (continued)

Extensions	Descriptions
C++ comments	C++ comments are recognized.
Dollar signs	A dollar sign is allowed in identifiers.
Character escapes	The character ESC is represented as \e
Variable attributes	Specifying the attributes of variables
Type attributes	Specifying the attributes of types
Alignment	Inquiring about the alignment of a type or variable
Inline	Defining inline functions (as fast as macros)
Assembly labels	Specifying the assembler name to use for a C symbol
Extended asm	Assembler instructions with C operands
Constraints	Constraints for asm operands
Alternate keywords	Header files can use __const__, __asm__, etc
Explicit reg vars	Defining variables residing in specified registers
Incomplete enum types	Define an enum tag without specifying its possible values
Function names	Printable strings which are the name of the current function
Return address	Getting the return or frame address of a function (limited support)
Other built-ins	Other built-in functions (see Section 6.15.5)
Vector extensions	Using vector instructions through built-in functions
Target built-ins	Built-in functions specific to particular targets
Pragmas	Pragmas accepted by GCC
Unnamed fields	Unnamed struct/union fields within structs/unions
Thread-local	Per-thread variables

6.15.2 Function Attributes

The following GCC function attributes are supported: `always_inline`, `const`, `constructor`, `deprecated`, `format`, `format_arg`, `malloc`, `noinline`, `noreturn`, `pure`, `section`, `unused`, `used` and `warn_unused_result`.

The `format` attribute is applied to the declarations of `printf`, `fprintf`, `sprintf`, `snprintf`, `vprintf`, `vfprintf`, `vsprintf`, `vsnprintf`, `scanf`, `fscanf`, `vfscanf`, `vscanf`, `vsscanf`, and `sscanf` in `stdio.h`. Thus when GCC extensions are enabled, the data arguments of these functions are type checked against the format specifiers in the format string argument and warnings are issued when there is a mismatch. These warnings can be suppressed in the usual ways if they are not desired.

The `malloc` attribute is applied to the declarations of `malloc`, `calloc`, `realloc` and `memalign` in `stdlib.h`.

6.15.3 Variable Attributes

The following variable attributes are supported: `aligned`, `deprecated`, `mode`, `packed`, `section`, `transparent_union`, `unused`, and `used`.

The `used` attribute is defined in GCC 4.2 (see <http://gcc.gnu.org/onlinedocs/gcc-4.2.4/gcc/Variable-Attributes.html#Variable-Attributes>).

6.15.4 Type Attributes

The following type attributes are supported: `aligned`, `deprecated`, `packed`, `transparent_union`, and `unused`.

Members of a packed structure are stored as closely to each other as possible, omitting additional bytes of padding usually added to preserve word-alignment. For example, assuming a word-size of 4 bytes ordinarily has 3 bytes of padding between members `c1` and `i`, and another 3 bytes of trailing padding after member `c2`, leading to a total size of 12 bytes:

```
struct unpacked_struct { char c1; int i; char c2;};
```

However, the members of a packed struct are byte-aligned. Thus the following does not have any bytes of padding between or after members and totals 6 bytes:

```
struct __attribute__((__packed__)) packed_struct { char c1; int i; char c2; };
```

Subsequently, packed structures in an array are packed together without trailing padding between array elements.

Bit fields of a packed structure are bit-aligned. The byte alignment of adjacent struct members that are not bit fields does not change. However, there are no bits of padding between adjacent bit fields.

The packed attribute can only be applied to the original definition of a structure or union type. It cannot be applied with a typedef to a non-packed structure that has already been defined, nor can it be applied to the declaration of a struct or union object. Therefore, any given structure or union type can only be packed or non-packed, and all objects of that type will inherit its packed or non-packed attribute.

The packed attribute is not applied recursively to structure types that are contained within a packed structure. Thus, in the following example the member `s` retains the same internal layout as in the first example above. There is no padding between `c` and `s`, so `s` falls on an unaligned boundary:

```
struct __attribute__((__packed__)) outer_packed_struct { char c; struct unpacked_struct s; };
```

It is illegal to implicitly or explicitly cast the address of a packed struct member as a pointer to any non-packed type except an unsigned char. In the following example, `p1`, `p2`, and the call to `foo` are all illegal.

```
void foo(int *param);
struct packed_struct ps;

int *p1 = &ps.i;
int *p2 = (int *)&ps.i;
foo(&ps.i);
```

However, it is legal to explicitly cast the address of a packed struct member as a pointer to an unsigned char:

```
unsigned char *pc = (unsigned char *)&ps.i;
```

Packed can also be applied to enumerated types. On an enum, packed indicates that the smallest integral type should be used.

The TI compiler also supports an unpacked attribute for an enumeration type to allow you to indicate that the representation is to be an integer type that is no smaller than `int`; in other words, it is not *packed*.

6.15.5 Built-In Functions

The following builtin functions are supported: `__builtin_abs`, `__builtin_classify_type`, `__builtin_constant_p`, `__builtin_expect`, `__builtin_fabs`, `__builtin_fabsf`, `__builtin_frame_address`, `__builtin_labs`, `__builtin_memcpy`, and `__builtin_return_address`.

The `__builtin_frame_address` function always returns zero.

The `__builtin_return_address` function always returns zero.

6.16 Compiler Limits

Due to the variety of host systems supported by the C/C++ compiler and the limitations of some of these systems, the compiler may not be able to successfully compile source files that are excessively large or complex. In general, exceeding such a system limit prevents continued compilation, so the compiler aborts immediately after printing the error message. Simplify the program to avoid exceeding a system limit.

Some systems do not allow filenames longer than 500 characters. Make sure your filenames are shorter than 500.

The compiler has no arbitrary limits but is limited by the amount of memory available on the host system. On smaller host systems such as PCs, the optimizer may run out of memory. If this occurs, the optimizer terminates and the shell continues compiling the file with the code generator. This results in a file compiled with no optimization. The optimizer compiles one function at a time, so the most likely cause of this is a large or extremely complex function in your source module. To correct the problem, your options are:

- Don't optimize the module in question.

- Identify the function that caused the problem and break it down into smaller functions.
- Extract the function from the module and place it in a separate module that can be compiled without optimization so that the remaining functions can be optimized.

Run-Time Environment

This chapter describes the TMS320C28x C/C++ run-time environment. To ensure successful execution of C/C++ programs, it is critical that all run-time code maintain this environment. It is also important to follow the guidelines in this chapter if you write assembly language functions that interface with C/C++ code.

Topic	Page
7.1 Memory Model	119
7.2 Register Conventions	124
7.3 Function Structure and Calling Conventions	126
7.4 Interfacing C and C++ With Assembly Language	129
7.5 Interrupt Handling	138
7.6 Integer Expression Analysis	139
7.7 Floating-Point Expression Analysis	140
7.8 System Initialization	140

7.1 Memory Model

The C28x compiler treats memory as two linear blocks of program and data memory:

- Program memory contains executable code, initialization records, and switch tables.
- Data memory contains external variables, static variables, and the system stack.

Blocks of code or data generated by a C/C++ program are placed into contiguous blocks in the appropriate memory space.

The Linker Defines the Memory Map

NOTE: The linker, not the compiler, defines the memory map and allocates code and data into target memory. The compiler assumes nothing about the types of memory available, about any locations not available for code or data (holes), or about any locations reserved for I/O or control purposes. The compiler produces relocatable code that allows the linker to allocate code and data into the appropriate memory spaces.

For example, you can use the linker to allocate global variables into on-chip RAM or to allocate executable code into external ROM. You can allocate each block of code or data individually into memory, but this is not a general practice (an exception to this is memory-mapped I/O, although you can access physical memory locations with C/C++ pointer types).

7.1.1 Sections

The compiler produces relocatable blocks of code and data called *sections*. The sections are allocated into memory in a variety of ways to conform to a variety of system configurations. For more information about sections and allocating them, see the introductory object file information in the *TMS320C28x Assembly Language Tools User's Guide*.

There are two basic types of sections:

- **Initialized sections** contain data or executable code. The C/C++ compiler creates the following initialized sections:
 - The **.cinit section** and the **.pinit section** contain tables for initializing variables and constants. The C28x .cinit record is limited to 16 bits. This limits initialized objects to 64K.
 - The **.const section** contains string constants, switch tables, and data defined with the C/C++ qualifier *const* (provided the constant is not also defined as *volatile*).
 - The **.econst** section contains string constants, and the declaration and initialization of global and static variables (qualified by *far const* or the use of the large memory model) that are explicitly initialized and placed in far memory.
 - The **.switch** section contains tables for switch statements.
 - The **.text section** contains all the executable code as well as string literals and compiler-generated constants.
- **Uninitialized sections** reserve space in memory (usually RAM). A program can use this space at run time to create and store variables. The compiler creates the following uninitialized sections:
 - The **.bss section** reserves space for global and static variables. At boot or load time, the C/C++ boot routine copies data out of the .cinit section (which can be in ROM) and stores it in the .bss section.
 - The **.ebss section** reserves space for global and static variables defined as far (C only) or when the large memory model is used. At program startup time, the C/C++ boot routine copies data out of the .cinit section (which can be in ROM) and uses it for initializing variables in the .ebss section.
 - The **.stack section** reserves memory for the C/C++ software stack. This memory is used to pass arguments to functions and to allocate space for local variables.
 - The **.systemem section** reserves space for dynamic memory allocation. The reserved space is used by dynamic memory allocation routines, such as malloc, calloc, realloc, or new. If a C/C++ program does not use these functions, the compiler does not create the .systemem section.
 - The **.esystemem section** reserves space for dynamic memory allocation. The reserved space is used by far malloc functions. If a C/C++ program does not use far malloc, the compiler does not

create the .esysmem section.

The assembler creates the default sections .text, .bss, and .data. The C/C++ compiler, however, does not use the .data section. You can instruct the compiler to create additional sections by using the CODE_SECTION and DATA_SECTION pragmas (see [Section 6.10.4](#) and [Section 6.10.5](#)).

The linker takes the individual sections from different object files and combines sections that have the same name. The resulting output sections and the appropriate placement in memory for each section are listed in [Table 7-1](#). You can place these output sections anywhere in the address space as needed to meet system requirements.

Table 7-1. Summary of Sections and Memory Placement

Section	Type of Memory	Page	Section	Type of Memory	Page
.bss	RAM	1	.esysmem	RAM	1
.cinit	ROM or RAM	0	.pinit	ROM or RAM	0
.const	ROM or RAM	1	.stack	RAM	1
.data	ROM or RAM		.switch	ROM or RAM	0, 1
.ebss	RAM		.sysmem	RAM	1
.econst	ROM or RAM	1	.text	ROM or RAM	0

You can use the SECTIONS directive in the linker command file to customize the section-allocation process. For more information about allocating sections into memory, see the linker description chapter in the *TMS320C28x Assembly Language Tools User's Guide*.

7.1.2 C/C++ System Stack

The C/C++ compiler uses a stack to:

- Allocate local variables
- Pass arguments to functions
- Save the processor status
- Save function return addresses
- Save temporary results

The run-time stack grows up from low addresses to higher addresses. By default, the stack is allocated in the .stack section. (See the run-time-support boot.asm file.) The compiler uses the hardware stack pointer (SP) to manage this stack.

Linking the .stack Section

NOTE: The .stack section has to be linked into the low 64K of data memory. The SP is a 16-bit register and cannot access addresses beyond 64K.

For frames that exceed 63 words in size (the maximum reach of the SP offset addressing mode), the compiler uses XAR2 as a frame pointer (FP). Each function invocation creates a new frame at the top of the stack, from which local and temporary variables are allocated. The FP points at the beginning of this frame to access memory locations that can not be referenced directly using the SP.

The stack size is set by the linker. The linker also creates a global symbol, __STACK_SIZE_, and assigns it a value equal to the size of the stack in bytes. The default stack size is 1K words. You can change the size of the stack at link time by using the --stack_size linker option.

Stack Overflow

NOTE: The compiler provides no means to check for stack overflow during compilation or at run time. A stack overflow disrupts the run-time environment, causing your program to fail. Be sure to allow enough space for the stack to grow. You can use the --entry_hook option to add code to the beginning of each function to check for stack overflow; see [Section 2.12](#).

7.1.3 Allocating .const/.econst to Program Memory

If your system configuration does not support allocating an initialized section such as .const/.econst to data memory, then you have to allocate the .const/.econst section to load in program memory and run in data memory. At boot time, copy the .const/.econst section from program to data memory. The following sequence shows how you can perform this task.

Modify the boot routine:

1. Extract boot.asm from the source library:
ar2000 -x rts.src boot.asm
2. Edit boot.asm and change the CONST_COPY flag to 1:
CONST_COPY .set 1
3. Assemble boot.asm:
cl2000 -v28 boot.asm
4. Archive the boot routine into the object library:
ar2000 -r rts2800.lib boot.obj

For a .const section, link with a linker command file that contains the following entries:

```
MEMORY
{
    PAGE 0 : PROG : ...
    PAGE 1 : DATA : ...
}
SECTIONS
{
    ...
    .const : load = PROG PAGE 1, run = DATA PAGE 1
    {
        /* GET RUN ADDRESS */
        __const_run = .;
        /* MARK LOAD ADDRESS */
        *(.c_mark)
        /* ALLOCATE .const */
        *(.const)
        /* COMPUTE LENGTH */
        __const_length = . - __const_run;
    }
    ...
}
```

For an .econst section, link with a linker command file that contains the following entries:

```
SECTIONS
{
    ...
    .econst : load = PROG PAGE 1, run = DATA PAGE 1
    {
        /* GET RUN ADDRESS */
        __econst_run = .;
        /* MARK LOAD ADDRESS */
        *(.ec_mark)
        /* ALLOCATE .econst */
        *(.econst)
        /* COMPUTE LENGTH */
        __econst_length = - .__econst_run;
    }
    ...
}
```

In your linker command file, you can substitute the name PROG with the name of a memory area on page 0 and DATA with the name of a memory area on page 1. The rest of the command file must use the names as above. The code in boot.asm that is enabled when you change CONST_COPY to 1 depends on the linker command file using these names in this manner. To change any of the names, you must edit boot.asm and change the names in the same way.

7.1.4 Dynamic Memory Allocation

The run-time-support library supplied with the C28x compiler contains several functions (such as malloc, calloc, and realloc) that allow you to allocate memory dynamically for variables at run time.

Memory is allocated from a global pool, or heap, that is defined in the .sysmem section. You can set the size of the .sysmem section by using the --heap_size=size option with the linker command. The linker also creates a global symbol, __SYSMEM_SIZE, and assigns it a value equal to the size of the heap in words. The default size is 1K words. For more information on the --heap_size option, see the linker description chapter in the *TMS320C28x Assembly Language Tools User's Guide*.

Dynamically allocated objects are not addressed directly (they are always accessed with pointers) and the memory pool is in a separate section (.sysmem); therefore, the dynamic memory pool can have a size limited only by the amount of available memory in your system. To conserve space in the .bss section, you can allocate large arrays from the heap instead of defining them as global or static. For example, instead of a definition such as:

```
struct big table[100];
```

Use a pointer and call the malloc function:

```
struct big *table
table = (struct big *)malloc(100*sizeof(struct big));
```

A far memory pool or far heap, is also available through several far run-time-support library functions (such as far_malloc, far_calloc, and far_realloc). The far heap is created by the linker. The linker also creates a global symbol, __FAR_SYSMEM_SIZE, and assigns it a value equal to the size of the far heap in words. The default size is 1k words. You can change the size of the far memory pool, at link time, with the -farheap option. Specify the size of the memory pool as a constant after the -farheap option on the link command line.

Heap Size Restriction

NOTE: The near heap implementation restricts the size of the heap to 32k words. This constraint does not apply to the far heap.

7.1.5 Initialization of Variables

The C/C++ compiler produces code that is suitable for use as firmware in a ROM-based system. In such a system, the initialization tables in the .cinit section are stored in ROM. At system initialization time, the C/C++ boot routine copies data from these tables (in ROM) to the initialized variables in .bss (RAM).

In situations where a program is loaded directly from an object file into memory and run, you can avoid having the .cinit section occupy space in memory. A loader can read the initialization tables directly from the object file (instead of from ROM) and perform the initialization directly at load time instead of at run time. You can specify this to the linker by using the --ram_model link option. For more information, see [Section 7.8](#).

7.1.6 Allocating Memory for Static and Global Variables

A unique, contiguous space is allocated for all static variables declared in a C/C++ program. The linker determines the address of the space. The compiler ensures that space for these variables is allocated in multiples of words so that each variable is aligned on a word boundary.

The C/C++ compiler expects global variables to be allocated into data memory. (It reserves space for them in .bss.) Variables declared in the same module are allocated into a single, contiguous block of memory.

7.1.7 Field/Structure Alignment

When the compiler allocates space for a structure, it allocates as many words as are needed to hold all of the structure's members and to comply with alignment constraints for each member.

All non-field types are aligned on word boundaries. Fields are allocated as many bits as requested. Adjacent fields are packed into adjacent bits of a word, but they do not overlap words. If a field would overlap into the next word, the entire field is placed into the next word.

Fields are packed as they are encountered; the least significant bits of the structure word are filled first.

7.1.8 Character String Constants

In C, a character string constant is used in one of the following ways:

- To initialize an array of characters. For example:

```
char s[] = "abc";
```

When a string is used as an initializer, it is simply treated as an initialized array; each character is a separate initializer. For more information about initialization, see [Section 7.8](#).

- In an expression. For example:

```
strcpy (s, "abc");
```

When a string is used in an expression, the string itself is defined in the .const section with the .string assembler directive, along with a unique label that points to the string; the terminating 0 byte is included. For example, the following lines define the string abc, and the terminating 0 byte (the label SL5 points to the string):

```
.sect ".const"
SL5: .string "abc",0
```

String labels have the form SL*n*, where *n* is a number assigned by the compiler to make the label unique. The number begins at 0 and is increased by 1 for each string defined. All strings used in a source module are defined at the end of the compiled assembly language module.

The label SL*n* represents the address of the string constant. The compiler uses this label to reference the string expression.

Because strings are stored in the .const section (possibly in ROM) and shared, it is bad practice for a program to modify a string constant. The following code is an example of incorrect string use:

```
const char *a = "abc"
a[1] = 'x';          /* Incorrect! */
```

7.1.9 far Character String Constants

In C, a character string constant can be placed in the .econst section. When initializing a character pointer or using a character in an expression, use the far keyword. For example:

far string constants are placed in the .econst section in the same manner as described in [Section 7.1.8](#). The far string labels have the form FSL*n*. This method is also used with the large memory model.

7.2 Register Conventions

Strict conventions associate specific registers with specific operations in the C/C++ environment. If you plan to interface an assembly language routine to a C/C++ program, you must understand and follow these register conventions.

The register conventions dictate how the compiler uses registers and how values are preserved across function calls. There are two types of register variable registers, save on entry and save on call. The distinction between these two types of registers is the method by which they are preserved across function calls. It is the called function's responsibility to preserve save-on-entry registers, and the calling function's responsibility to preserve save-on-call registers if you need to preserve that register's value.

7.2.1 TMS320C28x Register Use and Preservation

[Table 7-2](#) summarizes how the compiler uses the TMS320C28x registers and shows which registers are defined to be preserved across function calls.

The FPU uses all the C28x registers as well as the registers described in [Table 7-3](#).

Table 7-2. Register Use and Preservation Conventions

Register	Usage	Save on Entry	Save on Call
AL	Expressions, argument passing, and returns 16-bit results from functions	No	Yes
AH	Expressions and argument passing	No	Yes
DP	Data page pointer (used to access global variables)	No	No
PH	Multiply expressions and Temp variables	No	Yes
PL	Multiply expressions and Temp variables	No	Yes
SP	Stack pointer		(1)(1)
T	Multiply and shift expressions	No	Yes
TL	Multiply and shift expressions	No	Yes
XAR0	Pointers and expressions	No	Yes
XAR1	Pointers and expressions	Yes	No
XAR2	Pointers, expressions, and frame pointing (when needed)	Yes	No
XAR3	Pointers and expressions	Yes	No
XAR4	Pointers, expressions, argument passing, and returns 16- and 22-bit pointer values from functions	No	Yes
XAR5	Pointers, expressions, and arguments	No	Yes
XAR6	Pointers and expressions	No	Yes
XAR7	Pointers, expressions, indirect calls and branches (used to implement pointers to functions and switch statements)	No	Yes

(1) The SP is preserved by the convention that everything pushed on the stack is popped off before returning.

Table 7-3. FPU Register Use and Preservation Conventions

Register	Usage	Save on Entry	Save on Call
R0H	Expressions, argument passing, and returns 32-bit float from functions	No	Yes
R1H	Expressions and argument passing	No	Yes
R2H	Expressions and argument passing	No	Yes
R3H	Expressions and argument passing	No	Yes
R4H	Expressions	Yes	No
R5H	Expressions	Yes	No
R6H	Expressions	Yes	No
R7H	Expressions	Yes	No

7.2.2 Status Registers

Table 7-4 shows all of the status fields used by the compiler. Presumed value is the value the compiler expects in that field upon entry to, or return from, a function; a dash in this column indicates the compiler does not expect a particular value. The modified column indicates whether code generated by the compiler ever modifies this field.

Table 7-4. Status Register Fields

Field	Name	Presumed Value	Modified
ARP	Auxiliary Register Pointer	-	Yes
C	Carry	-	Yes
N	Negative flag	-	Yes
OVM	Overflow mode	0 ⁽¹⁾	Yes
PAGE0	Direct/stack address mode	0 ⁽¹⁾	No
PM	Product shift mode	0 ⁽¹⁾	Yes
SPA	Stack pointer align bit	-	Yes (in interrupts)
SXM	Sign extension mode	-	Yes
TC	Test/control flag	-	Yes
V	Overflow flag	-	Yes
Z	Zero flag	-	Yes

⁽¹⁾ The initialization routine that sets up the C run-time environment sets these fields to the presumed value.

Table 7-5 shows the additional status fields used by the compiler for FPU Targets.

Table 7-5. Floating-Point Status Register (STF⁽¹⁾) Fields For FPU Targets Only

Field	Name	Presumed Value	Modified
LVF ^{(2) (3)}	Latched overflow float flag	-	Yes
LUF ^{(2) (3)}	Latched underflow float flag	-	Yes
NF ⁽²⁾	Negative float flag	-	Yes
ZF ⁽²⁾	Zero float flag	-	Yes
NI ⁽²⁾	Negative integer flag	-	Yes
ZI ⁽²⁾	Zero integer flag bit	-	Yes
TF ⁽²⁾	Test flag bit	-	Yes
RNDF32	Round F32 mode ⁽⁴⁾	-	Yes
RNDF64	Round F64 mode ⁽⁴⁾	-	Yes
SHDWS	Shadow mode status	-	Yes

⁽¹⁾ Unused STF register bits read 0 and writes are ignored.

⁽²⁾ Specified flags in the STF register can be exported to the ST0 register by way of the MOVST0 instruction.

⁽³⁾ The LVF and LUF flag signals can be connected to the PIE to generate an overflow-and-underflow interrupt. This can be a useful debug tool.

⁽⁴⁾ If RNDF32 or RNDF64 is 0, mode is round to zero (truncate), otherwise mode is round to nearest (even).

All other status register fields are not used and do not affect code generated by the compiler.


7.3 Function Structure and Calling Conventions

The C/C++ compiler imposes a strict set of rules on function calls. Except for special run-time support functions, any function that calls or is called by a C/C++ function must follow these rules. Failure to adhere to these rules can disrupt the C/C++ environment and cause a program to fail.

Figure 7-1 illustrates a typical function call. In this example, parameters that cannot be placed in registers are passed to the function on the stack. The function then allocates local variables and calls another function. This example shows the allocated local frame and argument block for the called function. Functions that have no local variables and do not require an argument block do not allocate a local frame.

The term *argument block* refers to the part of the local frame used to pass arguments to other functions. Parameters are passed to a function by moving them into the argument block rather than pushing them on the stack. The local frame and argument block are allocated at the same time.

Figure 7-1. Use of the Stack During a Function Call

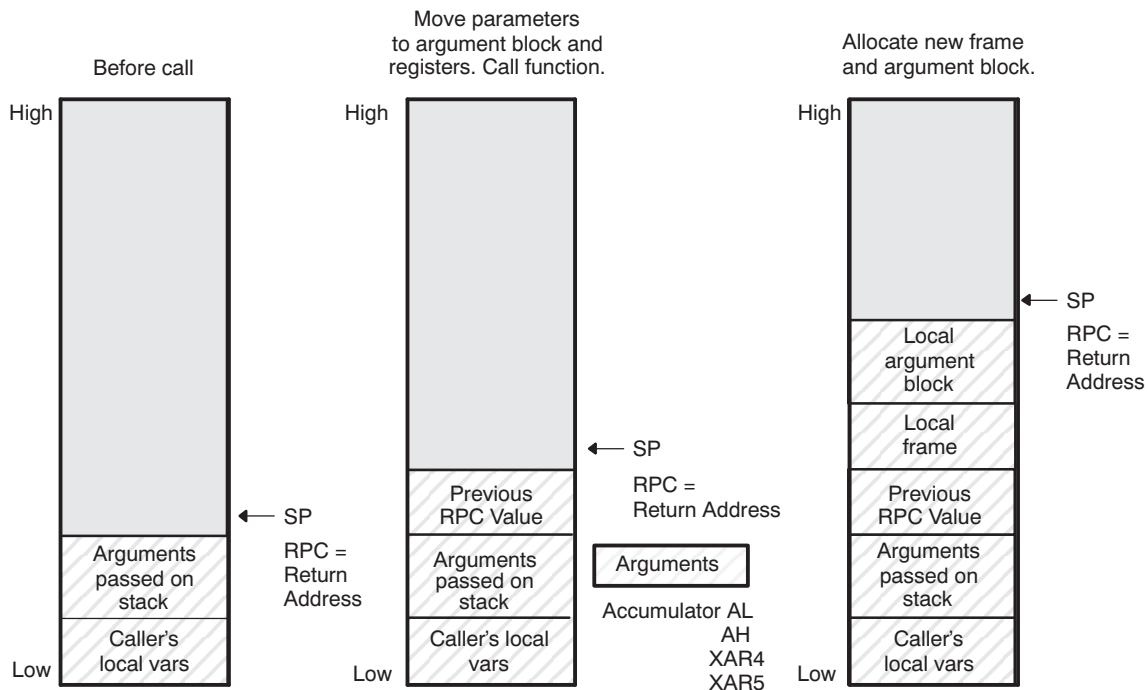

7.3.1 How a Function Makes a Call

A function (parent function) performs the following tasks when it calls another function (child function).

1. Any registers whose values are not necessarily preserved by the function being called (registers that are not save-on-entry (SOE) registers), but will be needed after the function returns are saved on the stack.
2. If the called function returns a structure, the calling function allocates the space for the structure and pass the address of that space to the called function as the first argument.
3. Arguments passed to the called function are placed in registers and, when necessary, placed on the stack.

Arguments are placed in registers using the following scheme:

- (a) If the target is FPU and there are any 32-bit float arguments, the first four float arguments are placed in registers R0H-R3H.
- (b) If there are any 64-bit integer arguments (long long), the first is placed in ACC and P (ACC holds the upper 32 bits and P holds the lower 32 bits). All other 64-bit arguments are placed on the stack in reverse order.

If the P register is used for argument passing, then prolog/epilog abstraction is disabled for that function. See [Section 3.10](#) for more information on abstraction.

- (c) If there are any 32-bit arguments (longs or floats) the first is placed in the 32-bit ACC (AH/AL). All other 32-bit arguments are placed on the stack in reverse order.

```
func1(long a, long long b, int c, int* d);
      stack  ACC/P  XAR5,  XAR4
```

- (d) Pointer arguments are placed in XAR4 and XAR5. All other pointers are placed on the stack.

- (e) Remaining 16-bit arguments are placed in the order AL, AH, XAR4, XAR5 if they are available.

4. Any remaining arguments not placed in registers are pushed on the stack in reverse order. That is, the leftmost argument that is placed on the stack is pushed on the stack last. All 32-bit arguments are aligned to even addresses on the stack.

A structure argument is passed as the address of the structure. The called function must make a local copy.

For a function declared with an ellipsis, indicating that it is called with varying numbers of arguments, the convention is slightly modified. The last explicitly declared argument is passed on the stack so that its stack address can act as a reference for accessing the undeclared arguments.

5. The stack pointer (SP) must be even-aligned by the parent function prior to making a call to the child function. This is done by incrementing the stack pointer by 1, if necessary. If needed, the coder should increment the SP before making the call.

Some examples of function calls that show where arguments are placed are listed below:

```
func1 (int a, int b, long c)
      XAR4  XAR5  AH/AL
func1 (long a, int b, long c) ;
      AH/AL  XAR4  stack
vararg (int a, int b, int c, ...)
      AL    AH    stack
```

6. The caller calls the function using the LCR instruction. The RPC register value is pushed on the stack. The return address is then stored in the RPC register.
7. The stack is aligned at function boundary.

7.3.2 How a Called Function Responds

A called function (child function) must perform the following tasks:

1. If the called function modifies XAR1, XAR2, or XAR3, it must save them, since the calling function assumes that the values of these registers are preserved upon return. If the target is FPU, then in addition to the C28x registers, the called function must save registers R4H, R5H, R6H or R7H, if it modifies any of them. Any other registers may be modified without preserving them.
2. The called function allocates enough space on the stack for any local variables, temporary storage area, and arguments to functions that this function might call. This allocation occurs once at the beginning of the function by adding a constant to the SP register.
3. The stack is aligned at function boundary.
4. If the called function expects a structure argument, it receives a pointer to the structure instead. If writes are made to the structure from within the called function, space for a local copy of the structure must be allocated on the stack and the local structure must be copied from the passes pointer to the structure. If no writes are made to the structure, it can be referenced in the called function indirectly through the pointer argument.

You must be careful to properly declare functions that accept structure arguments, both at the point where they are called (so that the structure argument is passed as an address) and at the point where they are declared (so the function knows to copy the structure to a local copy).

5. The called function executes the code for the function.
6. The called function returns a value. It is placed in a register using the following convention:

16-bit integer value	AL
32-bit integer value	ACC
64-bit integer value	ACC/P
16- or 22-bit pointer	XAR4

If the target is FPU and a 32-bit float value is returned, the called function places this value in R0H.

If the function returns a structure, the caller allocates space for the structure and passes the address of the return space to the called function in XAR4. To return a structure, the called function copies the structure to the memory block pointed by the extra argument.

In this way, the caller can be smart about telling the called function where to return the structure. For example, in the statement `s = f(x)`, where `S` is a structure and `F` is a function that returns a structure, the caller can actually make the call as `f(&s, x)`. The function `f` then copies the return structure directly into `s`, performing the assignment automatically.

If the caller does not use the return structure value, an address value of 0 can be passed as the first argument. This directs the called function not to copy the return structure.

You must be careful to properly declare functions that return structures both at the point where they are called (so that the extra argument is passed) and at the point where they are declared (so the function knows to copy the result). Returning 64-bit floating-point values (long double) are returned similarly to structures.

7. The called function deallocates the frame by subtracting the value that was added to the SP earlier.
8. The called function restores the values of all registers saved in .
9. The called function returns using the LRETR instruction. The PC is set to the value in the RPC register. The previous RPC value is popped from the stack and stored in the RPC register.

7.3.3 Special Case for a Called Function (Large Frames)

If the space that needs to be allocated on the stack (step 2 in the previous section) is larger than 63 words, additional steps and resources are required to ensure that all local nonregister variables can be accessed. Large frames require using a frame pointer register (XAR2) to reference local non-register variables within the frame. Prior to allocating space on the frame, the frame pointer is set up to point at the first argument on the stack that was passed on to the called function. If no incoming arguments are passed on to the stack, the frame pointer points to the return address of the calling function, which is at the top of the stack upon entry to the called function.

Avoid allocating large amounts of local data when possible. For example, do not declare large arrays within functions.

7.3.4 Accessing Arguments and Local Variables

A function accesses its local nonregister variables and its stack arguments indirectly through either the SP or the FP (frame pointer, designated to be XAR2). All local and argument data that can be accessed with the SP use the `*-SP [offset]` addressing mode since the SP always points one past the top of the stack and the stack grows toward larger addresses.

The PAGE0 Mode Bit Must Be Reset

NOTE: Since the compiler uses the `*-SP [offset]` addressing mode, the PAGE0 mode bit must be reset (set to 0).

The largest offset available using `*-SP [offset]` is 63. If an object is too far away from the SP to use this mode of access, the compiler uses the FP (XAR2). Since FP points at the bottom of the frame, accesses made with the FP use either `*+FP [offset]` or `*+FP [AR0/AR1]` addressing modes. Since large frames require utilizing XAR2 and possibly an index register, extra code and resources are required to make local accesses.

7.3.5 Allocating the Frame and Accessing 32-Bit Values in Memory

Some TMS320C28x instructions read and write 32 bits of memory at once (MOVL, ADDL, etc.). These instructions require that 32-bit objects be allocated on an even boundary. To ensure that this occurs, the compiler takes these steps:

1. It initializes the SP to an even boundary.
2. Because a call instruction adds 2 to the SP, it assumes that the SP is pointing at an even address.
3. It makes sure that the space allocated on the frame totals an even number, so that the SP points to an even address.
4. It makes sure that 32-bit objects are allocated to even addresses, relative to the known even address in the SP.
5. Because interrupts cannot assume that the SP is odd or even, it aligns the SP to an even address.

For more information on how these instructions access memory, see the *TMS320C28x Assembly Language Tools User's Guide*.

7.4 Interfacing C and C++ With Assembly Language

The following are ways to use assembly language with C/C++ code:

- Use separate modules of assembled code and link them with compiled C/C++ modules (see [Section 7.4.1](#)).
- Use assembly language variables and constants in C/C++ source (see [Section 7.4.2](#)).
- Use inline assembly language embedded directly in the C/C++ source (see [Section 7.4.4](#)).
- Use intrinsics in C/C++ source to directly call an assembly language statement (see [Section 7.4.5](#)).

7.4.1 Using Assembly Language Modules With C/C++ Code

Interfacing C/C++ with assembly language functions is straightforward if you follow the calling conventions defined in [Section 7.3](#), and the register conventions defined in [Section 7.2](#). C/C++ code can access variables and call functions defined in assembly language, and assembly code can access C/C++ variables and call C/C++ functions.

Follow these guidelines to interface assembly language and C:

- All functions, whether they are written in C/C++ or assembly language, must follow the register conventions outlined in [Section 7.2](#).
- Dedicated registers modified by a function must be preserved. Dedicated registers include:

XAR1	R4H (FPU only)
XAR2	R5H (FPU only)
XAR3	R6H (FPU only)
SP	R7H (FPU only)

If the SP is used normally, it does not need to be preserved explicitly. The assembly function is free to use the stack as long as anything that is pushed on the stack is popped back off before the function returns (thus preserving the SP).

Any register that is not dedicated can be used freely without being preserved.

- The stack pointer (SP) must be even-aligned by the parent function prior to making a call to the child function. This is done by incrementing the stack pointer by 1, if necessary. If needed, the coder should increment the SP before making the call.
- The stack is aligned at function boundary.
- Interrupt routines must save *all* the registers they use. For more information, see [Section 7.5](#).
- When you call a C/C++ function from assembly language, load the designated registers with arguments and push the remaining arguments onto the stack as described in [Section 7.3.1](#).

When accessing arguments passed in from a C/C++ function, these same conventions apply.

- Longs and floats are stored in memory with the least significant word at the lower address.

- Structures are returned as described in in [Section 7.3.2](#).
- No assembly module should use the .cinit section for any purpose other than autoinitialization of global variables. The C/C++ startup routine assumes that the .cinit section consists *entirely* of initialization tables. Disrupting the tables by putting other information in .cinit can cause unpredictable results.
- The compiler prepends an underscore (_) to the beginning of all identifiers. In assembly language modules, you must use the prefix _ for all objects that are to be accessible from C/C++. For example, a C/C++ object named x is called _x in assembly language. For identifiers that are to be used only in an assembly language module or modules, any name that does not begin with an underscore can be safely used without conflicting with a C/C++ identifier.
- The compiler assigns linknames to all external objects. Thus, when you are writing assembly language code, you must use the same linknames as those assigned by the compiler. See [Section 6.12](#) for more information.
- Any object or function declared in assembly language that is accessed or called from C/C++ must be declared with the .def or .global directive in the assembly language modifier. This declares the symbol as external and allows the linker to resolve references to it.

Likewise, to access a C/C++ function or object from assembly language, declare the C/C++ object with the .ref or .global directive in the assembly language module. This creates an undeclared external reference that the linker resolves.

- Because compiled code runs with the PAGE0 mode bit reset, if you set the PAGE0 bit to 1 in your assembly language function, you must set it back to 0 before returning to compiled code.
- If you define a structure in assembly and access it in C using extern struct, the structure should be blocked. The compiler assumes that structure definitions are blocked to optimize the DP load. So the definition should honor this assumption. You can block the structure by specifying the blocking flag in the .usect or .bss directive. See the *TMS320C28x Assembly Language Tools User's Guide* for more information on these directives.

[Example 7-1](#) illustrates a C++ function called main, which calls an assembly language function called asmfunc, [Example 7-2](#). The asmfunc function takes its single argument, adds it to the C++ global variable called gvar, and returns the result.

Example 7-1. Calling an Assembly Language Function From a C/C++ Program

```
extern "C"{
extern int asmfunc(int a); /* declare external asm function */
int gvar = 0;             /* define global variable          */
}

void main()
{
    int i = 5;
    i = asmfunc(i);       /* call function normally      */
}
```

Example 7-2. Assembly Language Program Called by [Example 7-1](#)

```
.global _gvar
.global _asmfunc

_asmfunc:
    MOVZ    DP, #_gvar
    ADDB    AL, #5
    MOV     @_gvar, AL
    LRETR
```

In the C++ program in [Example 7-1](#), the extern “C” declaration tells the compiler to use C naming conventions (i.e., no name mangling). When the linker resolves the .global _asmfunc reference, the corresponding definition in the assembly file will match.

The parameter i is passed in register AL.

7.4.2 Accessing Assembly Language Variables From C/C++

It is sometimes useful for a C/C++ program to access variables or constants defined in assembly language. There are several methods that you can use to accomplish this, depending on where and how the item is defined: a variable defined in the .bss section, a variable not defined in the .bss section, or a constant.

7.4.2.1 Accessing Assembly Language Global Variables

Accessing uninitialized variables from the .bss section or a section named with .usect is straightforward:

1. Use the .bss or .usect directive to define the variable.
2. Use the .def or .global directive to make the definition external.
3. Use the appropriate linkname in assembly language.
4. In C/C++, declare the variable as *extern* and access it normally.

[Example 7-4](#) and [Example 7-3](#) show how you can access a variable defined in .bss.

Example 7-3. Assembly Language Variable Program

```
* Note the use of underscores in the following lines

.bss    _var,1    ; Define the variable
.global _var      ; Declare it as external
```

Example 7-4. C Program to Access Assembly Language From [Example 7-3](#)

```
extern int var;      /* External variable */
var = 1;             /* Use the variable */
```

7.4.2.2 Accessing Assembly Language Constants

You can define global constants in assembly language by using the .set, .def, and .global directives, or you can define them in a linker command file using a linker assignment statement. These constants are accessible from C/C++ only with the use of special operators.

For normal variables defined in C/C++ or assembly language, the symbol table contains the *address of the value* of the variable. For assembler constants, however, the symbol table contains the *value* of the constant. The compiler cannot tell which items in the symbol table are values and which are addresses.

If you try to access an assembler (or linker) constant by name, the compiler attempts to fetch a value from the address represented in the symbol table. To prevent this unwanted fetch, you must use the & (address of) operator to get the value. In other words, if x is an assembly language constant, its value in C/C++ is &x.

You can use casts and #defines to ease the use of these symbols in your program, as in [Example 7-5](#) and [Example 7-6](#).

Example 7-5. Accessing an Assembly Language Constant From C

```
extern int table_size;      /*external ref */
#define TABLE_SIZE ((int) (&table_size))
```

Example 7-5. Accessing an Assembly Language Constant From C (continued)

```

        .                /* use cast to hide address-of */
        .
        .
for (I=0; i<TABLE_SIZE; ++I) /* use like normal symbol */

```

Example 7-6. Assembly Language Program for [Example 7-5](#)

```

_table_size .set    10000    ; define the constant
            .global _table_size ; make it global

```

Because you are referencing only the symbol's value as stored in the symbol table, the symbol's declared type is unimportant. In [Example 7-5](#), `int` is used. You can reference linker-defined symbols in a similar manner.

7.4.3 Sharing C/C++ Header Files With Assembly Source

You can use the `.cdecls` assembler directive to share C headers containing declarations and prototypes between C and assembly code. Any legal C/C++ can be used in a `.cdecls` block and the C/C++ declarations will cause suitable assembly to be generated automatically, allowing you to reference the C/C++ constructs in assembly code. For more information, see the C/C++ header files chapter in the *TMS320C28x Assembly Language Tools User's Guide*.

7.4.4 Using Inline Assembly Language

Within a C/C++ program, you can use the `asm` statement to insert a single line of assembly language into the assembly language file created by the compiler. A series of `asm` statements places sequential lines of assembly language into the compiler output with no intervening code. For more information, see [Section 6.9](#).

The `asm` statement is useful for inserting comments in the compiler output. Simply start the assembly code string with a semicolon (;) as shown below:

```
asm(" ;*** this is an assembly language comment");
```

NOTE: Using the asm Statement

Keep the following in mind when using the `asm` statement:

- Be extremely careful not to disrupt the C/C++ environment. The compiler does not check or analyze the inserted instructions.
 - Avoid inserting jumps or labels into C/C++ code because they can produce unpredictable results by confusing the register-tracking algorithms that the code generator uses.
 - Do not change the value of a C/C++ variable when using an `asm` statement. This is because the compiler does not verify such statements. They are inserted as is into the assembly code, and potentially can cause problems if you are not sure of their effect.
 - Do not use the `asm` statement to insert assembler directives that change the assembly environment.
 - Avoid creating assembly macros in C code and compiling with the `--symdebug:dwarf` (or `-g`) option. The C environment's debug information and the assembly macro expansion are not compatible.
-

7.4.5 Using Intrinsics to Access Assembly Language Statements

The C28x compiler recognizes a number of intrinsic operators. Intrinsics allow you to express the meaning of certain assembly statements that would otherwise be cumbersome or inexpressible in C/C++. Intrinsics are used like functions; you can use C/C++ variables with these intrinsics, just as you would with any normal function.

The intrinsics are specified with a leading underscore, and are accessed by calling them as you do a function. For example:

```
int x1, x2, y;
y = _sadd(x1, x2);

long lvar;

int ivar;

unsigned int uivar;

lvar = __mpyxu(ivar, uivar);
```

The intrinsics listed in [Table 7-6](#) are included. They correspond to the indicated TMS320C28x assembly language instruction(s). See the *TMS320C28x CPU and Instruction Set Reference Guide* for more information.

Table 7-6. TMS320C28x C/C++ Compiler Intrinsics

Intrinsic	Assembly Instruction(s)	Description
int __abs16_sat (int <i>src</i>);	SETC OVM MOV AH, <i>src</i> ABS ACC MOV <i>dst</i>, AH CLRC OVM	Clear the OVM status bit. Load <i>src</i> into AH. Take absolute value of ACC. Store AH into <i>dst</i> . Clear the OVM status bit.
void __add (int * <i>m</i> , int <i>b</i>);	ADD * <i>m</i>, <i>b</i>	Add the contents of memory location <i>m</i> to <i>b</i> and store the result in <i>m</i> , in an atomic way.
long __addcu (long <i>src1</i> , unsigned int <i>src2</i>);	ADDCU ACC, {<i>mem</i> <i>reg</i>}	The contents of <i>src2</i> and the value of the carry bit are added to ACC. The result is in ACC.
void __addl (long * <i>m</i> , long <i>b</i>);	ADDL * <i>m</i>, <i>b</i>	Add the contents of memory location <i>m</i> to <i>b</i> and store the result in <i>m</i> , in an atomic way.
void __and (int * <i>m</i> , int <i>b</i>);	AND * <i>m</i>, <i>b</i>	AND the contents of memory location <i>m</i> to <i>b</i> and store the result in <i>m</i> , in an atomic way.
int & __byte (int * <i>array</i> , unsigned int <i>byte_index</i>);	MOVB <i>array</i> [<i>byte_index</i>].LSB, <i>src</i> or MOVB <i>dst</i>, <i>array</i> [<i>byte_index</i>].LSB	The lowest addressable unit in C28x is 16 bits. Therefore, normally you cannot access 8-bit entities off a memory location. This intrinsic helps access an 8-bit quantity off a memory location, and can be invoked as follows: __byte(<i>array</i>, 5) = 10; <i>b</i> = __byte(<i>array</i>, 20);
void __dec (int * <i>m</i>);	DEC * <i>m</i>	Decrement the contents of memory location <i>m</i> in an atomic way.
unsigned int __disable_interrupts ();	PUSH ST1 SETC INTM, DBGM POP <i>reg16</i>	Disable interrupts and return the old value of the interrupt vector.
unsigned int __enable_interrupts ();	PUSH ST1 CLRC INTM, DBGM POP <i>reg16</i>	Enable interrupts and return the old value of the interrupt vector.
int __flip16 (int <i>src</i>);		Reverses order of bits in int <i>src</i> .
long __flip32 (long <i>src</i>);		Reverses order of bits in long <i>src</i> .
long long __flip64 (long long <i>src</i>);		Reverses order of bits in long long <i>src</i> .
void __inc (int * <i>m</i>);	INC *<i>m</i>	Increment the contents of memory location <i>m</i> in an atomic way.

Table 7-6. TMS320C28x C/C++ Compiler Intrinsics (continued)

Intrinsic	Assembly Instruction(s)	Description
<code>long=__IQ(long double A , int N);</code>		Convert the long double A into the correct IQN value returned as a long type. If both arguments are constants the compiler converts the arguments to the IQ value during compile time. Otherwise a call to the RTS routine, __IQ, is made. This intrinsic cannot be used to initialize global variables to the .cinit section.
<code>long dst =__IQmpy(long A, long B , int N);</code>	If $N == 0$: IMPYL {ACC P}, XT, B If $0 < N < 16$: IMPYL P, XT, B QMPYL ACC, XT, B LSR64 ACC:P, # N If $16 < N < 32$: IMPYL P, XT, B QMPYL ACC, XT, B LSL64 ACC:P, #(32-N) If $N == 32$: QMPYL {ACC P}, XT, B If N is a variable: IMPYL P, XT, B QMPYL ACC, XT, B MOV T, N LSR64 ACC:P, T	The <i>dst</i> becomes ACC or P, A becomes XT: The <i>dst</i> is ACC or P. If <i>dst</i> is ACC, the instruction takes 2 cycles. If <i>dst</i> is P, the instruction takes 1 cycle.
<code>long dst =__IQsat(long A, long max, long min);</code>	If <i>max</i> and <i>min</i> are 22-bit unsigned constants: MOVL ACC, A MOVL XAR n, # 22bits MINL ACC, P MOVL XAR n, # 22bits MAXL ACC, P If <i>max</i> and <i>min</i> are other constants: MOVL ACC, A MOV PL, # max lower 16 bits MOV PH, # max upper 16 bits MINL ACC, P MOV PL, # min lower 16 bits MOV PH, # min upper 16 bits MAXL ACC, P If <i>max</i> and/or <i>min</i> are variables: MOVL ACC, A MINL ACC, max MAXL ACC, min	The <i>dst</i> becomes ACC. Different code is generated based on the value of <i>max</i> and/or <i>min</i> .
<code>long dst =__IQxmpy(long A , long B, int N);</code>	If $N == 0$: IMPYL ACC/P, XT, B If $0 < N < 17$: IMPYL P, XT, B QMPYL ACC, XT, B LSL64 ACC:P, # N If $0 > N > -17$: QMPYL ACC, XT, B SETC SXM SFR ACC, #abs(N) If $16 < N < 32$: IMPYL P, XT, B QMPYL ACC, XT, B ASR64 ACC:P, # N If $N == 32$: IMPYL P, XT, B If $-16 > N > -33$: QMPYL ACC, XT, B SETC SXM SRF ACC, #16 SRF ACC, #abs(N)-16 If $32 < N < 49$: IMPYL ACC, XT, B LSL ACC, # N -32 If $-32 > N > -49$: QMPYL ACC, XT, B SETC SXM SFR ACC, #16 SFR ACC, #16	The <i>dst</i> becomes ACC or P; A becomes XT. Code is generated based on the value of N. The <i>dst</i> is in ACC or P. The <i>dst</i> is in ACC. The <i>dst</i> is in ACC. The <i>dst</i> is in P. The <i>dst</i> is in P. The <i>dst</i> is in ACC. The <i>dst</i> is in ACC. The <i>dst</i> is in ACC.

Table 7-6. TMS320C28x C/C++ Compiler Intrinsics (continued)

Intrinsic	Assembly Instruction(s)	Description
If $48 < N < 65$:	IMPYL ACC, XT, B LSL64 ACC:P, #16 LSL64 ACC:P, # N -48	The <i>dst</i> is in ACC.
If $-48 > N > -65$:	QMPYL ACC, XT, B SETC SXM SFR ACC, #16 SFR ACC, #16	The <i>dst</i> is in ACC.
long long __llmax (long long <i>dst</i> , long long <i>src</i>);	MAXL ACC, src.hi32 MAXCUL P, src.lo32	If <i>src</i> > <i>dst</i> , copy <i>src</i> to <i>dst</i> .
long long __llmin (long long <i>dst</i> , long long <i>src</i>);	MINL ACC, src.hi32 MINCUL P, src.lo32	If <i>src</i> < <i>dst</i> , copy <i>src</i> to <i>dst</i>
long __lmax (long <i>dst</i> , long <i>src</i>);	MAXL ACC, src	If <i>src</i> > <i>dst</i> , copy <i>src</i> to <i>dst</i> .
long __lmin (long <i>dst</i> , long <i>src</i>);	MINL ACC, src	If <i>src</i> < <i>dst</i> , copy <i>src</i> to <i>dst</i>
int __max (int <i>dst</i> , int <i>src</i>);	MAX dst, src	If <i>src</i> > <i>dst</i> , copy <i>src</i> to <i>dst</i>
int __min (int <i>dst</i> , int <i>src</i>);	MIN dst, src	If <i>src</i> < <i>dst</i> , copy <i>src</i> to <i>dst</i>
int __mov_byte (int * <i>src</i> , unsigned int <i>n</i>);	MOVB AX.LSB, *XARx[<i>n</i>] or MOVZ AR0/AR1, @ <i>n</i> MOVB AX.LSB, *XARx[{AR0 AR1}]	Return the 8-bit <i>n</i> th element of a byte table pointed to by <i>src</i> . This intrinsic is provided for backward compatibility. The intrinsic __byte is preferred as it returns a reference. Nothing can be done with __mov_byte () that cannot be done with __byte ().
long __mpy (int <i>src1</i> , int <i>src2</i>);	MPY ACC, src1 , # src2	Move <i>src1</i> to the T register. Multiply T by a 16-bit immediate (<i>src2</i>). The result is in ACC.
long __mpyb (int <i>src1</i> , uint <i>src2</i>);	MPYB {ACC P}, T, # src2	Multiply <i>src1</i> (the T register) by an unsigned 8-bit immediate (<i>src2</i>). The result is in ACC or P.
long __mpy_mov_t (int <i>src1</i> , int <i>src2</i> , int * <i>dst2</i>);	MPY ACC, T, src2 MOV dst2, T	Multiply <i>src1</i> (the T register) by <i>src2</i> . The result is in ACC. Move <i>src1</i> to <i>dst2</i> .
unsigned long __mpyu (unit <i>src2</i> , unit <i>srt2</i>);	MPYU {ACC P}, T, src2	Multiply <i>src1</i> (the T register) by <i>src2</i> . Both operands are treated as unsigned 16-bit numbers. The result is in ACC or P.
long __mpyxu (int <i>src1</i> , uint <i>src2</i>);	MPYXU ACC, T, {mem reg}	The T register is loaded with <i>src1</i> . The <i>src2</i> is referenced by memory or loaded into a register. The result is in ACC.
long <i>dst</i> = __norm32 (long <i>src</i> , int * <i>shift</i>);	CSB ACC LSLL ACC, T MOV @ shift, T	Normalize <i>src</i> into <i>dst</i> and update <i>shift</i> with the number of bits shifted.
long long <i>dst</i> = __norm64 (long long <i>src</i> , int * <i>shift</i>);	CSB ACC LSL64 ACC:P, T MOV shift , T CSB ACC LSL64 ACC:P, T MOV TMP16, AH MOV AH, T ADD shift, AH MOV AH, TMP16	Normalize 64-bit <i>src</i> into <i>dst</i> and update <i>shift</i> with the number of bits shifted.
void __or (int * <i>m</i> , int <i>b</i>);	OR * m , b	OR the contents of memory location <i>m</i> to <i>b</i> and store the result in <i>m</i> , in an atomic way.
long __qmpy32 (long <i>src32a</i> , long <i>src32b</i> , int <i>q</i>);	CLRC OVM SPM - 1 MOV T, src32a + 1 MPYXU P, T, src32b + 0 MOVP T, src32b + 1 MPYXU P, T, src32a + 0 MPYA P, T, src32a + 1 If $q = 31,30$: SPM q - 30 SFR ACC, #45 - q ADDL ACC, P If $q = 29$: SFR ACC, #16 ADDL ACC, P	Extended precision DSP Q math. Different code is generated based on the value of <i>q</i> .

Table 7-6. TMS320C28x C/C++ Compiler Intrinsic(s) (continued)

Intrinsic	Assembly Instruction(s)	Description
If $q = 28$ through 24:	SPM $q - 30$ SFR ACC, #16 SFR ACC, #29 - q ADDL ACC, P	
If $q = 23$ through 13:	SFR ACC, #16 ADDL ACC, P SFR ACC, #29 - q	
If $q = 12$ through 0:	SFR ACC, #16 ADDL ACC, P SFR ACC, #16 SFR ACC, #13 - q	
long __qmpy32by16(long src32, int src16, int q);	CLRC OVM MOV T, src16 + 0 MPYXU P, T, src32 + 0 MPY P, T, src32 + 1	Extended precision DSP Q math. Different code is generated based on the value of q .
If $q = 31, 30$:	SPM $q - 30$ SFR ACC, #46 - q ADDL ACC, P	
If $q = 29$ through 14:	SPM 0 SFR ACC, #16 ADDL ACC, P SFR ACC, #30 - q	
If $q = 13$ through 0:	SPM 0 SFR ACC, #16 ADDL ACC, P SFR ACC, #16 SFR ACC, #14 - q	
void __restore_interrupts(unsigned int val);	PUSH val POP ST1	Restore interrupts and set the interrupt vector to value val .
long __rol(long src);	ROL ACC	Rotate ACC left.
long __ror(long src);	ROR ACC	Rotate ACC right.
void * result = __rpt_mov_imm(void * dst , int src , int count);	MOV result , dst MOV ARx, dst RPT # count MOV *XARx++, # src	Move the dst register to the $result$ register. Move the dst register to a temp (ARx) register. Copy the immediate src to the temp register $count + 1$ times. The src must be a 16-bit immediate. The $count$ can be an immediate from 0 to 255 or a variable.
far void *result = __rpt_mov_imm_far (far void * dst , int src, int count);	MOVL result, dst MOVL ARx, dst RPT # count MOVL *XARx++, # src	Move the dst register to the $result$ register. Move the dst register to a temp (XARx) register. Copy the immediate src to the temp register $count + 1$ times. The src must be a 16-bit immediate. The $count$ can be an immediate from 0 to 255 or a variable.
int __rpt_norm_inc(long src, int dst, int count);	MOV ARx, dst RPT # count NORM ACC, ARx++	Repeat the normalize accumulator value $count + 1$ times. The $count$ can be an immediate from 0 to 255 or a variable.
int __rpt_norm_dec(long src, int dst, int count);	MOV ARx, dst RPT # count NORM ACC, ARx--	Repeat the normalize accumulator value $count + 1$ times. The $count$ can be an immediate from 0 to 255 or a variable.
long __rpt_rol(long src, int count);	RPT # count ROL ACC	Repeat the rotate accumulator left $count + 1$ times. The result is in ACC. The $count$ can be an immediate from 0 to 255 or a variable.

Table 7-6. TMS320C28x C/C++ Compiler Intrinsics (continued)

Intrinsic	Assembly Instruction(s)	Description
long __rpt_ror(long src, int count);	RPT # count ROR ACC	Repeat the rotate accumulator right <i>count</i> + 1 times. The result is in ACC. The <i>count</i> can be an immediate from 0 to 255 or a variable.
long __rpt_subcu(long ds t, int src, int count);	RPT count SUBCU ACC, src	The <i>src</i> operand is referenced from memory or loaded into a register and used as an operand to the SUBCU instruction. The result is in ACC. The <i>count</i> can be an immediate from 0 to 255 or a variable. The instruction repeats <i>count</i> + 1 times.
long __sat(long src);	SAT ACC	Load ACC with 32-bit <i>src</i> . The result is in ACC.
long __sat32(long src, long limit);	SETC OVM ADDL ACC, {mem P} SUBL ACC, {mem P} SUBL ACC, {mem P} ADDL ACC, {mem P} CLRC OVM	Saturate a 32-bit value to a 32-bit mask. Load ACC with <i>src</i> . Limit value is either referenced from memory or loaded into the P register. The result is in ACC.
long __sathigh16(long src, int limit);	SETC OVM ADDL ACC, {mem P}<<16 SUBL ACC, {mem P}<<16 SUBL ACC, {mem P}<<16 ADDL ACC, {mem P}<<16 CLRC OVM SFR ACC, rshift	Saturate a 32-bit value to 16-bits high. Load ACC with <i>src</i> . The <i>limit</i> value is either referenced from memory or loaded into register. The result is in ACC. The result can be right shifted and stored into an int. For example: ivar=__sathigh16(lvar, mask)>>6;
long __satlow16(long src);	SETC OVM MOV T, #0xFFFF CLR SXM ; if necessary ADD ACC, T <<15 SUB ACC, T <<15 SUB ACC, T <<15 ADD ACC, T <<15 CLRC OVM	Saturate a 32-bit value to 16-bits low. Load ACC with <i>src</i> . Load T register with #0xFFFF. The result is in ACC.
long __sbbu(long src1 , uint src2);	SBBU ACC, src2	Subtract <i>src2</i> + logical inverse of C from ACC (<i>src1</i>). The result is in ACC.
void __sub(int * m, int b);	SUB * m , b	Subtract <i>b</i> from the contents of memory location <i>m</i> and store the result in m, in an atomic way.
long __subcu(long src1, int src2);	SUBCU ACC, src2	Subtract <i>src2</i> shifted left 15 from ACC (<i>src1</i>). The result is in ACC.
void __subl(long * m, long b);	SUBL * m , b	Subtract <i>b</i> from the contents of memory location <i>m</i> and store the result in m, in an atomic way.
void __subr(int * m , int b);	SUBR * m , b	Subtract the contents of memory location <i>m</i> from <i>b</i> and store the result in m, in an atomic way.
void __subrl(long * m , long b);	SUBRL * m , b	Subtract the contents of memory location <i>m</i> from <i>b</i> and store the result in m, in an atomic way.
if (__tbit(int src , int bit));	TBIT src , # bit	SET TC status bit if specified <i>bit</i> of <i>src</i> is 1.
void __xor(int * m, int b);	XOR * m , b	XOR the contents of memory location <i>m</i> to <i>b</i> and store the result in m, in an atomic way.

Table 7-7. C/C++ Compiler Intrinsics for FPU

Intrinsic	Assembly Instruction(s)	Description
double __einvf32 (double <i>x</i>);	EINVF32 <i>x</i>	Compute and return 1/ <i>x</i> to about 8 bits of precision.
double __eisqrtf32 (double <i>x</i>);	EISQRTF32 <i>x</i>	Find the square root of 1/ <i>x</i> to about 8 bits of precision.
void __f32_max_idx (double <i>dst</i> , double <i>src</i> , double <i>idx_dst</i> , double <i>idx_src</i>);	MAXF32 <i>dst</i> , <i>src</i> MOV32 <i>idx_dst</i> , <i>idx_src</i>	If <i>src</i> > <i>dst</i> , copy <i>src</i> to <i>dst</i> , and copy <i>idx_src</i> to <i>idx_dst</i> .
void __f32_min_idx (double <i>dst</i> , double <i>src</i> , double <i>idx_dst</i> , double <i>idx_src</i>);	MINF32 <i>dst</i> , <i>src</i> MOV32 <i>idx_dst</i> , <i>idx_src</i>	If <i>src</i> < <i>dst</i> , copy <i>src</i> to <i>dst</i> , and copy <i>idx_src</i> to <i>idx_dst</i> .
int __f32toi16r (double <i>src</i>);	F32TOI16R <i>dst</i> , <i>src</i>	Convert double to int and round.
unsigned int __f32toui16r (double <i>src</i>);	F32TOUI16R <i>dst</i> , <i>src</i>	Convert double to unsigned int and round.
float __fmax (float <i>x</i> , float <i>y</i>);	MAXF32 <i>dst</i> , <i>src</i>	If <i>src</i> > <i>dst</i> , copy <i>src</i> to <i>dst</i>
float __fmin (float <i>x</i> , float <i>y</i>);	MINF32 <i>dst</i> , <i>src</i>	If <i>src</i> < <i>dst</i> , copy <i>src</i> to <i>dst</i>
double __fracf32 (double <i>src</i>);	FRACF32 <i>dst</i> , <i>src</i>	Return the fractional portion of <i>src</i> .
double __fsat (double <i>val</i> , double <i>max</i> , double <i>min</i>);	MAXF32 <i>dst</i> , <i>src2</i> MINF32 <i>dst</i> , <i>src1</i>	Return <i>val</i> if <i>min</i> < <i>val</i> < <i>max</i> . Else return <i>min</i> if <i>val</i> < <i>min</i> . Else return <i>max</i> if <i>val</i> > <i>max</i> .
void __swapf (double <i>a</i> , double <i>b</i>);	swapf <i>a</i> , <i>b</i>	Swap the contents of <i>a</i> and <i>b</i> .

7.5 Interrupt Handling

As long as you follow the guidelines in this section, you can interrupt and return to C/C++ code without disrupting the C/C++ environment. When the C/C++ environment is initialized, the startup routine does not enable or disable interrupts. If the system is initialized by way of a hardware reset, interrupts are disabled. If your system uses interrupts, you must handle any required enabling or masking of interrupts. Such operations have no effect on the C/C++ environment and are easily incorporated with asm statements or calling an assembly language function.

7.5.1 General Points About Interrupts

An interrupt routine can perform any task performed by any other function, including accessing global variables, allocating local variables, and calling other functions.

When you write interrupt routines, keep the following points in mind:

- An interrupt handling routine cannot have arguments. If any are declared, they are ignored.
- An interrupt handling routine can be called by normal C/C++ code, but it is inefficient to do this because all the registers are saved.
- An interrupt handling routine can handle a single interrupt or multiple interrupts. The compiler does not generate code that is specific to a certain interrupt, except for `c_int00`, which is the system reset interrupt. When you enter this routine, you cannot assume that the run-time stack is set up; therefore, *you cannot allocate local variables, and you cannot save any information on the run-time stack.*
- To associate an interrupt routine with an interrupt, the address of the interrupt function must be placed in the appropriate interrupt vector. You can use the assembler and linker to do this by creating a simple table of interrupt addresses using the `.sect` assembler directive.
- In assembly language, remember to precede the symbol name with an underscore. For example, refer to `c_int00` as `_c_int00`.

7.5.2 Using C/C++ Interrupt Routines

If a C/C++ interrupt routine does not call any other functions, only those registers that the interrupt handler uses are saved and restored. However, if a C/C++ interrupt routine does call other functions, these functions can modify unknown registers that the interrupt handler does not use. For this reason, the compiler saves all the save-on-call registers if any other functions are called.

A C/C++ interrupt routine is like any other C/C++ function in that it can have local variables and register variables; however, it should be declared with no arguments and should return void. Interrupt handling functions should not be called directly.

Interrupts can be handled directly with C/C++ functions by using the interrupt pragma or the interrupt keyword. For information about the interrupt pragma, see [Section 6.10.10](#). For information about the interrupt keyword, see [Section 6.5.4](#).

7.6 Integer Expression Analysis

This section describes some special considerations to keep in mind when evaluating integer expressions.

7.6.1 Operations Evaluated With Run-Time-Support Calls

The TMS320C28x does not directly support some C/C++ integer operations. Evaluating these operations is done with calls to run-time-support routines. These routines are hard-coded in assembly language. They are members of the object and source run-time-support libraries (rts2800.lib and rtssrc.zip) in the toolset.

The conventions for calling these routines are modeled on the standard C/C++ calling conventions.

Operation Type	Operations Evaluated With Run-Time-Support Calls
16-bit int	Divide (signed) Modulus
32-bit long	Divide (signed) Modulus
64-bit long long	Multiply ⁽¹⁾ Divide Bitwise AND, OR, and XOR Compare

⁽¹⁾ 64-bit long long multiplies are inlined if -mf=5 is specified.

7.6.2 C/C++ Code Access to the Upper 16 Bits of 16-Bit Multiply

The following methods provide access to the upper 16 bits of a 16-bit multiply in C/C++ language:

- Signed-results method:

```
int m1, m2;
int result;

result = ((long) m1 * (long) m2) >> 16;
```

- Unsigned-results method:

```
unsigned m1, m2;
unsigned result;

result = ((unsigned long) m1 * (unsigned long) m2) >> 16;
```

Danger of Complicated Expressions

NOTE: The compiler must recognize the structure of the expression for it to return the expected results. Avoid complicated expressions such as the following example:

```
((long)((unsigned)((a*b)+c)<5)*(long)(z*sin(w)>6))>>16
```

7.7 Floating-Point Expression Analysis

The C28x C/C++ compiler represents float and double floating-point values as IEEE single-precision numbers. Long double floating-point values are represented as IEEE double-precision numbers. Single-precision floating-point numbers are represented as 32-bit values and double-precision floating-point numbers are represented as 64-bit values.

The run-time-support library, `rts2800.lib`, contains a set of floating-point math functions that support:

- Addition, subtraction, multiplication, and division
- Comparisons (>, <, >=, <=, ==, !=)
- Conversions from integer or long to floating-point and floating-point to integer or long, both signed and unsigned
- Standard error handling

The conventions for calling these routines are the same as the conventions used to call the integer operation routines. Conversions are unary operations.

7.8 System Initialization

Before you can run a C/C++ program, you must create the C/C++ run-time environment. The C/C++ boot routine performs this task using a function called `c_int00` (or `_c_int00`). The run-time-support source library, `rts.src`, contains the source to this routine in a module named `boot.c` (or `boot.asm`).

To begin running the system, the `c_int00` function can be called by reset hardware. You must link the `c_int00` function with the other object files. This occurs automatically when you use the `--rom_model` or `--ram_model` link option and include a standard run-time-support library as one of the linker input files.

When C/C++ programs are linked, the linker sets the entry point value in the executable output file to the symbol `c_int00`.

The `c_int00` function performs the following tasks to initialize the environment:

1. Defines a section called `.stack` for the system stack and sets up the initial stack pointers
2. Initializes global variables by copying the data from the initialization tables to the storage allocated for the variables in the `.bss` section. If you are initializing variables at load time (`--ram_model` option), a loader performs this step before the program runs (it is not performed by the boot routine). For more information, see [Section 7.8.2](#).
3. Executes the global constructors found in the global constructors table. For more information, see [Section 7.8.2.4](#).
4. Calls the function `main` to run the C/C++ program

You can replace or modify the boot routine to meet your system requirements. However, the boot routine *must* perform the operations listed above to correctly initialize the C/C++ environment.

7.8.1 Run-Time Stack

The run-time stack is allocated in a single continuous block of memory and grows down from low addresses to higher addresses. The SP points to the top of the stack.

The code does not check to see if the run-time stack overflows. Stack overflow occurs when the stack grows beyond the limits of the memory space that was allocated for it. Be sure to allocate adequate memory for the stack.

The stack size can be changed at link time by using the `--stack_size` link option on the linker command line and specifying the stack size as a constant directly after the option.

7.8.2 Automatic Initialization of Variables

Some global variables must have initial values assigned to them before a C/C++ program starts running. The process of retrieving these variables' data and initializing the variables with the data is called autoinitialization.

The compiler builds tables in a special section called `.cinit` that contains data for initializing global and static variables. Each compiled module contains these initialization tables. The linker combines them into a single table (a single `.cinit` section). The boot routine or a loader uses this table to initialize all the system variables.

Initializing Variables

NOTE: In ANSI/ISO C, global and static variables that are not explicitly initialized must be set to 0 before program execution. The C/C++ compiler does not perform any preinitialization of uninitialized variables. Explicitly initialize any variable that must have an initial value of 0.

The easiest method is to have a loader clear the `.bss` section before the program starts running. Another method is to set a fill value of 0 in the linker control map for the `.bss` section.


You cannot use these methods with code that is burned into ROM.

Global variables are either autoinitialized at run time or at load time; see [Section 7.8.2.2](#) and [Section 7.8.2.3](#). Also see [Section 6.13](#).

7.8.2.1 Initialization Tables

The tables in the `.cinit` section consist of variable-size initialization records. Each variable that must be autoinitialized has a record in the `.cinit` section. [Figure 7-2](#) shows the format of the `.cinit` section and the initialization records.

Figure 7-2. Format of Initialization Records in the `.cinit` Section (Default and far Data)

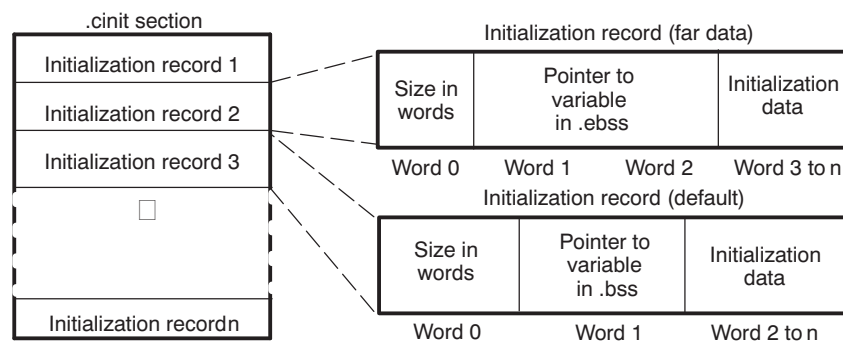

The fields of an initialization record contain the following information:

- The first field of an initialization record contains the size (in words) of the initialization data. A negative value for this field denotes that the variable's address is far.
- The second field contains the starting address of the area within the `.bss` section where the initialization data must be copied. If the variable is far, the field points to the variable's space in `.ebss`. For far data the second field requires two words to hold the address.
- The third field contains the data that is copied into the `.bss` section to initialize the variable. The width of this field is variable.

Size of Initialized Variables

NOTE: In the small memory model, the compiler only supports initializing variables that are 64K words or less. In the large memory model, multiple `cinit` records are generated for objects that are over 32K words in size.

Each variable that must be autoinitialized has an initialization record in the .cinit section.

[Example 7-7](#) shows initialized global variables defined in C. [Example 7-8](#) shows the corresponding initialization table.

Example 7-7. Initialized Variables Defined in C

```
int    i= 23;
far    int j[2] = { 1,2};
```

Example 7-8. Initialized Information for Variables Defined in [Example 7-7](#)

```
.global    _i
.bss       _i,1,1,0
.global    _j
_j:        .usect    .ebss,2,1,0

.sect      ".cinit"
.align     1
.field     1,16
.field     _i+0,16
.field     23,16      ; _i @ 0

.sect      ".cinit"
.align     1
.field     -IR_1,16
.field     _j+0,32
.field     1,16        ; _j[0] @ 0
.field     2,16        ; _j[1] @ 16
IR_1:      .set2
```

The .cinit section must contain only initialization tables in this format. When interfacing assembly language modules, do not use the .cinit section for any other purpose.

The table in the .pinit section simply consists of a list of addresses of constructors to be called (see [Figure 7-3](#)). The constructors appear in the table after the .cinit initialization.

Figure 7-3. Format of Initialization Records in the .pinit Section

.pinit section

Address of constructor 1
Address of constructor 2
Address of constructor 3
□
•
•
Address of constructor n

When you use the --rom_model or --ram_model option, the linker combines the .cinit sections from all the C modules and appends a null word to the end of the composite .cinit section. This terminating record appears as a record with a size field of 0 and marks the end of the initialization tables.

Likewise, the --rom_model or --ram_model link option causes the linker to combine all of the .pinit sections from all C/C++ modules and append a null word to the end of the composite .pinit section. The boot routine knows the end of the global constructor table when it encounters a null constructor address.

The const-qualified variables are initialized differently; see [Section 6.5.1](#).


7.8.2.2 Autoinitialization of Variables at Run Time

Autoinitializing variables at run time is the default method of autoinitialization. To use this method, invoke the linker with the `--rom_model` option.

Using this method, the `.cinit` section is loaded into memory along with all the other initialized sections, and global variables are initialized at run time. The linker defines a special symbol called `cinit` that points to the beginning of the initialization tables in memory. When the program begins running, the C/C++ boot routine copies data from the tables (pointed to by `.cinit`) into the specified variables in the `.bss` section. This allows initialization data to be stored in ROM and copied to RAM each time the program starts.

[Figure 7-4](#) illustrates autoinitialization at run time. Use this method in any system where your application runs from code burned into ROM.

Figure 7-4. Autoinitialization at Run Time

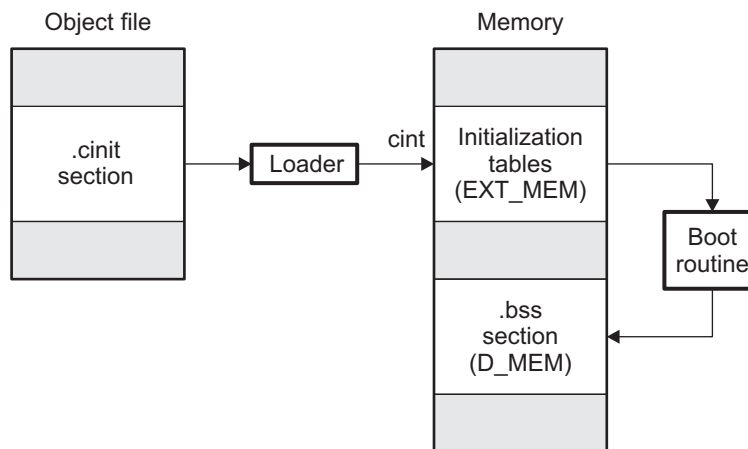

7.8.2.3 Initialization of Variables at Load Time


Initialization of variables at load time enhances performance by reducing boot time and by saving the memory used by the initialization tables. To use this method, invoke the linker with the `--ram_model` option.

When you use the `--ram_model` link option, the linker sets the `STYP_COPY` bit in the `.cinit` section's header. This tells the loader not to load the `.cinit` section into memory. (The `.cinit` section occupies no space in the memory map.) The linker also sets the `cinit` symbol to `-1` (normally, `cinit` points to the beginning of the initialization tables). This indicates to the boot routine that the initialization tables are not present in memory; accordingly, no run-time initialization is performed at boot time.

A loader (which is not part of the compiler package) must be able to perform the following tasks to use initialization at load time:

- Detect the presence of the `.cinit` section in the object file
- Determine that `STYP_COPY` is set in the `.cinit` section header, so that it knows not to copy the `.cinit` section into memory
- Understand the format of the initialization tables

[Figure 7-5](#) illustrates the initialization of variables at load time.

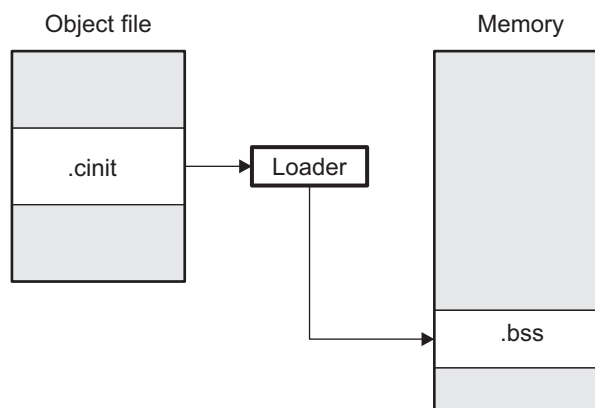Figure 7-5. Initialization at Load Time


Regardless of the use of the `--rom_model` or `--ram_model` options, the `.pinit` section is always loaded and processed at run time.

7.8.2.4 Global Constructors

All global C++ variables that have constructors must have their constructor called before main. The compiler builds a table in a section called `.pinit` of global constructor addresses that must be called, in order, before main. The linker combines the `.pinit` section from each input file to form a single table in the `.pinit` section. The boot routine uses this table to execute the constructors.

Using Run-Time-Support Functions and Building Libraries

Some of the features of C/C++ (such as I/O, dynamic memory allocation, string operations, and trigonometric functions) are provided as an ANSI/ISO C/C++ standard library, rather than as part of the compiler itself. The TI implementation of this library is the run-time-support library (RTS). The C/C++ compiler implements the complete ISO standard library except for those facilities that handle exception conditions, signal, and locale issues (properties that depend on local language, nationality, or culture). Using the ANSI/ISO standard library ensures a consistent set of functions that provide for greater portability.

In addition to the ANSI/ISO-specified functions, the run-time-support library includes routines that give you processor-specific commands and direct C language I/O requests. These are detailed in [Section 8.1](#) and [Section 8.3](#).

A library-build utility is provided with the code generation tools that lets you create customized run-time-support libraries. This process is described in [Section 8.5](#).

Topic	Page
8.1 C and C++ Run-Time Support Libraries	146
8.2 Far Memory Support	148
8.3 The C I/O Functions	151
8.4 Handling Reentrancy (_register_lock() and _register_unlock() Functions)	163
8.5 Library-Build Process	164

8.1 C and C++ Run-Time Support Libraries

TMS320C28x compiler releases include pre-built run-time libraries that provide all the standard capabilities. Separate libraries are provided for large-memory-model support and C++ exception support. See [Section 8.5](#) for information on the library-naming conventions.

The run-time-support library contains the following:

- ANSI/ISO C/C++ standard library
- C I/O library
- Low-level support functions that provide I/O to the host operating system
- Fundamental arithmetic routines
- System startup routine, `_c_int00`
- Functions and macros that allow C/C++ to access specific instructions

The run-time-support libraries do not contain functions involving signals and locale issues.

The C++ library supports wide chars, in that template functions and classes that are defined for `char` are also available for wide `char`. For example, wide `char` stream classes `wios`, `wiostream`, `wstreambuf` and so on (corresponding to `char` classes `ios`, `iostream`, `streambuf`) are implemented. However, there is no low-level file I/O for wide chars. Also, the C library interface to wide `char` support (through the C++ headers `<wchar>` and `<cwctype>`) is limited as described in [Section 6.1](#).

The C++ library included with the compiler is licensed from [Dinkumware, Ltd.](#) The Dinkumware C++ library is a fully conforming, industry-leading implementation of the standard C++ library.

TI does not provide documentation that covers the functionality of the C++ library. TI suggests referring to one of the following sources:

- *The Standard C++ Library: A Tutorial and Reference*, Nicolai M. Josuttis, Addison-Wesley, ISBN 0-201-37926-0
- *The C++ Programming Language* (Third or Special Editions), Bjarne Stroustrup, Addison-Wesley, ISBN 0-201-88954-4 or 0-201-70073-5
- Dinkumware's online reference at <http://dinkumware.com/manuals>

8.1.1 Linking Code With the Object Library

When you link your program, you must specify the object library as one of the linker input files so that references to the I/O and run-time-support functions can be resolved. You can either specify the library or allow the compiler to select one for you. See [Section 4.3.1](#) for further information.

When a library is linked, the linker includes only those library members required to resolve undefined references. For more information about linking, see the *TMS320C28x Assembly Language Tools User's Guide*.

C, C++, and mixed C and C++ programs can use the same run-time-support library. Run-time-support functions and variables that can be called and referenced from both C and C++ will have the same linkage.

8.1.2 Header Files

You must use the header files provided with the compiler run-time support when using functions from C/C++ standard library. Set the `C2000_C_DIR` environment variable to the specific include directory: "include\lib".

8.1.3 Modifying a Library Function

You can inspect or modify library functions by unzipping the source file (`rtsrc.zip`), changing the specific function file, and rebuilding the library. When extracted (with any standard unzip tool on windows, linux, or unix), this zip file recreates the run-time source tree for the run-time library.

The source for the libraries is included in the `rtsrc.zip` file. See [Section 8.5](#) for details on rebuilding.

You can also build a new library this way, rather than rebuilding into `rts2800.lib`. See [Section 8.5](#).

8.1.4 Minimal Support for Internationalization

The library now includes the header files `<locale.h>`, `<wchar.h>`, and `<wctype.h>`, which provide APIs to support non-ASCII character sets and conventions. Our implementation of these APIs is limited in the following ways:

- The library has minimal support for wide and multi-byte characters. The type `wchar_t` is implemented as `int`. The wide character set is equivalent to the set of values of type `char`. The library includes the header files `<wchar.h>` and `<wctype.h>` but does not include all the functions specified in the standard. So-called multi-byte characters are limited to single characters. There are no shift states. The mapping between multi-byte characters and wide characters is simple equivalence; that is, each wide character maps to and from exactly a single multi-byte character having the same value.
- The C library includes the header file `<locale.h>` but with a minimal implementation. The only supported locale is the C locale. That is, library behavior that is specified to vary by locale is hard-coded to the behavior of the C locale, and attempting to install a different locale via a call to `setlocale()` will return `NULL`.

8.1.5 Allowable Number of Open Files

In the `<stdio.h>` header file, the value for the macro `FOPEN_MAX` has been changed from 12 to the value of the macro `_NFILE`, which is set to 10. The impact is that you can only have 10 files simultaneously open at one time (including the pre-defined streams - `stdin`, `stdout`, `stderr`).

The C standard requires that the minimum value for the `FOPEN_MAX` macro is 8. The macro determines the maximum number of files that can be opened at one time. The macro is defined in the `stdio.h` header file and can be modified by changing the value of the `_NFILE` macro.

8.1.6 Library Naming Conventions

By default, the linker uses automatic library selection to select the correct run-time-support library (see [Section 4.3.1.1](#)) for your application. If you select the library manually, you must select the matching library according to the following naming scheme:

rts2800[_ml][_fpu32][_eh].lib

rts2800	Indicates the library is built for C28x support
_ml	Indicates the large memory model.(Small memory model is used by default.)
_fpu32	Indicates support for FPU targets (Specifying -ml is not necessary as FPU target work only with the large memory model.)
_eh	Indicates the library has exception handling support

8.2 Far Memory Support

As described in [Section 6.5.3, The far Keyword](#), the C/C++ compiler extends the C language (not C++) by providing the far keyword. The far keyword is used to access 22 bits of address space.

The run-time-support library is extended to include far versions of the ANSI/ISO routines and far dynamic memory management routines.

The large memory model C++ run-time-support library automatically supports far memory since all pointers are 22 bits.

8.2.1 Far Versions of Run-Time-Support Functions

To provide far support to the C run-time library, a far version is defined for most of the run-time-support functions that either have a pointer argument or returns a pointer. In the following example, the atoi() run-time-support function takes a string (pointer to char) argument and returns the integer value represented by the string.

```
#include <stdlib.h>
char * st = "1234";
.
.
.
int ival = atoi(st); /* ival is 1234 */
```

The far version of the atoi() function, far_atoi(), is defined to take a far string (pointer to far char) argument and return the integer value.

```
#include <stdlib.h>
far char * fst = "1234";
.
.
.
int ival = far_atoi(fst); /* ival is 1234 */
```

The far version of the run-time-support function performs the same operations except that it accepts or returns pointer to far objects.

8.2.2 Global and Static Variables in Run-Time-Support Functions

The run-time-support library uses several global and static variables. Some of them are for internal use and others are for passing status and other information on to you, as in the case of global variable errno defined in stderr.h. By default, these variables are placed in the .bss section and considered near objects. For more information, see [Section 7.1.1](#).

The C I/O functions do not have corresponding far versions. Also, the functions that use the C I/O functions do not have corresponding far versions.

You can place global and static variables in far memory (.ebss section) by defining _FAR_RTS (-d_FAR_RTS) when building the C run-time library (not C++). The library-build process is described in [Section 8.5](#). To build a library with far mode support, use the gmake command with OPT_ALL=_d_FAR_RTS, along with other gmake options.

8.2.3 Far Dynamic Memory Allocation in C

You can allocate far memory dynamically at run time. The far memory is allocated from a global pool or far heap that is defined in the .esysmem section. For more information about dynamic memory allocation, see [Section 7.1.4](#).

The run-time-support library includes the following functions that allow you to dynamically allocate far memory at run time:

```
far void *      far_malloc (unsigned long size);
far void *      far_calloc (unsigned long num, unsigned long size);
far void *      far_realloc (far void *ptr, unsigned long size);
void            far_free (far void *ptr);
long            far_free_memory (void);
long            far_max_free(void)
```

The following C code allocates memory for 100 far objects and deallocates the memory at the end.

```
#include <stdlib.h>

struct big {
    int a, b;
    char c[80];
};

int main()
{
    far struct big *table;
    table=(far struct big *)far_malloc(100*sizeof(struct
big));
    .
    .
    /* use the memory here */
    .
    .
    far_free(table);
    /* exit code here */
}
```

8.2.4 Far Dynamic Memory Allocation in C++

In C++ mode the compiler does not support the far keyword. Far intrinsics are provided to access far memory if the large memory model is not used. For more information, see [Section 6.6.2](#). You can dynamically define objects in far memory and access them using the far intrinsics. The data type long is used to hold the far pointer.

The C++ run-time-support library provides the same set of dynamic far memory allocation functions as C run-time-support library. The C++ functions use the data type long to accept as return the far pointers, so that the memory can be accessed using far intrinsics. The C++ dynamic far memory allocation functions are listed below:

```
long std::far_malloc      (unsigned long size);
long std::far_calloc      (unsigned long num, unsigned long size);
long std::far_realloc*    (far void *ptr, unsigned long size);
void std::far_free        (far void *ptr);
long std::far_free_memory (void);
long std::far_max_free(void)
```

The following C++ code allocates memory for 100 far objects and deallocates the memory at the end.

```
#include <cstdlib>

struct big {
    int a, b;
    char c[80];
};
int main()
{
    long table;//Note-use of long to hold address.
    table = std::far_malloc(100 * sizeof(struct big));
    .
    .
    /* use the memory here using intrinsic*/
    .
    .
    std::far_free(table);
    /* exit code here */
}
```

Using far Intrinsics

NOTE: The farmemory.cpp file in rtssrc.zip implements far dynamic memory allocation functions using far intrinsics. You can refer to this file as an example about how to use far intrinsics.

8.3 The C I/O Functions

The C I/O functions make it possible to access the host's operating system to perform I/O. The capability to perform I/O on the host gives you more options when debugging and testing code.

The I/O functions are logically divided into layers: high level, low level, and device-driver level.

With properly written device drivers, the C-standard high-level I/O functions can be used to perform I/O on custom user-defined devices. This provides an easy way to use the sophisticated buffering of the high-level I/O functions on an arbitrary device.

Debugger Required for Default HOST

NOTE: For the default HOST device to work, there must be a debugger to handle the C I/O requests; the default HOST device cannot work by itself in an embedded system. To work in an embedded system, you will need to provide an appropriate driver for your system.

NOTE: C I/O Mysteriously Fails

If there is not enough space on the heap for a C I/O buffer, operations on the file will silently fail. If a call to `printf()` mysteriously fails, this may be the reason. The heap needs to be at least large enough to allocate a block of size `BUFSIZ` (defined in `stdio.h`) for every file on which I/O is performed, including `stdout`, `stdin`, and `stderr`, plus allocations performed by the user's code, plus allocation bookkeeping overhead. Alternately, declare a char array of size `BUFSIZ` and pass it to `setvbuf` to avoid dynamic allocation. To set the heap size, use the `--heap_size` option when linking (refer to the *Linker Description* chapter in the *TMS320C28x Assembly Language Tools User's Guide*).

NOTE: Open Mysteriously Fails

The run-time support limits the total number of open files to a small number relative to general-purpose processors. If you attempt to open more files than the maximum, you may find that the open will mysteriously fail. You can increase the number of open files by extracting the source code from `rts.src` and editing the constants controlling the size of some of the C I/O data structures. The macro `_NFILE` controls how many `FILE` (`fopen`) objects can be open at one time (`stdin`, `stdout`, and `stderr` count against this total). (See also `FOPEN_MAX`.) The macro `_NSTREAM` controls how many low-level file descriptors can be open at one time (the low-level files underlying `stdin`, `stdout`, and `stderr` count against this total). The macro `_NDEVICE` controls how many device drivers are installed at one time (the HOST device counts against this total).

8.3.1 High-Level I/O Functions

The high-level functions are the standard C library of stream I/O routines (`printf`, `scanf`, `fopen`, `getchar`, and so on). These functions call one or more low-level I/O functions to carry out the high-level I/O request. The high-level I/O routines operate on `FILE` pointers, also called *streams*.

Portable applications should use only the high-level I/O functions.

To use the high-level I/O functions, include the header file `stdio.h`, or `cstdio` for C++ code, for each module that references a C I/O function.

For example, given the following C program in a file named `main.c`:

```
#include <stdio.h>

void main()
{
    FILE *fid;

    fid = fopen("myfile", "w");
    fprintf(fid, "Hello, world\n");
}
```

```
    fclose(fid);  
  
    printf("Hello again, world\n");  
}
```

Issuing the following compiler command compiles, links, and creates the file main.out from the run-time-support library:

```
cl2000 -v28 main.c --run_linker --heap_size=400 --library=rts2800.lib --output_file=main.out
```

Executing main.out results in
Hello, world

being output to a file and
Hello again, world

being output to your host's stdout window.

8.3.2 Overview of Low-Level I/O Implementation

The low-level functions are comprised of seven basic I/O functions: open, read, write, close, lseek, rename, and unlink. These low-level routines provide the interface between the high-level functions and the device-level drivers that actually perform the I/O command on the specified device.

The low-level functions are designed to be appropriate for all I/O methods, even those which are not actually disk files. Abstractly, all I/O channels can be treated as files, although some operations (such as lseek) may not be appropriate. See [Section 8.3.3](#) for more details.

The low-level functions are inspired by, but not identical to, the POSIX functions of the same names.

The low-level functions operate on file descriptors. A file descriptor is an integer returned by open, representing an opened file. Multiple file descriptors may be associated with a file; each has its own independent file position indicator.

open	Open File for I/O				
Syntax	<pre>#include <file.h> int open (const char * path , unsigned flags , int file_descriptor);</pre>				
Description	The open function opens the file specified by <i>path</i> and prepares it for I/O. • The <i>path</i> is the filename of the file to be opened, including an optional directory path and an optional device specifier (see Section 8.3.5). • The <i>flags</i> are attributes that specify how the file is manipulated. The flags are specified using the following symbols: <pre>O_RDONLY (0x0000) /* open for reading */ O_WRONLY (0x0001) /* open for writing */ O_RDWR (0x0002) /* open for read & write */ O_APPEND (0x0008) /* append on each write */ O_CREAT (0x0200) /* open with file create */ O_TRUNC (0x0400) /* open with truncation */ O_BINARY (0x8000) /* open in binary mode */</pre> Low-level I/O routines allow or disallow some operations depending on the flags used when the file was opened. Some flags may not be meaningful for some devices, depending on how the device implements files. • The <i>file_descriptor</i> is assigned by open to an opened file. The next available file descriptor is assigned to each new file opened.				
Return Value	The function returns one of the following values: <table> <tr> <td>non-negative file descriptor</td> <td>if successful</td> </tr> <tr> <td>-1</td> <td>on failure</td> </tr> </table>	non-negative file descriptor	if successful	-1	on failure
non-negative file descriptor	if successful				
-1	on failure				

close ***Close File for I/O***

Syntax	<pre>#include <file.h> int close (int file_descriptor);</pre>				
Description	The close function closes the file associated with <i>file_descriptor</i>. The <i>file_descriptor</i> is the number assigned by open to an opened file.				
Return Value	The return value is one of the following: <table> <tr> <td>0</td><td>if successful</td></tr> <tr> <td>-1</td><td>on failure</td></tr> </table>	0	if successful	-1	on failure
0	if successful				
-1	on failure				

read ***Read Characters from a File***

Syntax	<pre>#include <file.h> int read (int file_descriptor , char * buffer , unsigned count);</pre>						
Description	The read function reads <i>count</i> characters into the <i>buffer</i> from the file associated with <i>file_descriptor</i>. • The <i>file_descriptor</i> is the number assigned by open to an opened file. • The <i>buffer</i> is where the read characters are placed. • The <i>count</i> is the number of characters to read from the file.						
Return Value	The function returns one of the following values: <table> <tr> <td>0</td><td>if EOF was encountered before any characters were read</td></tr> <tr> <td>#</td><td>number of characters read (may be less than <i>count</i>)</td></tr> <tr> <td>-1</td><td>on failure</td></tr> </table>	0	if EOF was encountered before any characters were read	#	number of characters read (may be less than <i>count</i>)	-1	on failure
0	if EOF was encountered before any characters were read						
#	number of characters read (may be less than <i>count</i>)						
-1	on failure						

write ***Write Characters to a File***

Syntax	<pre>#include <file.h> int write (int file_descriptor , const char * buffer , unsigned count);</pre>				
Description	The write function writes the number of characters specified by <i>count</i> from the <i>buffer</i> to the file associated with <i>file_descriptor</i>. • The <i>file_descriptor</i> is the number assigned by open to an opened file. • The <i>buffer</i> is where the characters to be written are located. • The <i>count</i> is the number of characters to write to the file.				
Return Value	The function returns one of the following values: <table> <tr> <td>#</td><td>number of characters written if successful (may be less than <i>count</i>)</td></tr> <tr> <td>-1</td><td>on failure</td></tr> </table>	#	number of characters written if successful (may be less than <i>count</i>)	-1	on failure
#	number of characters written if successful (may be less than <i>count</i>)				
-1	on failure				

lseek	<i>Set File Position Indicator</i>
Syntax for C	<pre>#include <file.h> off_t lseek (int file_descriptor , off_t offset , int origin);</pre>
Description	The lseek function sets the file position indicator for the given file to a location relative to the specified origin. The file position indicator measures the position in characters from the beginning of the file. • The <i>file_descriptor</i> is the number assigned by open to an opened file. • The <i>offset</i> indicates the relative offset from the <i>origin</i> in characters. • The <i>origin</i> is used to indicate which of the base locations the <i>offset</i> is measured from. The <i>origin</i> must be one of the following macros: SEEK_SET (0x0000) Beginning of file SEEK_CUR (0x0001) Current value of the file position indicator SEEK_END (0x0002) End of file
Return Value	The return value is one of the following: # new value of the file position indicator if successful (off_t)-1 on failure
unlink	<i>Delete File</i>
Syntax	<pre>#include <file.h> int unlink (const char * path);</pre>
Description	The unlink function deletes the file specified by <i>path</i>. Depending on the device, a deleted file may still remain until all file descriptors which have been opened for that file have been closed. See Section 8.3.3. The <i>path</i> is the filename of the file, including path information and optional device prefix. (See Section 8.3.5.)
Return Value	The function returns one of the following values: 0 if successful -1 on failure

rename	<i>Rename File</i>				
Syntax for C	<pre>#include {<stdio.h> <file.h>} int rename (const char * old_name , const char * new_name);</pre>				
Syntax for C++	<pre>#include {<cstdio> <file.h>} int std::rename (const char * old_name , const char * new_name);</pre>				
Description	The rename function changes the name of a file. • The <i>old_name</i> is the current name of the file. • The <i>new_name</i> is the new name for the file. NOTE: The optional device specified in the new name must match the device of the old name. If they do not match, a file copy would be required to perform the rename, and rename is not capable of this action.				
Return Value	The function returns one of the following values: <table> <tr> <td>0</td><td>if successful</td></tr> <tr> <td>-1</td><td>on failure</td></tr> </table> NOTE: Although rename is a low-level function, it is defined by the C standard and can be used by portable applications.	0	if successful	-1	on failure
0	if successful				
-1	on failure				

8.3.3 Device-Driver Level I/O Functions

At the next level are the device-level drivers. They map directly to the low-level I/O functions. The default device driver is the HOST device driver, which uses the debugger to perform file operations. The HOST device driver is automatically used for the default C streams stdin, stdout, and stderr.

The HOST device driver shares a special protocol with the debugger running on a host system so that the host can perform the C I/O requested by the program. Instructions for C I/O operations that the program wants to perform are encoded in a special buffer named `_CIOBUF_` in the `.cio` section. The debugger halts the program at a special breakpoint (C\$\$IO\$\$), reads and decodes the target memory, and performs the requested operation. The result is encoded into `_CIOBUF_`, the program is resumed, and the target decodes the result.

The HOST device is implemented with seven functions, `HOSTopen`, `HOSTclose`, `HOSTread`, `HOSTwrite`, `HOSTlseek`, `HOSTunlink`, and `HOSTrename`, which perform the encoding. Each function is called from the low-level I/O function with a similar name.

A device driver is composed of seven required functions. Not all function need to be meaningful for all devices, but all seven must be defined. Here we show the names of all seven functions as starting with `DEV`, but you may chose any name except for `HOST`.

DEV_open

Open File for I/O

Syntax

```
int DEV_open (const char * path , unsigned flags , int llv_fd );
```

Description

This function finds a file matching *path* and opens it for I/O as requested by *flags*.

- The *path* is the filename of the file to be opened. If the name of a file passed to open has a device prefix, the device prefix will be stripped by open, so DEV_open will not see it. (See [Section 8.3.5](#) for details on the device prefix.)
- The *flags* are attributes that specify how the file is manipulated. The flags are specified using the following symbols:

```
O_RDONLY  (0x0000) /* open for reading */
O_WRONLY  (0x0001) /* open for writing */
O_RDWR    (0x0002) /* open for read & write */
O_APPEND  (0x0008) /* append on each write */
O_CREAT    (0x0200) /* open with file create */
O_TRUNC    (0x0400) /* open with truncation */
O_BINARY   (0x8000) /* open in binary mode */
```

See POSIX for further explanation of the flags.

- The *llv_fd* is treated as a suggested low-level file descriptor. This is a historical artifact; newly-defined device drivers should ignore this argument. This differs from the low-level I/O open function.

This function must arrange for information to be saved for each file descriptor, typically including a file position indicator and any significant flags. For the HOST version, all the bookkeeping is handled by the debugger running on the host machine. If the device uses an internal buffer, the buffer can be created when a file is opened, or the buffer can be created during a read or write.

Return Value

This function must return -1 to indicate an error if for some reason the file could not be opened; such as the file does not exist, could not be created, or there are too many files open. The value of *errno* may optionally be set to indicate the exact error (the HOST device does not set *errno*). Some devices might have special failure conditions; for instance, if a device is read-only, a file cannot be opened O_WRONLY.

On success, this function must return a non-negative file descriptor unique among all open files handled by the specific device. It need not be unique across devices. Only the low-level I/O functions will see this device file descriptor; the low-level function open will assign its own unique file descriptor.

DEV_close	<i>Close File for I/O</i>
Syntax	int DEV_close (int <i>dev_fd</i>);
Description	This function closes a valid open file descriptor. On some devices, DEV_close may need to be responsible for checking if this is the last file descriptor pointing to a file that was unlinked. If so, it is responsible for ensuring that the file is actually removed from the device and the resources reclaimed, if appropriate.
Return Value	This function should return -1 to indicate an error if the file descriptor is invalid in some way, such as being out of range or already closed, but this is not required. The user should not call close() with an invalid file descriptor.
DEV_read	<i>Read Characters from a File</i>
Syntax	int DEV_read (int <i>dev_fd</i> , char * <i>bu</i> , unsigned <i>count</i>);
Description	The read function reads <i>count</i> bytes from the input file associated with <i>dev_fd</i>. • The <i>dev_fd</i> is the number assigned by open to an opened file. • The <i>buf</i> is where the read characters are placed. • The <i>count</i> is the number of characters to read from the file.
Return Value	This function must return -1 to indicate an error if for some reason no bytes could be read from the file. This could be because of an attempt to read from a O_WRONLY file, or for device-specific reasons. If count is 0, no bytes are read and this function returns 0. This function returns the number of bytes read, from 0 to count. 0 indicates that EOF was reached before any bytes were read. It is not an error to read less than count bytes; this is common if there are not enough bytes left in the file or the request was larger than an internal device buffer size.
DEV_write	<i>Write Characters to a File</i>
Syntax	int DEV_write (int <i>dev_fd</i> , const char * <i>buf</i> , unsigned <i>count</i>);
Description	This function writes <i>count</i> bytes to the output file. • The <i>dev_fd</i> is the number assigned by open to an opened file. • The <i>buffer</i> is where the write characters are placed. • The <i>count</i> is the number of characters to write to the file.
Return Value	This function must return -1 to indicate an error if for some reason no bytes could be written to the file. This could be because of an attempt to read from a O_RDONLY file, or for device-specific reasons.

DEV_lseek	<i>Set File Position Indicator</i>
Syntax	off_t lseek (int dev_fd , off_t offset , int origin);
Description	This function sets the file's position indicator for this file descriptor as lseek. If lseek is supported, it should not allow a seek to before the beginning of the file, but it should support seeking past the end of the file. Such seeks do not change the size of the file, but if it is followed by a write, the file size will increase.
Return Value	If successful, this function returns the new value of the file position indicator. This function must return -1 to indicate an error if for some reason no bytes could be written to the file. For many devices, the lseek operation is nonsensical (e.g. a computer monitor).
DEV_unlink	<i>Delete File</i>
Syntax	int DEV_unlink (const char * path);
Description	Remove the association of the pathname with the file. This means that the file may no longer be opened using this name, but the file may not actually be immediately removed. Depending on the device, the file may be immediately removed, but for a device which allows open file descriptors to point to unlinked files, the file will not actually be deleted until the last file descriptor is closed. See Section 8.3.3.
Return Value	This function must return -1 to indicate an error if for some reason the file could not be unlinked (delayed removal does not count as a failure to unlink.) If successful, this function returns 0.
DEV_rename	<i>Rename File</i>
Syntax	int DEV_rename (const char * old_name , const char * new_name);
Description	This function changes the name associated with the file. • The <i>old_name</i> is the current name of the file. • The <i>new_name</i> is the new name for the file.
Return Value	This function must return -1 to indicate an error if for some reason the file could not be renamed, such as the file doesn't exist, or the new name already exists. NOTE: It is inadvisable to allow renaming a file so that it is on a different device. In general this would require a whole file copy, which may be more expensive than you expect. If successful, this function returns 0.

8.3.4 Adding a User-Defined Device Driver for C I/O

The function `add_device` allows you to add and use a device. When a device is registered with `add_device`, the high-level I/O routines can be used for I/O on that device.

You can use a different protocol to communicate with any desired device and install that protocol using `add_device`; however, the HOST functions should not be modified. The default streams `stdin`, `stdout`, and `stderr` can be remapped to a file on a user-defined device instead of HOST by using `freopen()` as in [Example 8-1](#). If the default streams are reopened in this way, the buffering mode will change to `_IOFBF` (fully buffered). To restore the default buffering behavior, call `setvbuf` on each reopened file with the appropriate value (`_IOLBF` for `stdin` and `stdout`, `_IONBF` for `stderr`).

The default streams `stdin`, `stdout`, and `stderr` can be mapped to a file on a user-defined device instead of HOST by using `freopen()` as shown in [Example 8-1](#). Each function must set up and maintain its own data structures as needed. Some function definitions perform no action and should just return.

Example 8-1. Mapping Default Streams to Device

```
#include <stdio.h>
#include <file.h>
#include "mydevice.h"

void main()
{
    add_device("mydevice", _MSA,
              MYDEVICE_open, MYDEVICE_close,
              MYDEVICE_read, MYDEVICE_write,
              MYDEVICE_lseek, MYDEVICE_unlink, MYDEVICE_rename);

    /*-----*/
    /* Re-open stderr as a MYDEVICE file */
    /*-----*/
    if (!freopen("mydevice:stderrfile", "w", stderr))
    {
        puts("Failed to freopen stderr");
        exit(EXIT_FAILURE);
    }

    /*-----*/
    /* stderr should not be fully buffered; we want errors to be seen as */
    /* soon as possible. Normally stderr is line-buffered, but this example */
    /* doesn't buffer stderr at all. This means that there will be one call */
    /* to write() for each character in the message. */
    /*-----*/
    if (setvbuf(stderr, NULL, _IONBF, 0))
    {
        puts("Failed to setvbuf stderr");
        exit(EXIT_FAILURE);
    }

    /*-----*/
    /* Try it out! */
    /*-----*/
    printf("This goes to stdout\n");
    fprintf(stderr, "This goes to stderr\n"); }
```

NOTE: Use Unique Function Names

The function names `open`, `read`, `write`, `close`, `lseek`, `rename`, and `unlink` are used by the low-level routines. Use other names for the device-level functions that you write.

Use the low-level function `add_device()` to add your device to the `device_table`. The device table is a statically defined array that supports n devices, where n is defined by the macro `_NDEVICE` found in `stdio.h/cstdio`.

The first entry in the device table is predefined to be the host device on which the debugger is running. The low-level routine `add_device()` finds the first empty position in the device table and initializes the device fields with the passed-in arguments. For a complete description, see [the add_device function](#).

8.3.5 The device Prefix

A file can be opened to a user-defined device driver by using a device prefix in the pathname. The device prefix is the device name used in the call to `add_device` followed by a colon. For example:

```
FILE *fptr = fopen("mydevice:file1", "r");
int fd = open("mydevice:file2, O_RDONLY, 0);
```

If no device prefix is used, the HOST device will be used to open the file.

add_device	Add Device to Device Table				
Syntax for C	<pre>#include <file.h> int add_device(char * name, unsigned flags , int (* dopen)(const char *path, unsigned flags, int llv_fd), int (* dclose)(int dev_fd), int (* dread)(intdev_fd, char *buf, unsigned count), int (* dwrite)(int dev_fd, const char *buf, unsigned count), off_t (* dlseek)(int dev_fd, off_t ioffset, int origin), int (* dunlink)(const char * path), int (* drename)(const char *old_name, const char *new_name));</pre>				
Defined in	lowlev.c in rtssrc.zip				
Description	The <code>add_device</code> function adds a device record to the device table allowing that device to be used for I/O from C. The first entry in the device table is predefined to be the HOST device on which the debugger is running. The function <code>add_device()</code> finds the first empty position in the device table and initializes the fields of the structure that represent a device. To open a stream on a newly added device use <code>fopen()</code> with a string of the format <i>devicename : filename</i> as the first argument. - The <i>name</i> is a character string denoting the device name. The name is limited to 8 characters. - The <i>flags</i> are device characteristics. The flags are as follows: _SSA Denotes that the device supports only one open stream at a time _MSA Denotes that the device supports multiple open streams More flags can be added by defining them in <code>file.h</code>. - The <i>dopen</i>, <i>dclose</i>, <i>dread</i>, <i>dwrite</i>, <i>dlseek</i>, <i>dunlink</i>, and <i>drename</i> specifiers are function pointers to the functions in the device driver that are called by the low-level functions to perform I/O on the specified device. You must declare these functions with the interface specified in Section 8.3.2. The device driver for the HOST that the TMS320C28x debugger is run on are included in the C I/O library.				
Return Value	The function returns one of the following values: <table> <tr> <td>0</td> <td>if successful</td> </tr> <tr> <td>-1</td> <td>on failure</td> </tr> </table>	0	if successful	-1	on failure
0	if successful				
-1	on failure				

Example

[Example 8-2](#) does the following:

- Adds the device *mydevice* to the device table
- Opens a file named *test* on that device and associates it with the FILE pointer *fid*
- Writes the string *Hello, world* into the file
- Closes the file

[Example 8-2](#) illustrates adding and using a device for C I/O:

Example 8-2. Program for C I/O Device

```
#include <file.h>
#include <stdio.h>
/*****
/* Declarations of the user-defined device drivers */
*****/
extern int MYDEVICE_open(const char *path, unsigned flags, int fno);
extern int MYDEVICE_close(int fno);
extern int MYDEVICE_read(int fno, char *buffer, unsigned count);
extern int MYDEVICE_write(int fno, const char *buffer, unsigned count);
extern off_t MYDEVICE_lseek(int fno, off_t offset, int origin);
extern int MYDEVICE_unlink(const char *path);
extern int MYDEVICE_rename(const char *old_name, char *new_name);
main()
{
    FILE *fid;
    add_device("mydevice", _MSA, MYDEVICE_open, MYDEVICE_close, MYDEVICE_read,
              MYDEVICE_write, MYDEVICE_lseek, MYDEVICE_unlink, MYDEVICE_rename);
    fid = fopen("mydevice:test", "w");
    fprintf(fid, "Hello, world\n");

    fclose(fid);
}
```

8.4 Handling Reentrancy (`_register_lock()` and `_register_unlock()` Functions)

The C standard assumes only one thread of execution, with the only exception being extremely narrow support for signal handlers. The issue of reentrancy is avoided by not allowing you to do much of anything in a signal handler. However, BIOS applications have multiple threads which need to modify the same global program state, such as the CIO buffer, so reentrancy is a concern.

Part of the problem of reentrancy remains your responsibility, but the run-time-support environment does provide rudimentary support for multi-threaded reentrancy by providing support for critical sections. This implementation does not protect you from reentrancy issues such as calling run-time-support functions from inside interrupts; this remains your responsibility.

The run-time-support environment provides hooks to install critical section primitives. By default, a single-threaded model is assumed, and the critical section primitives are not employed. In a multi-threaded system such as BIOS, the kernel arranges to install semaphore lock primitive functions in these hooks, which are then called when the run-time-support enters code that needs to be protected by a critical section.

Throughout the run-time-support environment where a global state is accessed, and thus needs to be protected with a critical section, there are calls to the function `_lock()`. This calls the provided primitive, if installed, and acquires the semaphore before proceeding. Once the critical section is finished, `_unlock()` is called to release the semaphore.

Usually BIOS is responsible for creating and installing the primitives, so you do not need to take any action. However, this mechanism can be used in multi-threaded applications which do not use the BIOS LCK mechanism.

You should not define the functions `_lock()` and `_unlock()` functions directly; instead, the installation functions are called to instruct the run-time-support environment to use these new primitives:

```
void _register_lock (void ( *lock)());
```

```
void _register_unlock(void (*unlock)());
```

The arguments to `_register_lock()` and `_register_unlock()` should be functions which take no arguments and return no values, and which implement some sort of global semaphore locking:

```
extern volatile sig_atomic_t *sema = SHARED_SEMAPHORE_LOCATION;
static int sema_depth = 0;
static void my_lock(void)
{
    while (ATOMIC_TEST_AND_SET(sema, MY_UNIQUE_ID) != MY_UNIQUE_ID);
    sema_depth++;
}
static void my_unlock(void)
{
    if (--sema_depth) ATOMIC_CLEAR(sema);
}
```

The run-time-support nests calls to `_lock()`, so the primitives must keep track of the nesting level.

8.5 Library-Build Process

When using the C/C++ compiler, you can compile your code under a large number of different configurations and options that are not necessarily compatible with one another. Because it would be infeasible to include all possible run-time-support library variants, compiler releases pre-build only a small number of very commonly-used libraries such as `rts2800.lib`.

To provide maximum flexibility, the run-time-support source code is provided as part of each compiler release. You can build the missing libraries as desired. The linker can also automatically build missing libraries. This is accomplished with a new library build process, the core of which is the executable `mklib`, which is available beginning with CCS 5.1.

8.5.1 Required Non-Texas Instruments Software

To use the self-contained run-time-support build process to rebuild a library with custom options, the following are required:

- `sh` (Bourne shell)
- `unzip` (InfoZIP `unzip` 5.51 or later, or equivalent)
You can download the software from <http://www.info-zip.org>.
- `gmake` (GNU make 3.81 or later)

More information is available from GNU at <http://www.gnu.org/software/make>. GNU make (`gmake`) is also available in earlier versions of Code Composer Studio. GNU make is also included in some Unix support packages for Windows, such as the MKS Toolkit, Cygwin, and Interix. The GNU make used on Windows platforms should explicitly report "This program build for Windows32" when the following is executed from the Command Prompt window:

```
gmake -h
```

All three of these programs are provided as a non-optional feature of CCS 5.1. They are also available as part of the optional XDC Tools feature if you are using an earlier version of CCS.

The `mklib` program looks for these executables in the following order:

1. in your `PATH`
2. in the directory `getenv("CCS_UTILS_DIR")/cygwin`
3. in the directory `getenv("CCS_UTILS_DIR")/bin`
4. in the directory `getenv("XDCROOT")`
5. in the directory `getenv("XDCROOT")/bin`

If you are invoking `mklib` from the command line, and these executables are not in your path, you must set the environment variable `CCS_UTILS_DIR` such that `getenv("CCS_UTILS_DIR")/bin` contains the correct programs.

8.5.2 Using the Library-Build Process

You should normally let the linker automatically rebuild libraries as needed. If necessary, you can run `mklib` directly to populate libraries. See [Section 8.5.2.2](#) for situations when you might want to do this.

8.5.2.1 Automatic Standard Library Rebuilding by the Linker

The linker looks for run-time-support libraries primarily through the `C2000_C_DIR` environment variable. Typically, one of the pathnames in `C2000_C_DIR` is *your install directory/lib*, which contains all of the pre-built libraries, as well as the index library `libc.a`. The linker looks in `C2000_C_DIR` to find a library that is the best match for the build attributes of the application. The build attributes are set indirectly according to the command-line options used to build the application. Build attributes include things like CPU revision. If the library is explicitly named (e.g. `rts2800.lib`), run-time support looks for that library exactly; otherwise, it uses the index library `libc.a` to pick an appropriate library.

The index library describes a set of libraries with different build attributes. The linker will compare the build attributes for each potential library with the build attributes of the application and will pick the best fit. For details on the index library, see the archiver chapter in the *TMS320C28x Assembly Language Tools User's Guide*.

Now that the linker has decided which library to use, it checks whether the run-time-support library is present in C2000_C_DIR . The library must be in exactly the same directory as the index library libc.a. If the library is not present, the linker will invoke mklib to build it. This happens when the library is missing, regardless of whether the user specified the name of the library directly or allowed the linker to pick the best library from the index library.

The mklib program builds the requested library and places it in 'lib' directory part of C2000_C_DIR in the same directory as the index library, so it is available for subsequent compilations.

Things to watch out for:

- The linker invokes **mklib** and waits for it to finish before finishing the link, so you will experience a one-time delay when an uncommonly-used library is built for the first time. Build times of 1-5 minutes have been observed. This depends on the power of the host (number of CPUs, etc).
- In a shared installation, where an installation of the compiler is shared among more than one user, it is possible that two users might cause the linker to rebuild the same library at the same time. The **mklib** program tries to minimize the race condition, but it is possible one build will corrupt the other. In a shared environment, all libraries which might be needed should be built at install time; see [Section 8.5.2.2](#) for instructions on invoking **mklib** directly to avoid this problem.
- The index library must exist, or the linker is unable to rebuild libraries automatically.
- The index library must be in a user-writable directory, or the library is not built. If the compiler installation must be installed read-only (a good practice for shared installation), any missing libraries must be built at installation time by invoking **mklib** directly.
- The **mklib** program is specific to a certain version of a certain library; you cannot use one compiler version's run-time support's **mklib** to build a different compiler version's run-time support library.

8.5.2.2 Invoking mklib Manually

You may need to invoke **mklib** directly in special circumstances:

- The compiler installation directory is read-only or shared.
- You want to build a variant of the run-time-support library that is not pre-configured in the index library **libc.a** or known to mklib. (e.g. a variant with source-level debugging turned on.)

8.5.2.2.1 Building Standard Libraries

You can invoke mklib directly to build any or all of the libraries indexed in the index library **libc.a**. The libraries are built with the standard options for that library; the library names and the appropriate standard option sets are known to mklib.

This is most easily done by changing the working directory to be the compiler run-time-support library directory 'lib' and invoking the **mklib** executable there:

```
mklib --pattern=rts2800.lib
```

For C28x these libraries can be built:

- rts2800.lib (C/C++ run-time object library)
- rts2800_ml.lib (C/C++ large memory model run-time object library)
- rts2800_eh.lib (C/C++ run-time object library with exception handling support)
- rts2800_ml_eh.lib (C/C++ large memory model run-time object library with exception handling support)
- rts2800_fpu32.lib (C/C++ run-time object library for FPU targets)
- rts2800_fpu32_eh.lib (C/C++ run-time object library for FPU targets with exception handling support)

8.5.2.2.2 Shared or Read-Only Library Directory

If the compiler tools are to be installed in shared or read-only directory, mklib cannot build the standard libraries at link time; the libraries must be built before the library directory is made shared or read-only.

At installation time, the installing user must build all of the libraries which will be used by any user. To build all possible libraries, change the working directory to be the compiler RTS library directory 'lib' and invoke the mklib executable there:

```
mklib --all
```

Some targets have many libraries, so this step can take a long time. To build a subset of the libraries, invoke mklib individually for each desired library.

8.5.2.2.3 Building Libraries With Custom Options

You can build a library with any extra custom options desired. This is useful for building a debugging version of the library, or with silicon exception workarounds enabled. The generated library is not a standard library, and must not be placed in the 'lib' directory. It should be placed in a directory local to the project which needs it. To build a debugging version of the library rts2800.lib, change the working directory to the 'lib' directory and run the command:

```
mklib --pattern=rts2800.lib --name=rts2800_debug.lib --install_to=$Project/Debug --  
extra_options="-g"
```

8.5.2.2.4 The mklib Program Option Summary

Run the following command to see the full list of options. These are described in [Table 8-1](#).

```
mklib --help
```

Table 8-1. The mklib Program Options

Option	Effect
--index= <i>filename</i>	The index library (libc.a) for this release. Used to find a template library for custom builds, and to find the source files (rtssrc.zip). REQUIRED.
--pattern= <i>filename</i>	Pattern for building a library. If neither --extra_options nor --options are specified, the library will be the standard library with the standard options for that library. If either --extra_options or --options are specified, the library is a custom library with custom options. REQUIRED unless --all is used.
--all	Build all standard libraries at once.
--install_to= <i>directory</i>	The directory into which to write the library. For a standard library, this defaults to the same directory as the index library (libc.a). For a custom library, this option is REQUIRED.
--compiler_bin_dir= <i>directory</i>	The directory where the compiler executables are. When invoking mklib directly, the executables should be in the path, but if they are not, this option must be used to tell mklib where they are. This option is primarily for use when mklib is invoked by the linker.
--name= <i>filename</i>	File name for the library with no directory part. Only useful for custom libraries.
--options= <i>'str'</i>	Options to use when building the library. The default options (see below) are <i>replaced</i> by this string. If this option is used, the library will be a custom library.
--extra_options= <i>'str'</i>	Options to use when building the library. The default options (see below) are also used. If this option is used, the library will be a custom library.
--list_libraries	List the libraries this script is capable of building and exit. ordinary system-specific directory.
--log= <i>filename</i>	Save the build log as <i>filename</i> .
--tmpdir= <i>directory</i>	Use <i>directory</i> for scratch space instead of the ordinary system-specific directory.
--gmake= <i>filename</i>	Gmake-compatible program to invoke instead of "gmake"
--parallel= <i>N</i>	Compile <i>N</i> files at once ("gmake -j <i>N</i> ").
--query= <i>filename</i>	Does this script know how to build FILENAME?
--help or --h	Display this help.
--quiet or --q	Operate silently.
--verbose or --v	Extra information to debug this executable.

Examples:

To build all standard libraries and place them in the compiler's library directory:

```
mklib --all --index=$C_DIR/lib
```

To build one standard library and place it in the compiler's library directory:

```
mklib --pattern=rts2800.lib --index=$C_DIR/lib
```

To build a custom library that is just like rts2800.lib, but has symbolic debugging support enabled:

```
mklib --pattern=rts2800.lib --extra_options="-g" --index=$C_DIR/lib --install_to=$Project/Debug --  
name=rts2800_debug.lib
```

8.5.3 Extending mklib

The **mklib** API is a uniform interface that allows Code Composer Studio to build libraries without needing to know exactly what underlying mechanism is used to build it. Each library vendor (e.g. the TI compiler) provides a library-specific copy of 'mklib' in the library directory that can be invoked, which understands a standardized set of options, and understands how to build the library. This allows the linker to automatically build application-compatible versions of any vendor's library without needing to register the library in advance, as long as the vendor supports mklib.

8.5.3.1 Underlying Mechanism

The underlying mechanism can be anything the vendor desires. For the compiler run-time-support libraries, mklib is just a wrapper which knows how to unpack Makefile from rtssrc.zip and invoke gmake with the appropriate options to build each library. If necessary, mklib can be bypassed and Makefile used directly, but this mode of operation is not supported by TI, and the you are responsible for any changes to Makefile. The format of the Makefile and the interface between mklib and the Makefile is subject to change without notice. The mklib program is the forward-compatible path.

8.5.3.2 Libraries From Other Vendors

Any vendor who wishes to distribute a library that can be rebuilt automatically by the linker must provide:

- An index library (like 'libc.a', but with a different name)
- A copy of mklib specific to that library
- A copy of the library source code (in whatever format is convenient)

These things must be placed together in one directory that is part of the linker's library search path (specified either in C2000_C_DIR or with the linker --search_path option).

If mklib needs extra information that is not possible to pass as command-line options to the compiler, the vendor will need to provide some other means of discovering the information (such as a configuration file written by a wizard run from inside CCS).

The vendor-supplied mklib must at least accept all of the options listed in [Table 8-1](#) without error, even if they do not do anything.

C++ Name Demangler

The C++ compiler implements function overloading, operator overloading, and type-safe linking by encoding a function's prototype and namespace in its link-level name. The process of encoding the prototype into the linkname is often referred to as name mangling. When you inspect mangled names, such as in assembly files, disassembler output, or compiler or linker diagnostics, it can be difficult to associate a mangled name with its corresponding name in the C++ source code. The C++ name demangler is a debugging aid that translates each mangled name it detects to its original name found in the C++ source code.

These topics tell you how to invoke and use the C++ name demangler. The C++ name demangler reads in input, looking for mangled names. All unmangled text is copied to output unaltered. All mangled names are demangled before being copied to output.

Topic	Page
9.1 Invoking the C++ Name Demangler	170
9.2 C++ Name Demangler Options	170
9.3 Sample Usage of the C++ Name Demangler	171

9.1 Invoking the C++ Name Demangler

The syntax for invoking the C++ name demangler is:

dem2000 [*options*] [*filenames*]

dem2000	Command that invokes the C++ name demangler.
<i>options</i>	Options affect how the name demangler behaves. Options can appear anywhere on the command line. (Options are discussed in Section 9.2.)
<i>filenames</i>	Text input files, such as the assembly file output by the compiler, the assembler listing file, the disassembly file, and the linker map file. If no filenames are specified on the command line, dem2000 uses standard input.

By default, the C++ name demangler outputs to standard output. You can use the -o file option if you want to output to a file.

9.2 C++ Name Demangler Options

The following options apply only to the C++ name demangler:

-h	Prints a help screen that provides an online summary of the C++ name demangler options
-o file	Outputs to the given file rather than to standard out
-u	Specifies that external names do not have a C++ prefix
-v	Enables verbose mode (outputs a banner)

9.3 Sample Usage of the C++ Name Demangler

The examples in this section illustrate the demangling process. [Example 9-1](#) shows a sample C++ program. [Example 9-2](#) shows the resulting assembly that is output by the compiler. In this example, the linknames of all the functions are mangled; that is, their signature information is encoded into their names.

Example 9-1. C++ Code

```
int compute(int val, int *err);

int foo(int val, int *err)
{
    static int last_err = 0;
    int result = 0

    if (last_err == 0)
        result = compute(val, &last_err);

    *err = last_err;
    return result;
}
```

Example 9-2. Resulting Assembly for [Example 9-1](#)

```
*****
;
;* FNAME: _foo_FiPi                      FR SIZE:  4          *
;
;*
;* FUNCTION ENVIRONMENT                  *
;*
;* FUNCTION PROPERTIES                  *
;*
;*                                0 Parameter,  3 Auto,  0 SOE  *
;
*****

_foo_FiPi:
    ADDB        SP,#4
    MOVZ        DP,#_last_err$1
    MOV         *-SP[1],AL                ; |4|
    MOV         AL,@_last_err$1          ; |8|
    MOV         *-SP[2],AR4              ; |4|
    MOV         *-SP[3],#0                ; |6|
    BF          L1,NEQ                   ; |8|
    ; branch occurs                      ; |8|
    MOVL        XAR4,#_last_err$1        ; |9|
    MOV         AL,*-SP[1]                ; |9|
    LCR         #_compute__FiPi          ; |9|
    ; call occurs [#_compute__FiPi]      ; |9|
    MOV         *-SP[3],AL                ; |9|
L1:
    MOVZ        AR6,*-SP[2]              ; |11|
    MOV         *+XAR6[0],*(0:_last_err$1) ; |11|
    MOV         AL,*-SP[3]                ; |12|
    SUBB        SP,#4                    ; |12|
    LRETR
    ; return occurs
```

Executing the C++ name demangler demangles all names that it believes to be mangled. Enter:

```
dem2000 -v28 foo.asm
```

The result is shown in [Example 9-3](#). The linknames in [Example 9-2](#) foo() and compute() are demangled.

Example 9-3. Result After Running the C++ Name Demangler

```

*****
,* FNAME: foo(int, int *)          FR SIZE: 4          *
,*                               *
,* FUNCTION ENVIRONMENT          *
,*                               *
,* FUNCTION PROPERTIES          *
,*                               *
,*                               0 Parameter,  3 Auto,  0 SOE  *
,*                               *
*****

foo(int, int *):
    ADDB      SP,#4
    MOVZ      DP,#_last_err$1
    MOV       *-SP[1],AL          ; |4|
    MOV       AL,@_last_err$1    ; |8|
    MOV       *-SP[2],AR4        ; |4|
    MOV       *-SP[3],#0         ; |6|
    BF        L1,NEQ             ; |8|
    ; branch occurs              ; |8|
    MOVL      XAR4,#_last_err$1  ; |9|
    MOV       AL,*-SP[1]         ; |9|
    LCR       #compute(int, int *) ; |9|
    ; call occurs [#compute(int, int *)] ; |9|
    MOV       *-SP[3],AL         ; |9|
L1:
    MOVZ      AR6,*-SP[2]        ; |11|
    MOV       **XAR6[0],*(0:_last_err$1) ; |11|
    MOV       AL,*-SP[3]         ; |12|
    SUBB      SP,#4              ; |12|
    LRETR
    ; return occurs

```

CLA Compiler

The TMS320C28x Software Development toolset also includes support for compiling CLA C code. Because of CLA architecture and programming environment constraints the C language support has some restrictions that are detailed in [Section 10.2.2](#).

As when including CLA assembly, compiled CLA code is linked together with C28x code to create a single executable.

Topic	Page
10.1 How to Invoke the CLA Compiler	174
10.2 CLA C Language Implementation	175

10.1 How to Invoke the CLA Compiler

The CLA compiler is also invoked using the cl2000 command. Files that have a .cla extension are recognized by the compiler as CLA C files. The shell invokes separate CLA versions of the compiler passes to generate CLA-specific code. The --cla_support option is also required to assemble the output from the CLA code generator.

The object files generated by the compile can then be linked with other C28x objects files to create a C28x/CLA program.

To invoke the CLA compiler, enter:

```
cl2000 -v28 --cla_support=cla0 [other options] file.cla
```

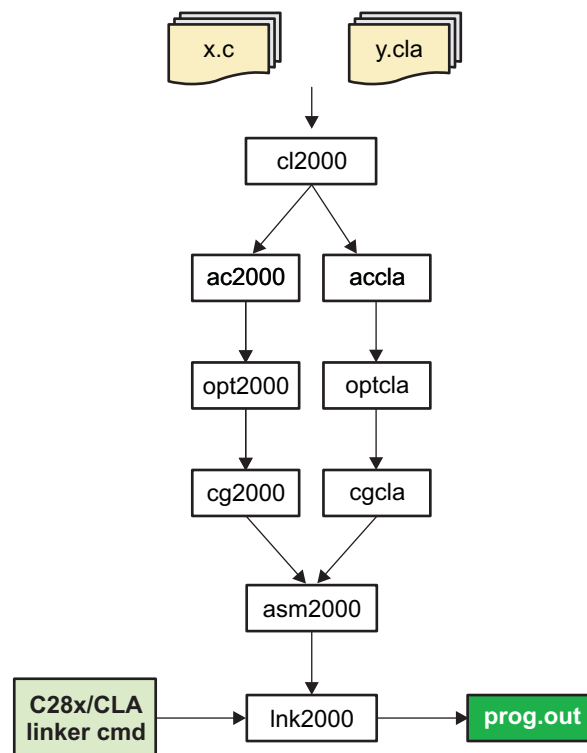


Figure 10-1. CLA Compilation Overview

Important facts about CLA C files:

- Files with .cla extension compile using different parser, optimizer, and code generator.
- cl2000 does not support compiling both .c and .cla files in a single invocation.
- C28X/CLA builds requires linker command file changes to accommodate CLA compiler-generated sections and scratchpad area.

10.2 CLA C Language Implementation

The CLA C language implementation requires changes from standard C.

10.2.1 Characteristics

CLA implementation supports C only. The compiler produces an error if compiling for C++ or GCC extensions.

These data types are supported:

- Type char is 16 bits.
- Type short is 16 bits. A char/short should be limited to load/store operations.
- Types int, long, and long long are 32 bits.

Note that the int size for CLA is 32 bits versus 16 bits on C28x. To avoid ambiguity when sharing data between CLA and C28x, it is strongly recommended to use type declarations that include size information (eg. int32, uint16, etc).

- Types float, double, and long double are 32 bits.
- Pointers are 16 bits.

Pointer sizes for CLA are always 16-bits. This differs from C28x in large data model.

No 64-bit Types With CLA Compiler

NOTE: The CLA compiler does not support 64-bit types.

CLA accepts the C28x pragmas except for FAST_FUNC_CALL.

The C standard library is not supported.

The far and ioport keywords are not recognized.

Access to the 'MMOV32 MSTF, mem32' and 'MMOV32 mem32, MSTF' instructions is provided using the cregister keyword. To access these MSTF instructions include the following declaration:

```
extern cregister volatile unsigned int MSTF;
```

The intrinsics listed in [Table 10-1](#) are supported. Additionally, the run-time library functions abs() and fabs() are implemented as intrinsics.

Table 10-1. C/C++ Compiler Intrinsics for CLA

Intrinsic	Assembly Instruction(s)	Description
<code>__mdebugstop()</code>	MDEBUGSTOP	Debug stop
<code>__meallow()</code>	MEALLOW	Enable write access to EALLOW registers
<code>__medis()</code>	MEDIS	Disable write access to EALLOW registers
<code>float __meinvf32(float x);</code>	MEINVF32 x	Estimate 1/x to about 8 bits of precision.
<code>float __meisqrtf32(float x);</code>	MEISQRTF32 x	Estimate the square root of 1/x to about 8 bits of precision.
<code>short __mf32toi16r(float src);</code>	MF32TOI16R dst, src	Convert double to int and round.
<code>unsigned short __mf32toui16r(float src);</code>	MF32TOUI16R dst, src	Convert double to unsigned int and round.
<code>float __mmaxf32(float x, float y);</code>	MMAXF32 dst, src	If <i>src</i> > <i>dst</i> , copy src to dst
<code>float __mminf32(float x, float y);</code>	MMINF32 dst, src	If <i>src</i> < <i>dst</i> , copy src to dst
<code>float __mfracf32(float src);</code>	MFRACF32 dst, src	Return the fractional portion of src.
<code>__mnop()</code>	MNOP	CLA no operation
<code>__msetflg(unsigned short, unsigned short)</code>	MSETFLG flag, value	Set/clear selected flag(s)
<code>void __mswapf(float a, float b);</code>	MSWAPF a, b	Swap the contents of a and b.

10.2.2 C Language Restrictions

There are several restrictions to the C language for CLA.

- Defining and initializing global/static data is not supported.

Since the CLA code is executed in an interrupt driven environment there is no C system boot sequence. As a result, global/static data initialization must be done during program execution, either by the C28x driver code or within a CLA function.

Variables defined as const can be initialized globally. The compiler creates initialized data sections named .const_cla to hold these variables.

- Only two levels of call stack depth is supported. See [Section 10.2.4](#) for details.
- Functions can have up to two arguments.
- Recursive function calls are not supported.
- The use of function pointers is not supported.
- The following operations are currently not supported due to lack of instruction set support making them expensive to implement:
 - Integer divide, modulus
 - Unsigned integer compares

10.2.3 Memory Model - Sections

The prototype CLA compiler places CLA code into section Cla1Prog as per the current convention used for CLA assembly.

Uninitialized global data is placed in section .bss_cla.

Initialized const data is placed in section .const_cla.

There is no C system heap for CLA (no support for malloc()).

Local variables and compiler temps are expected to be placed into a scratchpad memory area which functions as the CLA C software stack. The CLA compiler will access this memory space directly using the symbols __cla_scratchpad_start and __cla_scratchpad_end. It is expected that these symbols and the CLA compiler scratchpad memory area is defined and managed in the application's linker command file. A linker command file appropriate for a C28x/CLA target will be provided.

The size of the CLA scratchpad memory can be set by defining a linker symbol and assigning it the appropriately sized value. By convention, this symbol is CLA_SCRATCHPAD_SIZE. The purpose of defining this symbol is similar setting the --stack option. It can either be set using the linker --define option or defined in the application's linker command file.

The following is an example of what needs to be added to a linker command file to define the CLA compiler scratchpad memory:

```
CLA_SCRATCHPAD_SIZE = 0x100; // The symbol CLA_SCRATCHPAD_SIZE can alternatively be set on
the command line using the --define linker option
:
:
:
CLAScratch      : { . += CLA_SCRATCHPAD_SIZE; } > CLARAM1,
                  START(__cla_scratchpad_start),
                  END(__cla_scratchpad_end),
                  PAGE = 1
```

This example defines and sets the CLA_SCRATCHPAD_SIZE symbol to 0x100. It is preferable to use the --define linker option so that the value can be changed as needed at compile time. After the size definition, a SECTIONS directive can reference CLA_SCRATCHPAD_SIZE to allocate the scratchpad area. In the example, the SECTIONS directive reserves a 0x100 word memory hole to be used as the compiler scratchpad area. The value of CLA_SCRATCHPAD_SIZE can be changed based on the application.

10.2.4 Function Structure and Calling Conventions

The CLA compiler supports two level of function calls. Functions declared as interrupts can call leaf functions. Leaf functions cannot call other functions. Functions not declared as interrupt are considered leaf functions.

The CLA compiler supports calling functions with up to two arguments. Pointer arguments are passed in MAR0/MAR1. Integer/float arguments are passed in MR0,MR1. Integer and float return value from functions are passed in MR0. Pointer or return by reference value from functions are passed in MAR0. No arguments are placed in memory.

All registers except for MR3 are saved on call. MR3 is saved on entry.

When interfacing with CLA assembly language modules use these calling conventions to interface with compiled CLA code.

Glossary

absolute lister— A debugging tool that allows you to create assembler listings that contain absolute addresses.

assignment statement— A statement that initializes a variable with a value.

autoinitialization— The process of initializing global C variables (contained in the .cinit section) before program execution begins.

autoinitialization at run time— An autoinitialization method used by the linker when linking C code. The linker uses this method when you invoke it with the `--rom_model` link option. The linker loads the .cinit section of data tables into memory, and variables are initialized at run time.

alias disambiguation— A technique that determines when two pointer expressions cannot point to the same location, allowing the compiler to freely optimize such expressions.

aliasing— The ability for a single object to be accessed in more than one way, such as when two pointers point to a single object. It can disrupt optimization, because any indirect reference could refer to any other object.

allocation— A process in which the linker calculates the final memory addresses of output sections.

ANSI— American National Standards Institute; an organization that establishes standards voluntarily followed by industries.

archive library— A collection of individual files grouped into a single file by the archiver.

archiver— A software program that collects several individual files into a single file called an archive library. With the archiver, you can add, delete, extract, or replace members of the archive library.

assembler— A software program that creates a machine-language program from a source file that contains assembly language instructions, directives, and macro definitions. The assembler substitutes absolute operation codes for symbolic operation codes and absolute or relocatable addresses for symbolic addresses.

assignment statement— A statement that initializes a variable with a value.

autoinitialization— The process of initializing global C variables (contained in the .cinit section) before program execution begins.

autoinitialization at run time— An autoinitialization method used by the linker when linking C code. The linker uses this method when you invoke it with the `--rom_model` link option. The linker loads the .cinit section of data tables into memory, and variables are initialized at run time.

big endian— An addressing protocol in which bytes are numbered from left to right within a word. More significant bytes in a word have lower numbered addresses. Endian ordering is hardware-specific and is determined at reset. See also *little endian*

block— A set of statements that are grouped together within braces and treated as an entity.

.bss section— One of the default object file sections. You use the assembler .bss directive to reserve a specified amount of space in the memory map that you can use later for storing data. The .bss section is uninitialized.

byte— Per ANSI/ISO C, the smallest addressable unit that can hold a character.

- C/C++ compiler**— A software program that translates C source statements into assembly language source statements.
- code generator**— A compiler tool that takes the file produced by the parser or the optimizer and produces an assembly language source file.
- COFF**— Common object file format; a system of object files configured according to a standard developed by AT&T. These files are relocatable in memory space.
- command file**— A file that contains options, filenames, directives, or commands for the linker or hex conversion utility.
- comment**— A source statement (or portion of a source statement) that documents or improves readability of a source file. Comments are not compiled, assembled, or linked; they have no effect on the object file.
- compiler program**— A utility that lets you compile, assemble, and optionally link in one step. The compiler runs one or more source modules through the compiler (including the parser, optimizer, and code generator), the assembler, and the linker.
- configured memory**— Memory that the linker has specified for allocation.
- constant**— A type whose value cannot change.
- cross-reference listing**— An output file created by the assembler that lists the symbols that were defined, what line they were defined on, which lines referenced them, and their final values.
- .data section**— One of the default object file sections. The .data section is an initialized section that contains initialized data. You can use the .data directive to assemble code into the .data section.
- direct call**— A function call where one function calls another using the function's name.
- directives**— Special-purpose commands that control the actions and functions of a software tool (as opposed to assembly language instructions, which control the actions of a device).
- disambiguation**— See *alias disambiguation*
- dynamic memory allocation**— A technique used by several functions (such as malloc, calloc, and realloc) to dynamically allocate memory for variables at run time. This is accomplished by defining a large memory pool (heap) and using the functions to allocate memory from the heap.
- ELF**— Executable and Linkable Format; a system of object files configured according to the System V Application Binary Interface specification.
- emulator**— A hardware development system that duplicates the TMS320C28x operation.
- entry point**— A point in target memory where execution starts.
- environment variable**— A system symbol that you define and assign to a string. Environmental variables are often included in Windows batch files or UNIX shell scripts such as .cshrc or .profile.
- epilog**— The portion of code in a function that restores the stack and returns.
- executable object file**— A linked, executable object file that is downloaded and executed on a target system.
- expression**— A constant, a symbol, or a series of constants and symbols separated by arithmetic operators.
- external symbol**— A symbol that is used in the current program module but defined or declared in a different program module.
- file-level optimization**— A level of optimization where the compiler uses the information that it has about the entire file to optimize your code (as opposed to program-level optimization, where the compiler uses information that it has about the entire program to optimize your code).

- function inlining**— The process of inserting code for a function at the point of call. This saves the overhead of a function call and allows the optimizer to optimize the function in the context of the surrounding code.
- global symbol**— A symbol that is either defined in the current module and accessed in another, or accessed in the current module but defined in another.
- high-level language debugging**— The ability of a compiler to retain symbolic and high-level language information (such as type and function definitions) so that a debugging tool can use this information.
- indirect call**— A function call where one function calls another function by giving the address of the called function.
- initialization at load time**— An autoinitialization method used by the linker when linking C/C++ code. The linker uses this method when you invoke it with the `--ram_model` link option. This method initializes variables at load time instead of run time.
- initialized section**— A section from an object file that will be linked into an executable object file.
- input section**— A section from an object file that will be linked into an executable object file.
- integrated preprocessor**— A C/C++ preprocessor that is merged with the parser, allowing for faster compilation. Stand-alone preprocessing or preprocessed listing is also available.
- interlist feature**— A feature that inserts as comments your original C/C++ source statements into the assembly language output from the assembler. The C/C++ statements are inserted next to the equivalent assembly instructions.
- intrinsics**— Operators that are used like functions and produce assembly language code that would otherwise be inexpressible in C, or would take greater time and effort to code.
- ISO**— International Organization for Standardization; a worldwide federation of national standards bodies, which establishes international standards voluntarily followed by industries.
- K&R C**— Kernighan and Ritchie C, the de facto standard as defined in the first edition of *The C Programming Language* (K&R). Most K&R C programs written for earlier, non-ISO C compilers should correctly compile and run without modification.
- label**— A symbol that begins in column 1 of an assembler source statement and corresponds to the address of that statement. A label is the only assembler statement that can begin in column 1.
- linker**— A software program that combines object files to form an executable object file that can be allocated into system memory and executed by the device.
- listing file**— An output file, created by the assembler, that lists source statements, their line numbers, and their effects on the section program counter (SPC).
- little endian**— An addressing protocol in which bytes are numbered from right to left within a word. More significant bytes in a word have higher numbered addresses. Endian ordering is hardware-specific and is determined at reset. See also *big endian*.
- loader**— A device that places an executable object file into system memory.
- macro**— A user-defined routine that can be used as an instruction.
- macro call**— The process of invoking a macro.
- macro definition**— A block of source statements that define the name and the code that make up a macro.
- macro expansion**— The process of inserting source statements into your code in place of a macro call.

- map file**— An output file, created by the linker, that shows the memory configuration, section composition, section allocation, symbol definitions and the addresses at which the symbols were defined for your program.
- memory map**— A map of target system memory space that is partitioned into functional blocks.
- name mangling**— A compiler-specific feature that encodes a function name with information regarding the function's arguments return types.
- object file**— An assembled or linked file that contains machine-language object code.
- object library**— An archive library made up of individual object files.
- operand**— An argument of an assembly language instruction, assembler directive, or macro directive that supplies information to the operation performed by the instruction or directive.
- optimizer**— A software tool that improves the execution speed and reduces the size of C programs.
- options**— Command-line parameters that allow you to request additional or specific functions when you invoke a software tool.
- output section**— A final, allocated section in a linked, executable module.
- overlay page**— A section of physical memory that is mapped into the same address range as another section of memory. A hardware switch determines which range is active.
- parser**— A software tool that reads the source file, performs preprocessing functions, checks the syntax, and produces an intermediate file used as input for the optimizer or code generator.
- partitioning**— The process of assigning a data path to each instruction.
- pop**— An operation that retrieves a data object from a stack.
- pragma**— A preprocessor directive that provides directions to the compiler about how to treat a particular statement.
- preprocessor**— A software tool that interprets macro definitions, expands macros, interprets header files, interprets conditional compilation, and acts upon preprocessor directives.
- program-level optimization**— An aggressive level of optimization where all of the source files are compiled into one intermediate file. Because the compiler can see the entire program, several optimizations are performed with program-level optimization that are rarely applied during file-level optimization.
- prolog**— The portion of code in a function that sets up the stack.
- push**— An operation that places a data object on a stack for temporary storage.
- quiet run**— An option that suppresses the normal banner and the progress information.
- raw data**— Executable code or initialized data in an output section.
- relocation**— A process in which the linker adjusts all the references to a symbol when the symbol's address changes.
- run-time environment**— The run time parameters in which your program must function. These parameters are defined by the memory and register conventions, stack organization, function call conventions, and system initialization.
- run-time-support functions**— Standard ISO functions that perform tasks that are not part of the C language (such as memory allocation, string conversion, and string searches).
- run-time-support library**— A library file, `rts.src`, that contains the source for the run time-support functions.

- section**— A relocatable block of code or data that ultimately will be contiguous with other sections in the memory map.
- sign extend**— A process that fills the unused MSBs of a value with the value's sign bit.
- simulator**— A software development system that simulates TMS320C28x operation.
- source file**— A file that contains C/C++ code or assembly language code that is compiled or assembled to form an object file.
- stand-alone preprocessor**— A software tool that expands macros, #include files, and conditional compilation as an independent program. It also performs integrated preprocessing, which includes parsing of instructions.
- static variable**— A variable whose scope is confined to a function or a program. The values of static variables are not discarded when the function or program is exited; their previous value is resumed when the function or program is reentered.
- storage class**— An entry in the symbol table that indicates how to access a symbol.
- string table**— A table that stores symbol names that are longer than eight characters (symbol names of eight characters or longer cannot be stored in the symbol table; instead they are stored in the string table). The name portion of the symbol's entry points to the location of the string in the string table.
- structure**— A collection of one or more variables grouped together under a single name.
- subsection**— A relocatable block of code or data that ultimately will occupy continuous space in the memory map. Subsections are smaller sections within larger sections. Subsections give you tighter control of the memory map.
- symbol**— A string of alphanumeric characters that represents an address or a value.
- symbolic debugging**— The ability of a software tool to retain symbolic information that can be used by a debugging tool such as a simulator or an emulator.
- target system**— The system on which the object code you have developed is executed.
- .text section**— One of the default object file sections. The .text section is initialized and contains executable code. You can use the .text directive to assemble code into the .text section.
- trigraph sequence**— A 3-character sequence that has a meaning (as defined by the ISO 646-1983 Invariant Code Set). These characters cannot be represented in the C character set and are expanded to one character. For example, the trigraph '??' is expanded to '^'.
- unconfigured memory**— Memory that is not defined as part of the memory map and cannot be loaded with code or data.
- uninitialized section**— A object file section that reserves space in the memory map but that has no actual contents. These sections are built with the .bss and .usect directives.
- unsigned value**— A value that is treated as a nonnegative number, regardless of its actual sign.
- variable**— A symbol representing a quantity that can assume any of a set of values.
- word**— A 16-bit addressable location in target memory

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

Products

Audio	www.ti.com/audio
Amplifiers	amplifier.ti.com
Data Converters	dataconverter.ti.com
DLP® Products	www.dlp.com
DSP	dsp.ti.com
Clocks and Timers	www.ti.com/clocks
Interface	interface.ti.com
Logic	logic.ti.com
Power Mgmt	power.ti.com
Microcontrollers	microcontroller.ti.com
RFID	www.ti-rfid.com
OMAP Mobile Processors	www.ti.com/omap
Wireless Connectivity	www.ti.com/wirelessconnectivity

Applications

Automotive and Transportation	www.ti.com/automotive
Communications and Telecom	www.ti.com/communications
Computers and Peripherals	www.ti.com/computers
Consumer Electronics	www.ti.com/consumer-apps
Energy and Lighting	www.ti.com/energy
Industrial	www.ti.com/industrial
Medical	www.ti.com/medical
Security	www.ti.com/security
Space, Avionics and Defense	www.ti.com/space-avionics-defense
Video and Imaging	www.ti.com/video

TI E2E Community Home Page

e2e.ti.com

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2012, Texas Instruments Incorporated