

DS90UB954-Q1EVM User's Guide

User's Guide



Literature Number: SNLU223
August 2017

DRAFT ONLY
TI Confidential – NDA Restri

1	DS90UB954-Q1EVM Quick Start	5
1.1	Introduction	5
1.2	Quick Start Guide	6
1.2.1	System Requirements	6
1.2.1.1	Included Components	6
1.2.1.2	Additional Required Components	6
1.2.2	Applications Diagram	6
1.2.3	Major Components of DS90UB954-Q1EVM	7
1.2.4	Setup the DS90UB954-Q1EVM	7
2	DS90UB954-Q1EVM Board Configuration	8
2.1	Evaluation Board Connections	8
2.1.1	Default Configuration	8
2.1.2	Power Supply	8
2.1.3	Power Over Coax Interface	8
2.1.4	MIPI CSI-2 Output Signals	11
2.1.5	FPD-Link III Signals	11
2.1.6	I ² C Interface	12
2.1.7	Control Interface	12
2.2	Enable and Reset	14
2.3	Typical Connection and Test Equipment	15
2.4	Termination Device	15
2.5	Typical Test Setup	15
2.6	Equipment References	16
2.7	Cable References	16
3	Software for DS90UB954Q1-EVM Evaluation	17
3.1	Analog LaunchPAD (ALP) Software Setup	17
3.1.1	System Requirements	17
3.1.2	Download Contents	17
3.1.3	Installation of the ALP Software	17
3.1.4	Startup - First Launch	18
3.2	Using ALP and DS90UB954 Profile	21
3.2.1	Information Tab	21
3.2.2	Registers Tab	23
3.2.3	Registers Tab - Address 0x00 Expanded	24
3.2.4	Scripting Tab	25
3.2.5	Sample ALP Python Script	25
3.3	Troubleshooting ALP Software	26
3.3.1	ALP does not detect the EVM	27
3.3.2	USB2ANY Firmware Issues	28
4	DS90UB954-Q1EVM PCB Schematics, Layout and Bill of Materials	30
4.1	DS90UB954-Q1EVM Schematic	30
4.2	PDS90UB954-Q1 EVM PCB Layout	39
4.3	DS90UB954Q1-EVM Bill of Materials	50

List of Figures

1-1.	DS90UB954-Q1EVM	5
1-2.	Applications Diagram	6
1-3.	Interfacing to the EVM	7
2-1.	DS90UB954-Q1EVM with Jumpers Highlighted	8
2-2.	Power over Coax Network for use with DS90UB953	9
2-3.	Power Over Coax Network for use with DS90UB933	10
2-4.	Typical Test Setup for Evaluation	15
3-1.	Launching ALP Splash Screen	18
3-2.	Initial ALP Screen	18
3-3.	Select USB2ANY/Aardvark Setup to change profile.....	19
3-4.	ALP profiles dialog	20
3-5.	ALP profiles dialog (continued).....	21
3-6.	ALP Information Tab	22
3-7.	ALP Registers Tab	23
3-8.	ALP Device ID Expanded	24
3-9.	ALP Scripting Tab	25
3-10.	ALP No Devices Error	27
3-11.	Windows 7, ALP USB2ANY Driver	27
3-12.	ALP in Demo Mode	28
3-13.	ALP Preferences Menu.....	28
3-14.	USB2ANY Firmware Update Notice	29
3-15.	USB2ANY Firmware Update Procedure	29
4-1.	DS90UB954-Q1EVM Block Diagram	31
4-2.	DS90UB954-Q1EVM Main Circuit - Page 1.....	32
4-3.	DS90UB954-Q1EVM CSI-2 Connectors - Page 2	33
4-4.	DS90UB954-Q1EVM PoC Circuits - Page 3	34
4-5.	DS90UB954-Q1EVM Power Distribution Circuits - Page 4.....	35
4-6.	DS90UB954-Q1EVM LED Circuits - Page 5	36
4-7.	DS90UB954-Q1EVM USB2ANY Circuits - Page 6	37
4-8.	DS90UB954-Q1EVM Miscellaneous Hardware	38
4-9.	Top View Composite	39
4-10.	Layer 1: Top Signal Layer.....	40
4-11.	Layer 2: GND Plane 1	41
4-12.	Layer 3: Mid Signal Layer 1.....	42
4-13.	Layer 4: GND Plane 2	43
4-14.	Layer 5: GND Plane 3	44
4-15.	Layer 6: Mid Signal Layer 2.....	45
4-16.	Layer 7: GND Plane 4	46
4-17.	Layer 8: Bottom Signal Layer.....	47
4-18.	Bottom View Composite	48

List of Tables

2-1.	Power Supply.....	8
2-2.	Power Over Coax Power Supply Feed Configuration	10
2-3.	MIPI CSI-2 Output Signals - J5 and J6 Pinout	11
2-4.	FPD-Link III Signals.....	12
2-5.	IDx I ² C Device Address Select - J23	12
2-6.	I ² C Interface Header - J25	12
2-7.	VDDIO Interface Header - J16	12
2-8.	GPIO Interface Header - J22	12
2-9.	CMLOUTP Output Signals	13
2-10.	FPD-Link III Mode Control- J15	13
2-11.	Device Mode Control - J11	13
2-12.	LEDs	13
4-1.	DS90UB954-Q1EVM BOM	50

DRAFT ONLY

TI Confidential – NDA Restrictions

DS90UB954-Q1EVM Quick Start

1.1 Introduction

The Texas Instruments DS90UB954-Q1EVM evaluation module (EVM) is a functional board design for evaluating the DS90UB954-Q1 FPD-Link III deserializer, which converts serialized camera data to MIPI CSI-2 for processing. The MIPI CSI-2 output has four available lanes, and can be configured for either four-lane output or replicated two-lane output. When paired with a DS90UB953-Q1 serializer, the DS90UB954-Q1 receives data from imagers supporting up to 2MP/60fps and 4MP/30fps cameras as well as satellite RADAR. The DS90UB954-Q1 also supports up to 1MP/60fps and 2MP/30fps imagers when coupled with DS90UB913A/933 serializers.

The DS90UB954-Q1EVM is configured for communication with a DS90UB953-Q1 on channel 0 (RX0), and a DS90UB933-Q1 on channel 1 (RX1). The EVM has two Rosenberger FAKRA connectors and configurable power-over-coax (POC) voltage for connecting the camera modules (not included). FPD-Link III interfaces also includes a separate low latency bi-directional control channel that conveys control information from an I²C port. General purpose I/O signals such as those required for camera synchronization and functional safety features also make use of this bi-directional control channel in order to program registers in the DS90UB954-Q1 as well as the connected serializer and any remote I2C connected devices. There is an onboard MSP430 which functions as a USB2ANY bridge for interfacing with a PC for evaluation. The USB2ANY interfaces with the Analog LaunchPAD GUI tool.

NOTE: The demo board is not optimized for EMI testing. The demo board was designed for easy accessibility to device pins with tap points for monitoring or applying signals, additional pads for termination, and multiple connector options.

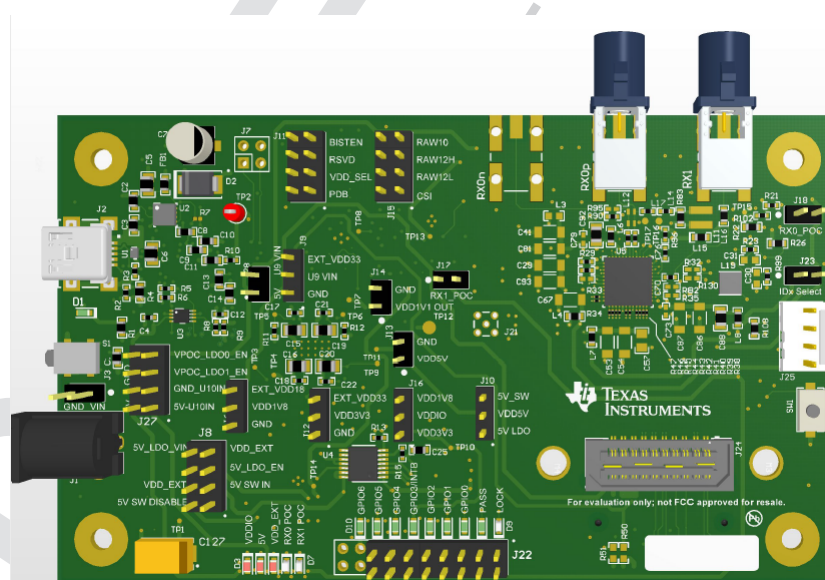


Figure 1-1. DS90UB954-Q1EVM

1.2 Quick Start Guide

1.2.1 System Requirements

1.2.1.1 Included Components

The major components of the DS90UB954-Q1EVM are:

- DS90UB954-Q1
- On-board Power-over-Coax (POC) interface
- Two FAKRA coax connectors for digital video, power, control and diagnostics
- Samtec QSH type connector for CSI-2 interface
- On-board I²C programming interface

1.2.1.2 Additional Required Components

In order to demonstrate the functionality of the DS90UB954-Q1, the following components are required (not included):

- One DS90UB953-Q1EVM or DS90UB933-Q1EVM
- One DACAR/FAKRA coax cable
- USB to mini USB cable OR I²C host controller that support clock stretching (such as USB2ANY)
- Power supply for 12V @ 1A (current limited bench supply recommended)
- Optional: MIPI CSI-2 output analyzer or host processor

1.2.2 Applications Diagram

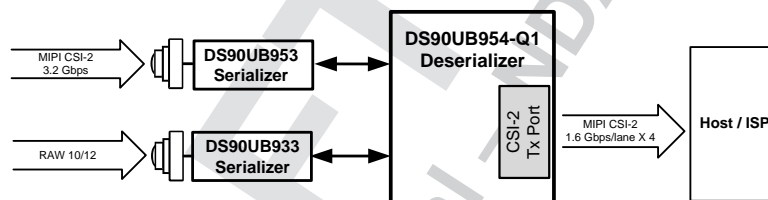


Figure 1-2. Applications Diagram

1.2.3 Major Components of DS90UB954-Q1EVM

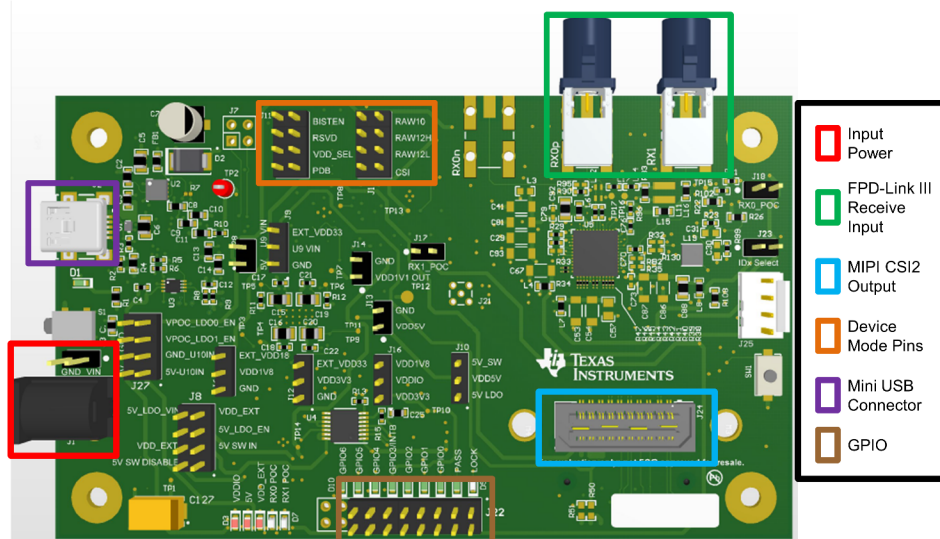


Figure 1-3. Interfacing to the EVM

1.2.4 Setup the DS90UB954-Q1EVM

1. Use mini USB to USB cable to connect J2 to computer USB port for register programming and open Analog LaunchPAD. See for details on installing and using Analog LaunchPAD.
2. Configure jumpers J8, J10, J11, J15, J16, J23, J27, set device's operating modes. The default configuration can be see in
3. Configure Power Over Coax power supplies for RX0 and RX1 with J18 and J17 respectively.
4. Connect the DS90UB954-Q1EVM to DS90UB953-Q1EVM to RX0 and/or DS90UB933-Q1EVM to RX1 using coax cable
5. Interface MIPI CSI-2 output signals (J24) to test equipment or host processor (optional, not required to check status of FPD-Link III connection between serializer and deserializer)
6. Provide power to board. Recommend using current limited bench supply to provide power to J1 (barrel jack) or J3.

DS90UB954-Q1EVM Board Configuration

2.1 Evaluation Board Connections

2.1.1 Default Configuration

Default jumper placement shown in red. This configuration sets the device into the following mode

- Device is set for FPD-Link III inputs from coax in CSI mode (for DS90UB953-Q1)
- VDDIO is set to 1.8V
- VDD5V is powered by the 5V LDO
- The 3.3V + 1.1V LDO (U10) is powered by VDD5V
- The 9V LDO for POC for RX0 and RX1 are enabled

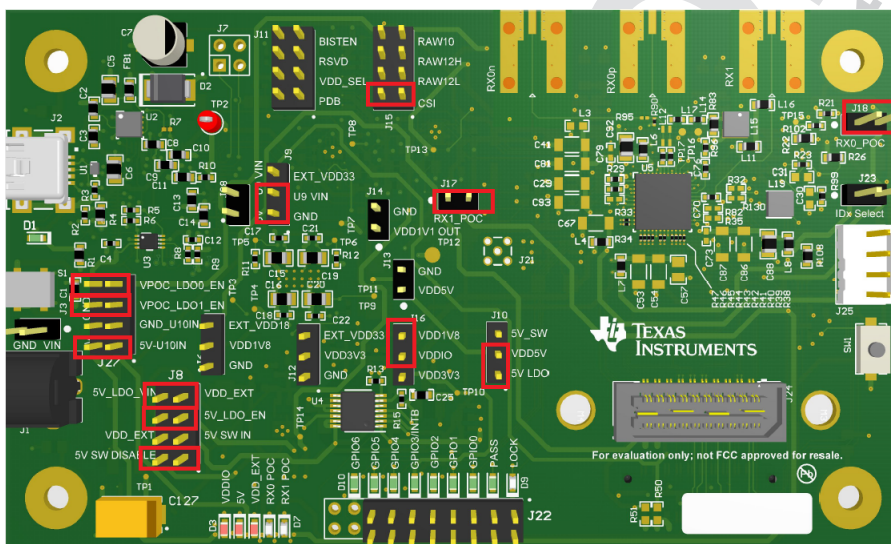


Figure 2-1. DS90UB954-Q1EVM with Jumpers Highlighted

2.1.2 Power Supply

Table 2-1. Power Supply

Reference	Signal	Description
J1/J3	+12V	Main Power Single +12VDC (nominal) power connector that supplies power to the entire board.

2.1.3 Power Over Coax Interface

The DS90UB954-Q1EVM offers two power over coax interfaces (POC) to connect cameras through a coaxial cable with FAKRA connectors. Power is delivered on the same conductor that is used to transmit video and control channel data between the host and the camera. By default, 5V power supply is applied over the coax cable. Refer to [Table 2-2](#) for other POC configurations.

NOTE: For port RX0, the POC network is configured for a DS90UB953-Q1, and for RX1 the POC network is configured for a DS90UB933-Q1. Only use a serializer EVM with the correct POC network. To use POC with two DS90UB953-Q1 or DS90UB933-Q1 EVM's, one of the POC networks must be reworked. You may also open the POC circuit and power the serializer EVM directly from another supply.

For power over coax (POC) on the EVM, the circuit uses a filter network as shown in Figure 2-3. The POC network frequency response corresponds to the bandwidth compatible with DS90UB953-Q1 chipsets.

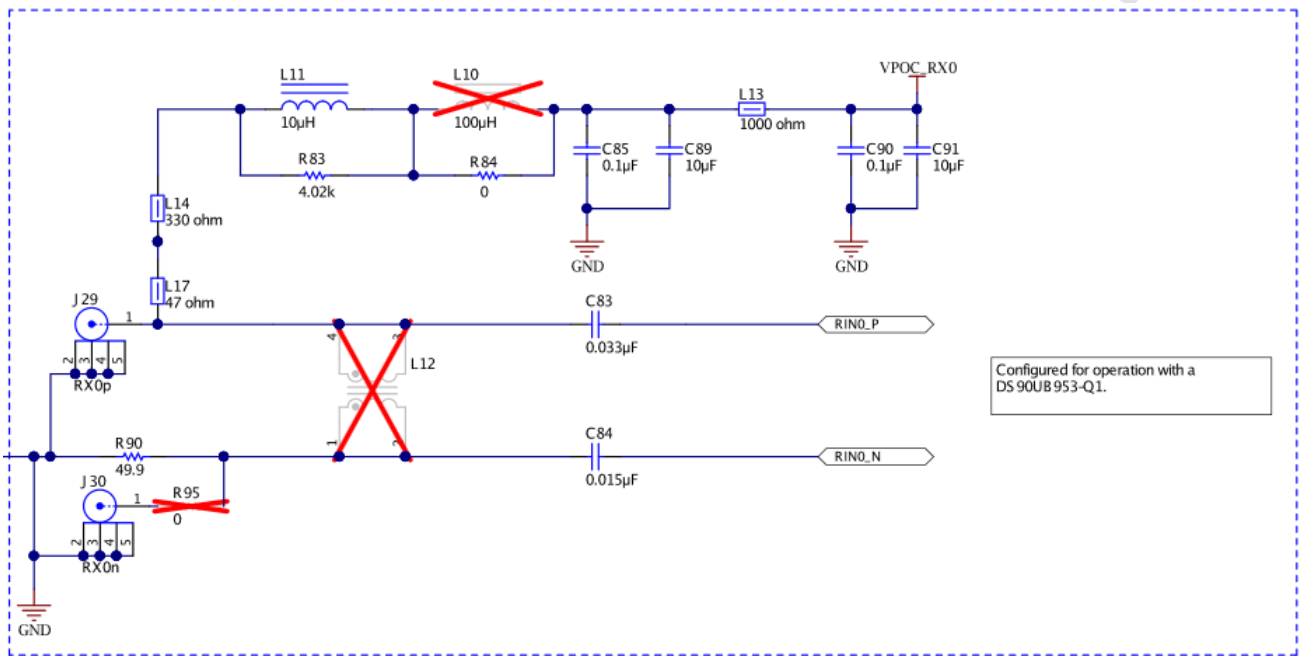


Figure 2-2. Power over Coax Network for use with DS90UB953

DRAFT
TI Confidential

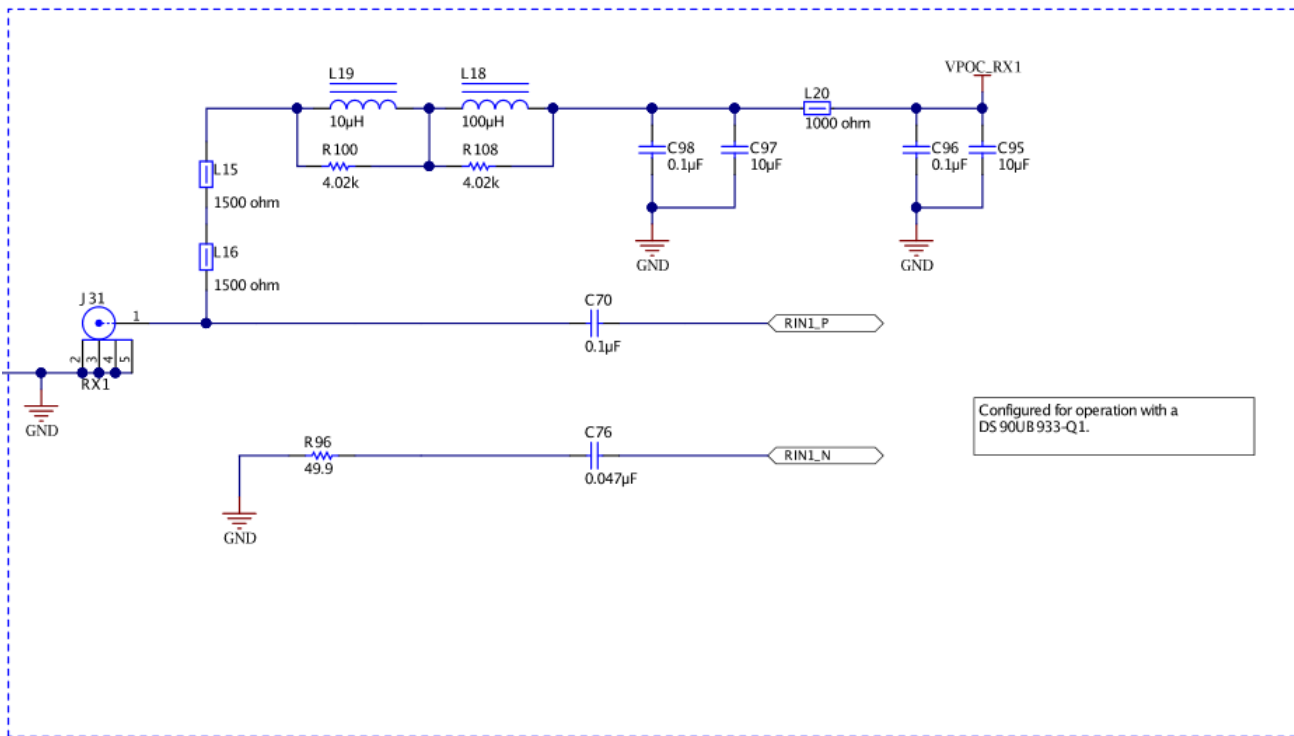


Figure 2-3. Power Over Coax Network for use with DS90UB933

WARNING

Verify that the power over coax voltage is properly set before plugging into RX0 or RX1. Power supply is not fused. Over-voltage will cause damage to boards directly connected due to incorrect input power supplies. DS90UB913A-Q1EVM is designed for a maximum of 5V POC. To use DS90UB913A-Q1EVM with DS90UB954-Q1EVM, open J17 or J18 to disable POC, and either power the DS90UB913A-Q1EVM separately or by applying 5V to the J17 or J18 pin on DS90UB954-Q1EVM.

Table 2-2. Power Over Coax Power Supply Feed Configuration

Reference	Signal	Description
J18	VPOC_RX0	This sets the voltage for Power over Coax on RX0
		Jumper installed: +9V power supply from VPOC_LDO0_9V Jumper Open: No POC connected. Apply power to pin1 or leave open and power serializer separately.
J17	VPOC_RX1	This sets the voltage for Power over Coax on RX1
		Jumper installed: +9V power supply from VPOC_LDO1_9V Jumper Open: No POC connected. Apply power to pin1 or leave open and power serializer separately.

2.1.4 MIPI CSI-2 Output Signals

There are two options provided for passing out the deserialized data on the DS90UB954-Q1EVM. The first is a Samtec QSH-type connector, J24, on the top of the board that can be mated with a matching QTH type connector. The mating connector part number for the J24 connector is QTH-020-01-H-D-DP-A. On the bottom of the board is a Samtec QTH-type connector, J26, meant for mating with a TDAX evaluation kit. The signals to the connectors are the same, including access to I²C and other signals including PDB and GPIO. Only one connector should be used at a time. If the J6 connector on the bottom is to be used, populate the zero ohm resistors on the bottom of the board which extend the traces to the J26 connector.

There are third party solutions like the HDR-128291-XX breakout board from Samtec which can be used. The HDR- 128291-XX is a breakout board with a mating connector to J24 or J26, providing access to each pin through standard SMA male connectors. More info on this breakout board can be obtained from Samtec website. Another third party option is the ZX100 by Zebax Technologies. More information on this board can be obtained from Zebax website.

Table 2-3. MIPI CSI-2 Output Signals - J5 and J6 Pinout

Pin #	Signal Name	Pin #	Signal Name
1	NC	2	EXP_SCL (I2C_SCL or I2C_SCL2)
3	NC	4	EXP_SDA (I2C_SDA or I2C_SDA2)
5	CSI_CLK0_P	6	NC
7	CSI_CLK0_N	8	NC
9	CSI_D0_P	10	EXP_REF_CLK (REFCLK)
11	CSI_D0_N	12	GND
13	CSI_D1_P	14	RESETn (PDB)
15	CSI_D1_N	16	GND
17	CSI_D2_P	18	SPI_MOSI (GPIO0 or GPIO3)
19	CSI_D2_N	20	SPI_SCLK (GPIO1 or GPIO4)
21	CSI_D3_P	22	SPI_CS _n (GPIO2 or GPIO5)
23	CSI_D3_N	24	GND
25	CSI_CLK1_P	26	NC
27	CS_CLK1_N	28	NC
29	NC	30	VDD_3V3
31	NC	32	VDD_3V3
33	NC	34	VDD_3V3
35	NC	36	VDD_3V3
37	NC	38	VDD_1V8
39	NC	40	VDD_1V8

NOTE: Populate R60-R69, R71,R72 (0Ω resistors) only when using the J26 connector on the bottom of the board. Do not use J24 and J26 connectors at the same time.

2.1.5 FPD-Link III Signals

Table 2-4. FPD-Link III Signals

Reference	Signal	Description
RX0p	RIN0+	FAKRA connector for DS90UB953-Q1 serializer
RX0n	RIN0-	FAKRA connector footprint for use with STP applications.
RX1	RIN1+	FAKRA connector for DS90UB933-Q1 serializer

2.1.6 I²C Interface

In addition to the on-board USB2ANY controller accessible via the mini-USB port, a standalone external I²C host can connect via J25 for programming purposes. Examples of external I²C host controllers are Texas Instruments USB2ANY and Total Phase Aardvark I²C/SPI host adapter (Total Phase Part#: TP240141).

When the I²C interface is accessed through connector J25, I²C signal levels can be configured through J16 to be at 1.8V or 3.3V. Optional access to I²C signals are also available via CSI-2 connectors J24 (top) and J26 (bottom).

Table 2-5. IDx I²C Device Address Select - J23

Reference	Signal	Description
J23	IDX Select	Selects I ² C Device Address
		Open: 0x30 (7'b) or 0x60 (8'b)
		Short: 0x3D (7'b) or 0x7A (8'b) (Default)

Table 2-6. I²C Interface Header - J25

Reference	Signal	Description
J25.1	VDDIO	I ² C bus voltage (tied to VDDIO)
J25.2	I2C_SCL	I ² C Clock Interface for I ² C bus
J25.3	I2C_SDA	I ² C Data Interface for I ² C bus
J25.4	GND	Ground

2.1.7 Control Interface

Table 2-7. VDDIO Interface Header - J16

Reference	Signal	Description
J16	VDDIO	Selects VDDIO bus voltage
		Short pins 1-2: 3.3V IO (Default)
		Short pins 2-3: 1.8V IO

Table 2-8. GPIO Interface Header - J22

Reference	Signal	Description
J22.1	GPIO0	General Purpose Input/Output 0
J22.3	GPIO1	General Purpose Input/Output 1
J22.5	GPIO2	General Purpose Input/Output 2
J22.7	GPIO3/INTB	General Purpose Input/Output 3 / Interrupt (Active Low). Pulled up to VDDIO by 4.7k Ω
J22.9	GPIO4	General Purpose Input/Output 4
J22.11	GPIO5	General Purpose Input/Output 5
J22.13	GPIO6	General Purpose Input/Output 6

Table 2-8. GPIO Interface Header - J22 (continued)

Reference	Signal	Description
J22.15	EN 25MHz	Enable/Disable 25MHz Oscillator

Table 2-9. CMLOUTP Output Signals

Reference	Signal	Description
TP16	CMLOUTP	Test Pad for Channel Monitor Loop-through Driver
TP17	CMLOUTN	Test Pad for Channel Monitor Loop-through Driver

Table 2-10. FPD-Link III Mode Control- J15⁽¹⁾

Reference	Mode	Description
J15.1	1	CSI Mode (DS90UB953-Q1 compatible) ⁽²⁾
J15.2	2	RAW12 / LF (DS90UB933 compatible)
J15.3	3	RAW12 / HF (DS90UB933 compatible)
J15.4	4	RAW10 (DS90UB933 compatible)

⁽¹⁾ Only set one ON.

⁽²⁾ This function is only available with 2-MP ADAS chipsets.

Table 2-11. Device Mode Control - J11

Reference	Signal	Input = L	Input = H	Description
J11.1	BISTEN	For Normal operation (Default)	Test Mode enable	Test Mode
J11.2	RSVD	Tied to GND (Default)	N/A	Reserved
J11.3	VDD_SEL	Internal 1.1V regulator from 1.8V supply (Default)	1.1V is supplied to VDD1V1 pins	VDD 1.1V Source Select
J11.4	PDB	Device is powered down	Device is enabled (Default)	Power-down Mode

Table 2-12. LEDs

Reference	LED Color	LED Name	Description
D3	Red	VDDIO	Illuminates on VDDIO Power
D4	Red	VDD5V	Illuminates on +5V
D5	Red	VDD_EXT	Illuminates if 12V Power is applied to DC-IN J24
D6	Orange	VPOC_RX1	Illuminates if VPOC_RX1 is ON
D7	Orange	VPOC_RX0	Illuminates if VPOC_RX0 is ON
D8	Orange	PASS	Illuminates if PASS pin is HIGH
D9	Green	LOCK	Illuminates if LOCK pin is HIGH
D10	Green	GPIO6	Illuminates if GPIO6 is HIGH
D11	Green	GPIO5	Illuminates if GPIO5 is HIGH
D12	Green	GPIO4	Illuminates if GPIO48 is HIGH
D13	Green	GPIO3/INTB	Illuminates if GPIO3 is HIGH, or GPIO3 disabled (pulled-up)
D14	Green	GPIO2	Illuminates if GPIO2 is HIGH
D15	Green	GPIO1	Illuminates if GPIO1 is HIGH
D16	Green	GPIO0	Illuminates if GPIO0 is HIGH

2.2 Enable and Reset

The DS90UB954-Q1 is enabled and reset by controlling the PDB input level. PDB has an internal pull down, and should remain low until all supplies are stable. There are three device enable and reset/power-down options for the EVM.

- RC timing option: The RC delay created with C123 and R131 connected to the PDB pin is the default option for delaying PDB on the EVM. This is used for simplicity of debugging and using the device. TI recommends using a GPIO signal from a host process or to drive PDB after all rails have settled in customer designs.
- External control option: A momentary push-button switch, SW1, is available for manually driving the PDB signal low while the button is held.
- Software control option: The PDB pin is also made available in the J24 and J26 CSI-2 output connectors, allowing a host processor to control the PDB pin.

DRAFT ONLY
TI Confidential – NDA Restrictions

2.3 Typical Connection and Test Equipment

The following is a list of typical test equipment that may be used to monitor the MIPI CSI-2 signals from the DS90UB954-Q1:

1. Logic Analyzer
2. Any SCOPE with a bandwidth of at least 4 GHz for observing differential signals.
3. UNH-IOL MIPI D-PHY Reference Termination Board (RTB)
4. UNH-IOL MIPI D-PHY/CSI/DSI Probing Board
5. UNH-IOL CSIGUI Tool

2.4 Termination Device

A termination device is required in order to properly monitor and measure the transmission of the MIPI DPHY signals. The termination device should support the change of signals as it switches between LP and HS modes. This can be provided by either a CSI-2 receiver or a dedicated dynamic termination board. The recommended termination board is the UNH-IOL MIPI D-PHY Reference Termination Board (RTB).

2.5 Typical Test Setup

Figure 2-4 illustrate the typical test setups used to measure and evaluate DS90UB954-Q1.

The picture below shows a typical test set up using a logic analyzer or oscilloscope.

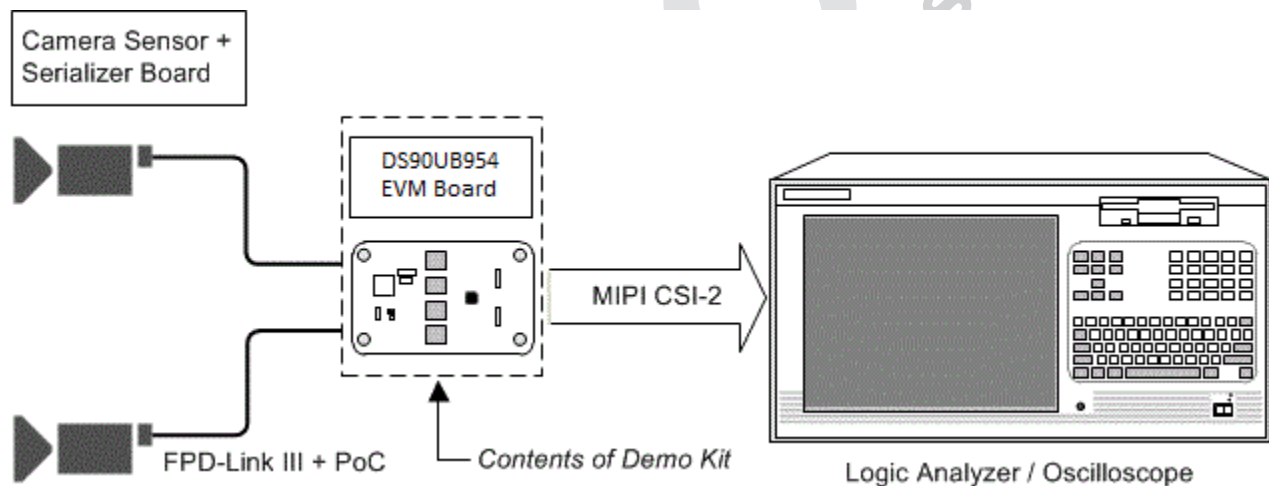


Figure 2-4. Typical Test Setup for Evaluation

2.6 Equipment References

NOTE: Please note that the following references are supplied only as a courtesy to our valued customers. It is not intended to be an endorsement of any particular equipment or supplier.

Logic Analyzer:

Keysight Technologies

www.keysight.com

MIPI Test Fixtures:

University of New Hampshire InterOperability Laboratory (UNH-IOL)

www.iol.unh.edu/services/testing/mipi/fixtures.php

Aardvark I²C/SPI Host Adapter Part Number: TP240141

www.totalphase.com/products/aardvark_i2cspi

2.7 Cable References

FAKRA coaxial cable:

www.leoni-automotive-cables.com

Rosenberger FAKRA connector:

<http://www.rosenberger.com/en/products/automotive/fakra.php>

DRAFT ONLY

TI Confidential – NDA Restrictions

Software for DS90UB954Q1-EVM Evaluation

3.1 Analog LaunchPAD (ALP) Software Setup

3.1.1 System Requirements

Operating System:	Windows 7 64-bit
USB:	USB2ANY (on-board, accessible via mini USB connector)
USB2ANY Firmware Version:	2.5.2.0
USB:	Aardvark I ² C/SPI host adapter p/n TP240141

3.1.2 Download Contents

Latest TI Analog LaunchPAD can be downloaded from: <http://www.ti.com/tool/alp>.

Download and extract the zip file to a temporary location that can be deleted later.

The following installation instructions are for a PC running Windows 7 64-bit Operating System.

3.1.3 Installation of the ALP Software

Execute the ALP Setup Wizard program called “ALPF_setup_v_x_x_x.exe” that was extracted to a temporary location on the local drive of your PC.

There are 7 steps to the installation once the setup wizard is started:

1. Select the “Next” button.
2. Select “I accept the agreement” and then select the “Next” button.
3. Select the location to install the ALP software and then select the “Next” button.
4. Select the location for the start menu shortcut and then select the “Next” button.
5. There will then be a screen that allows the creation of a desktop icon. After selecting the desired choices select the “Next” button.
6. Select the “Install” button, and the software will then be installed to the selected location.
7. Uncheck “Launch Analog LaunchPAD” and select the “Finish” button. The ALP software will start if “Launch Analog LaunchPAD” is checked, but it will not be useful until the USB driver is installed and board is attached.

Power the DS90UB954-Q1 EVM board with a 12 VDC power supply.

3.1.4 Startup - First Launch

Make sure all the software has been installed and the hardware is powered on and connected to the PC. Execute “Analog LaunchPAD” shortcut from the start menu. The default start menu location is under All Programs > Texas Instruments > Analog LaunchPAD vx.x.x > Analog LaunchPAD to start MainGUI.exe.



Figure 3-1. Launching ALP Splash Screen

Upon first launch of the Analog LaunchPAD utility, the default device will be DS90UB925. The active device can be seen as highlighted in ,here showing the DS90UB954 as active. If the active device is already set to DS90UB954 you may skip to .

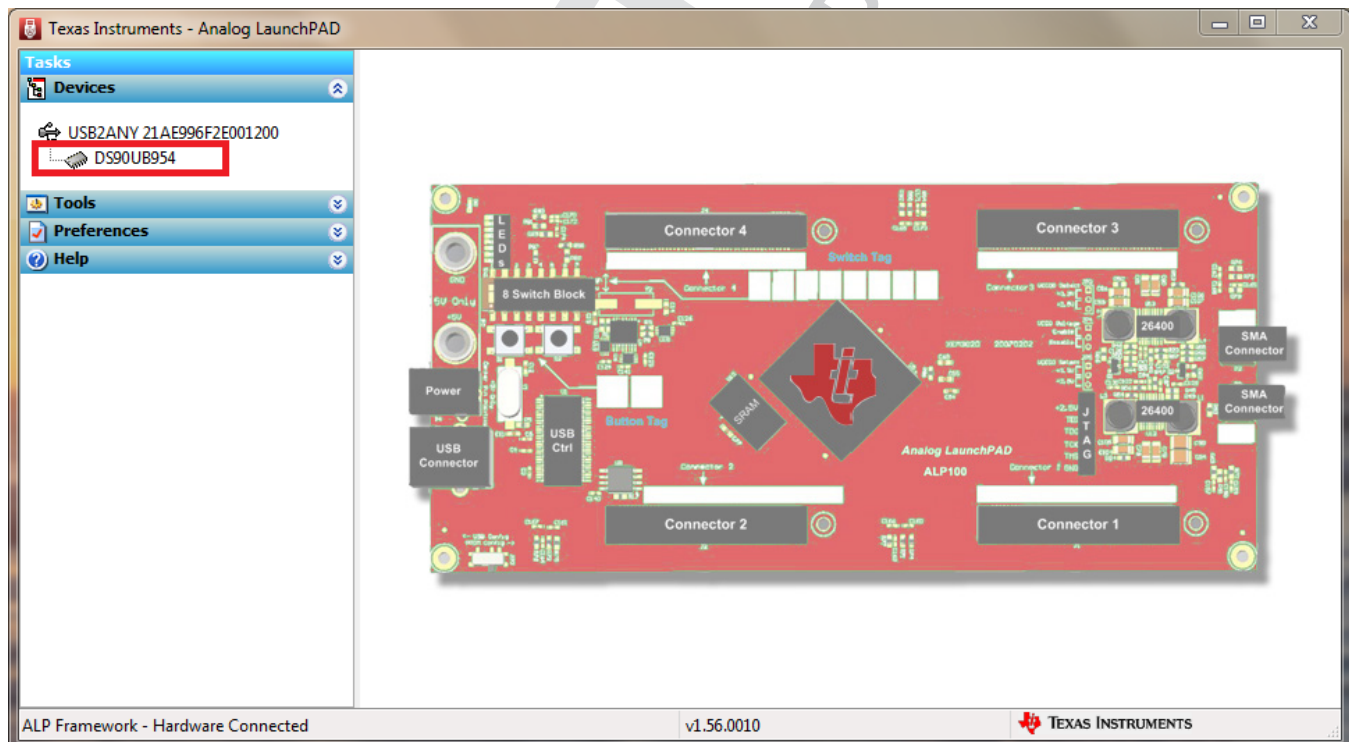


Figure 3-2. Initial ALP Screen

Follow the steps beginning with to change the ALP profile to DS90UB954.

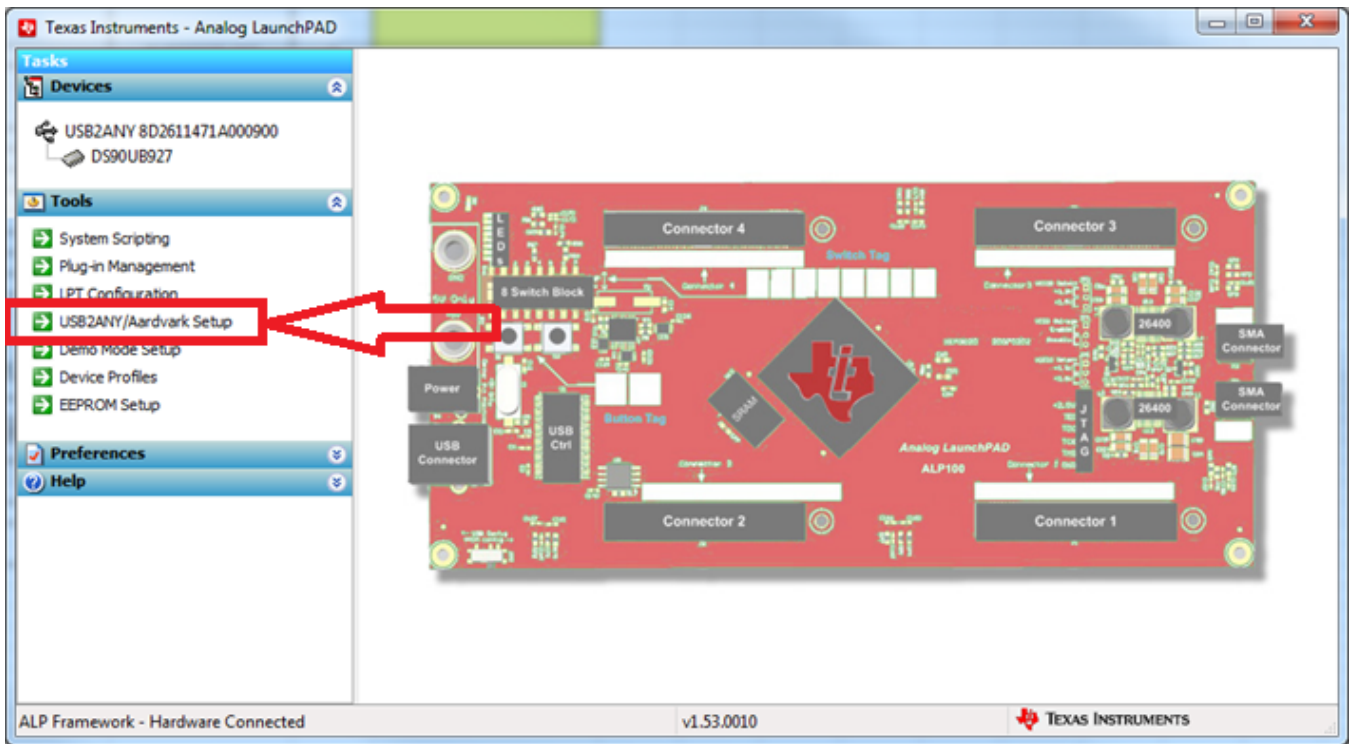


Figure 3-3. Select USB2ANY/Aardvark Setup to change profile

Select the active profile and click "Remove". Scroll down the list of available profiles to DS90UB954, click to highlight it, click "Add", and click "Ok".

DRAFT

TI Confidential - NDA#

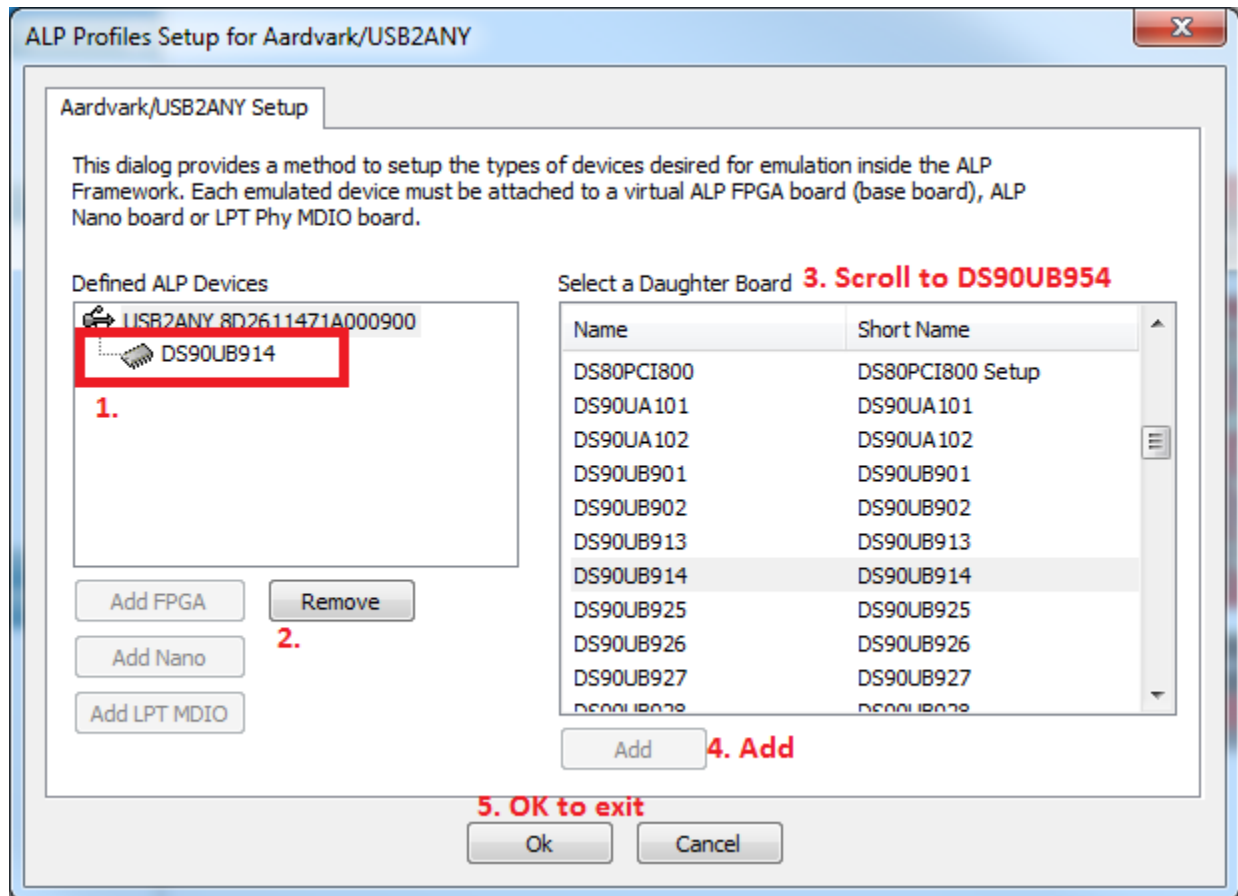


Figure 3-4. ALP profiles dialog

DRAFT

TI Confidential

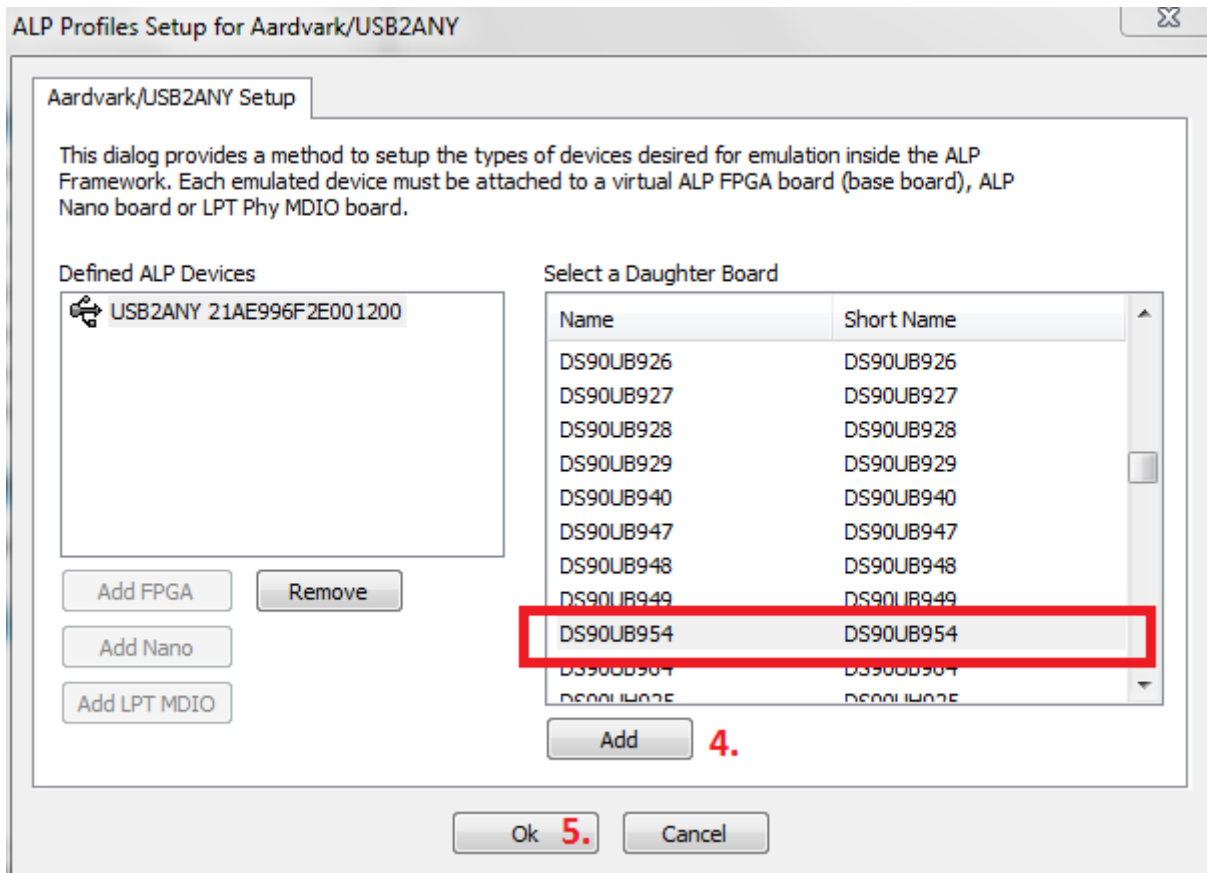


Figure 3-5. ALP profiles dialog (continued)

3.2 Using ALP and DS90UB954 Profile

3.2.1 Information Tab

Under the Devices tab click on “DS90UB954” to select the device and open up the device profile and its associated tabs. After selecting the DS90UB954, the following screen shown in should appear. The Information tab is shown below. The information tab shown assumes active and locked connection to a DS90UB953 on RX0, and an open port on RX1.

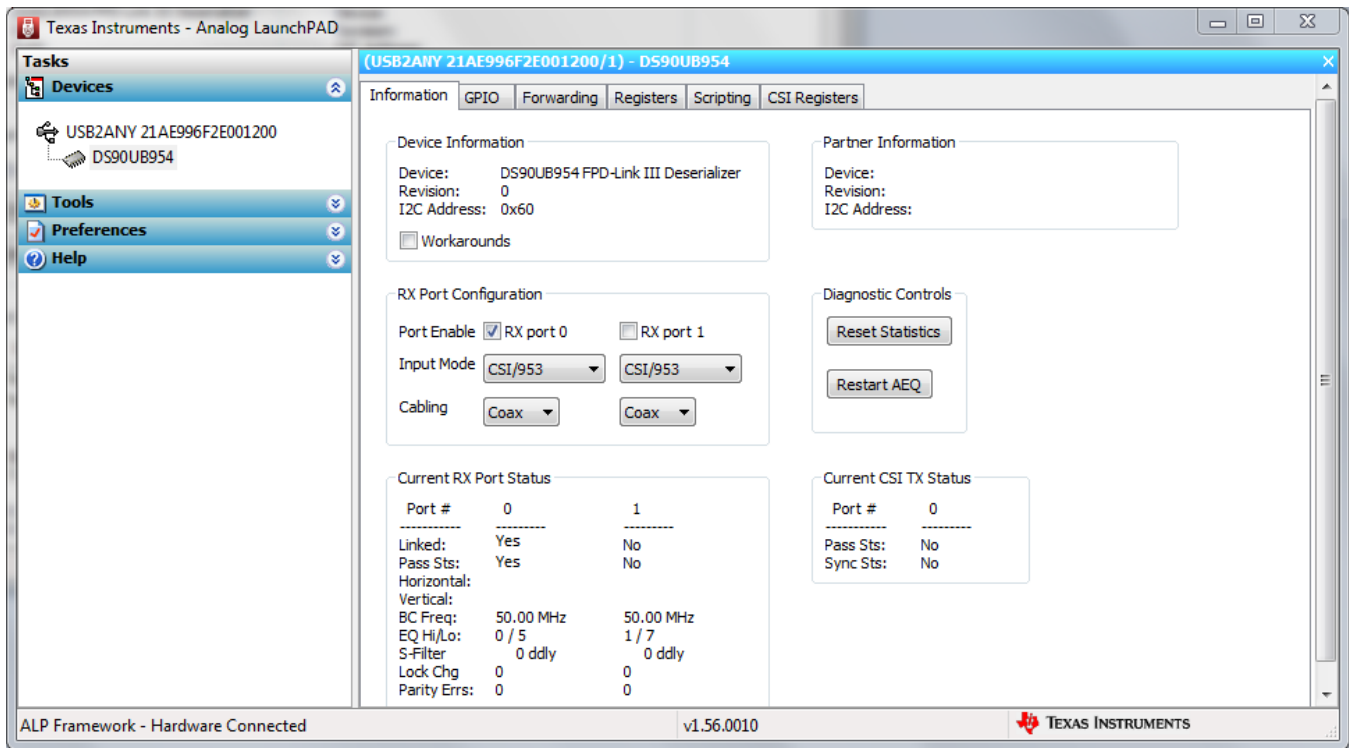


Figure 3-6. ALP Information Tab

DRAFT

TI Confidential - NDA

3.2.2 Registers Tab

The Register tab is shown in Figure 3-7. Note that the value of the currently selected register is populated in the "Value:" box at the top. In the figure below, the register I2C_DEVICE_ID is reading a hexadecimal value of 0x60.

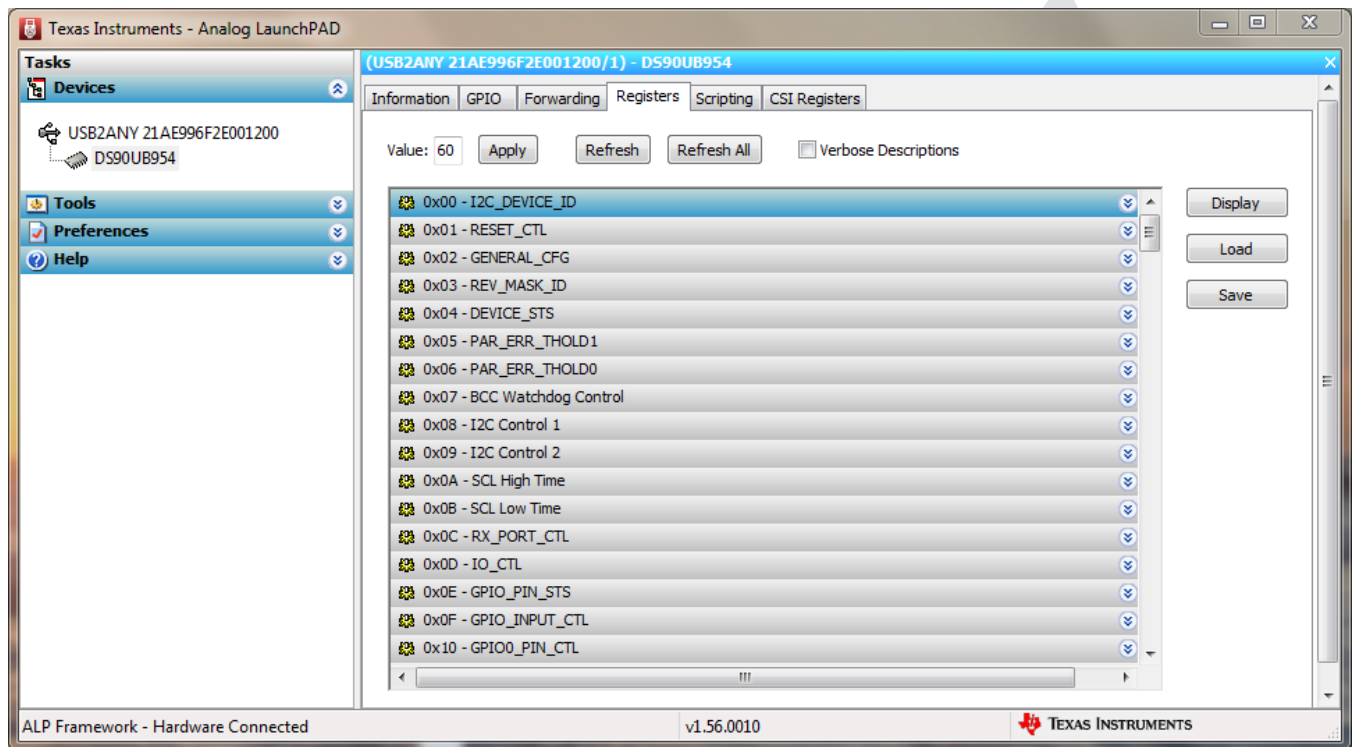


Figure 3-7. ALP Registers Tab


DRAFT

TI Confidential - INTERNAL

3.2.3 Registers Tab - Address 0x00 Expanded

By double clicking on the Address bar



or a single click on . Address 0x00 expanded reveals contents by bits. Any register address displayed can be expanded.

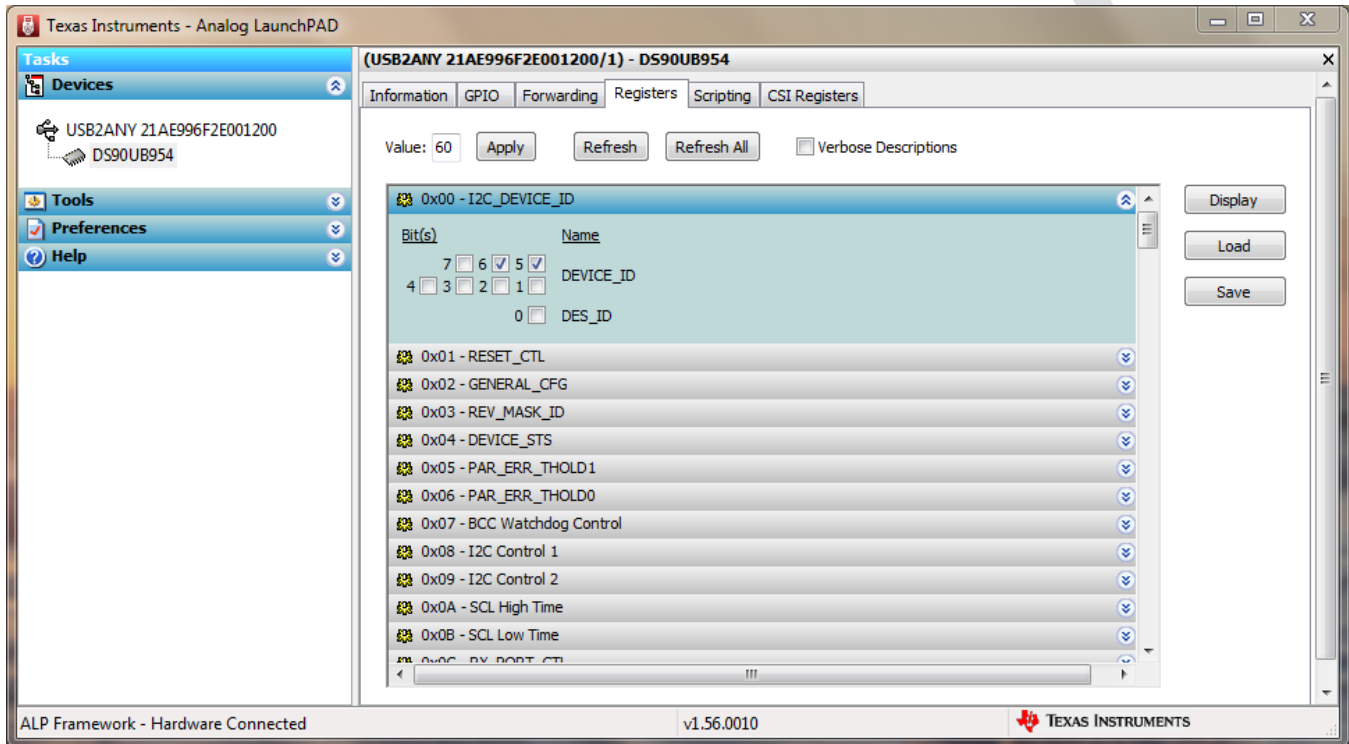


Figure 3-8. ALP Device ID Expanded

Any RW Type register can be written into by writing the hex value into the “Value:” box, Value: or putting the pointer into the individual register bit(s) box by a left mouse click to put a check mark (indicating a “1”) or unchecking to remove the check mark (indicating a “0”). Click the “Apply” button to write to the register, and “refresh” to see the new value of the selected (highlighted) register.

The box toggles on every mouse click.

3.2.4 Scripting Tab

The Scripting tab is shown below.

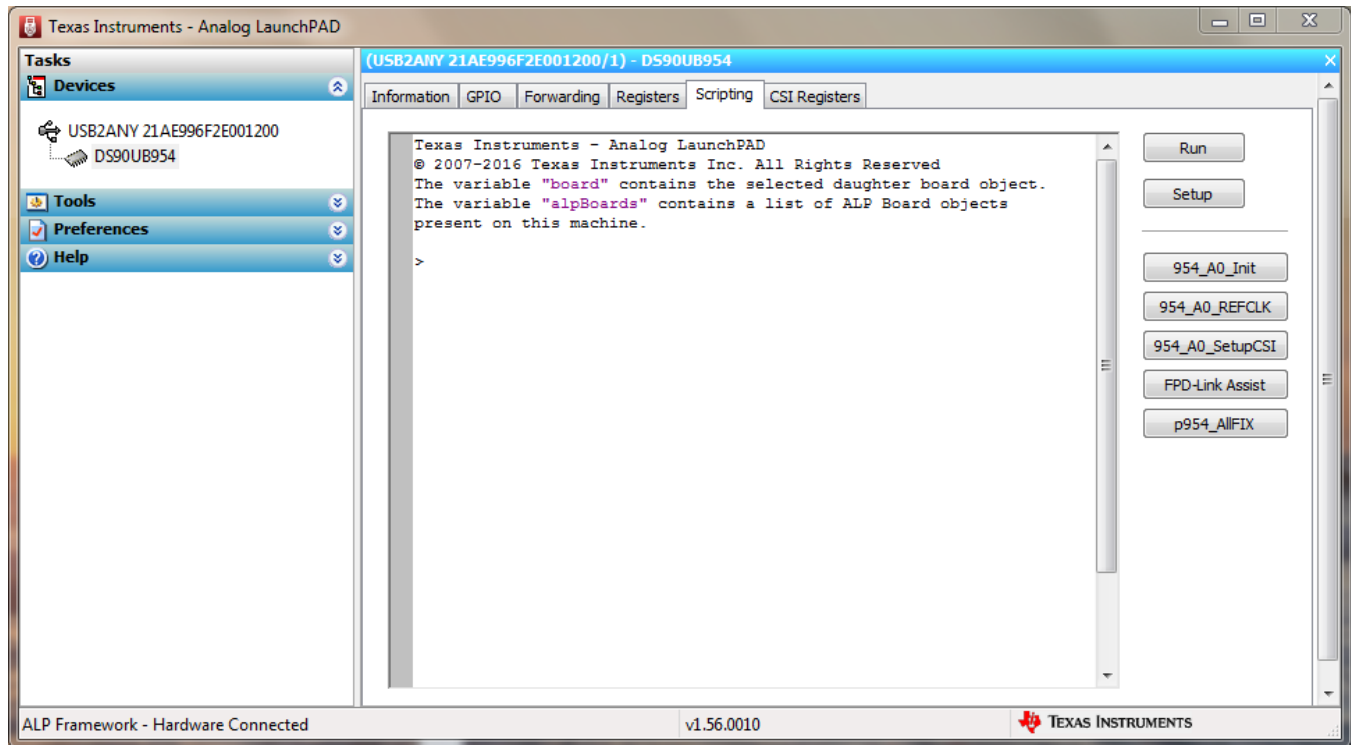


Figure 3-9. ALP Scripting Tab

The script window provides a full Python scripting environment which can be for running scripts and interacting with the device in an interactive or automated fashion.

WARNING

Directly interacting with devices either through register modifications or calling device support library functions can effect the performance and/or functionality of the user interface and may even crash the ALP Framework application.

3.2.5 Sample ALP Python Script

The following are sample python scripts that should be run before attempting to transmit video data from a serializer. The code can be saved as a python script and run from the ALP scripting tab by click "Run" and opening the saved script. The script will execute as soon as the dialog box closes.

3.3 Troubleshooting ALP Software

DRAFT ONLY
TI Confidential – NDA Restrictions

3.3.1 ALP does not detect the EVM

If the following window opens after starting the ALP software, double check the hardware setup.

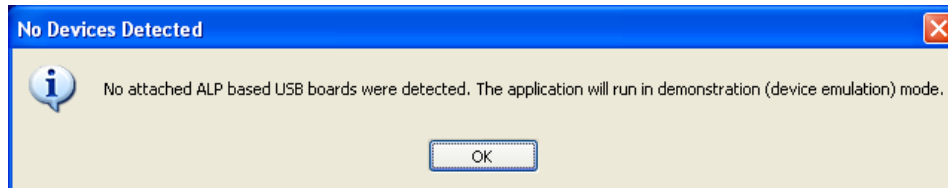


Figure 3-10. ALP No Devices Error

It may also be that the USB2ANY driver is not installed. Check the device manager. There should be a “HID-compliant device” under the “Human Interface Devices” as shown below.

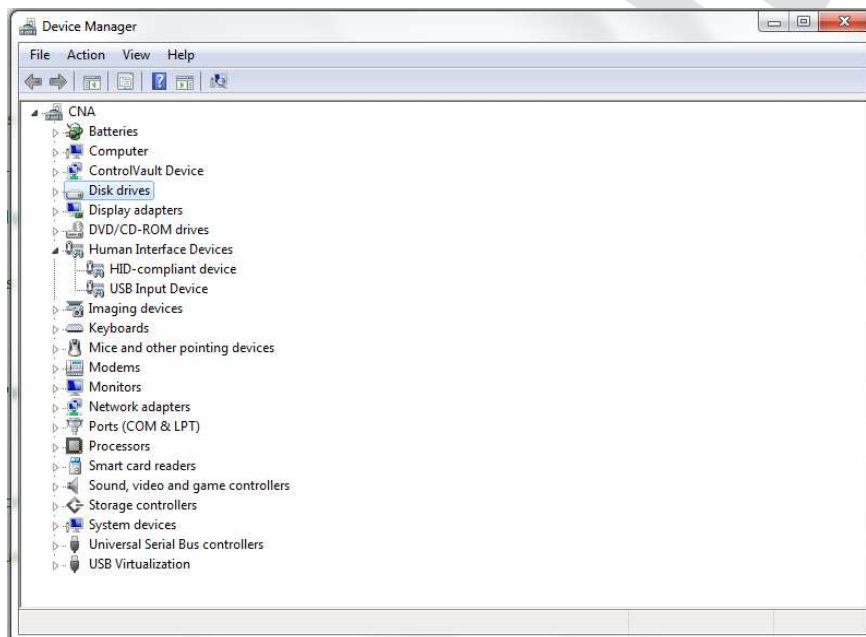


Figure 3-11. Windows 7, ALP USB2ANY Driver

The software should start with only “DS90UB954” in the “Devices” pull down menu. If there are more devices then the software is most likely in demo mode. When the ALP is operating in demo mode there is a “(Demo Mode)” indication in the lower left of the application status bar as shown below.

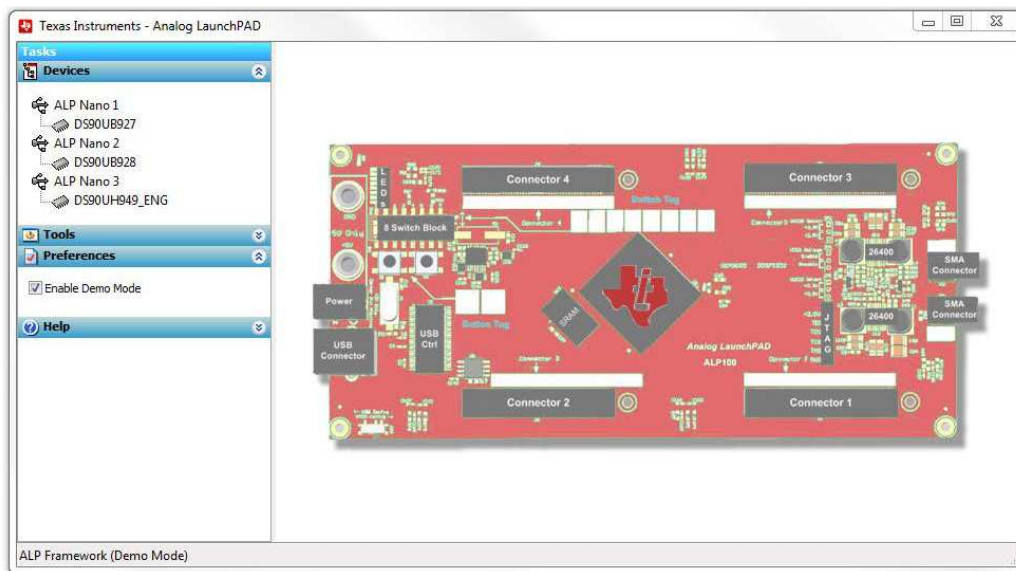


Figure 3-12. ALP in Demo Mode

Disable the demo mode by selecting the “Preferences” pull down menu and un-checking “Enable Demo Mode”.

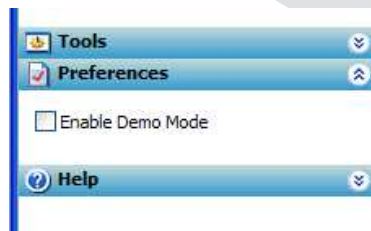


Figure 3-13. ALP Preferences Menu

After demo mode is disabled, the ALP software will poll the ALP hardware. The ALP software will update and have only “DS90UB954” under the “Devices” pull down menu.

3.3.2 USB2ANY Firmware Issues

If upon plugging in the board to the PC, the user is presented with a message stating USB2ANY firmware is out of date or is 0.0.0.0, similar to Figure 3-14, try unplugging the USB cable and plugging it in again (holding S1 while plugging in the USB cable puts the USB2ANY into firmware update mode). If that does not solve the problem you will have to re-flash the on-board USB2ANY firmware. To re-flash the USB2ANY, download USB2ANY Explorer from and install the application. Launch the USB2ANY Firmware Loader available at "C:\Program Files (x86)\TI USB2ANY SDK\bin\USB2ANY Firmware Loader.exe" and follow the instructions to flash the latest version of USB2ANY firmware. The firmware loading screen is shown in Figure 3-15.

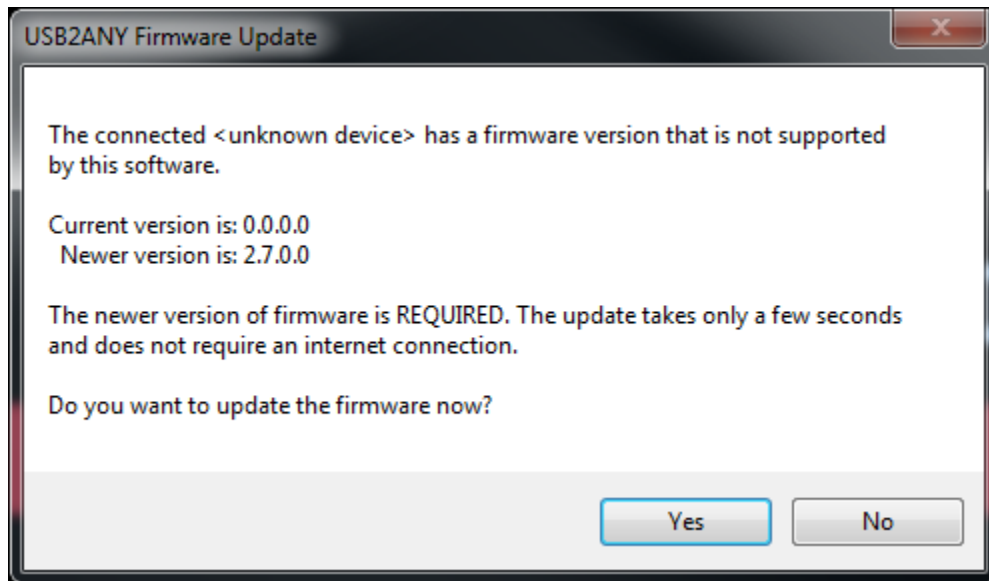


Figure 3-14. USB2ANY Firmware Update Notice

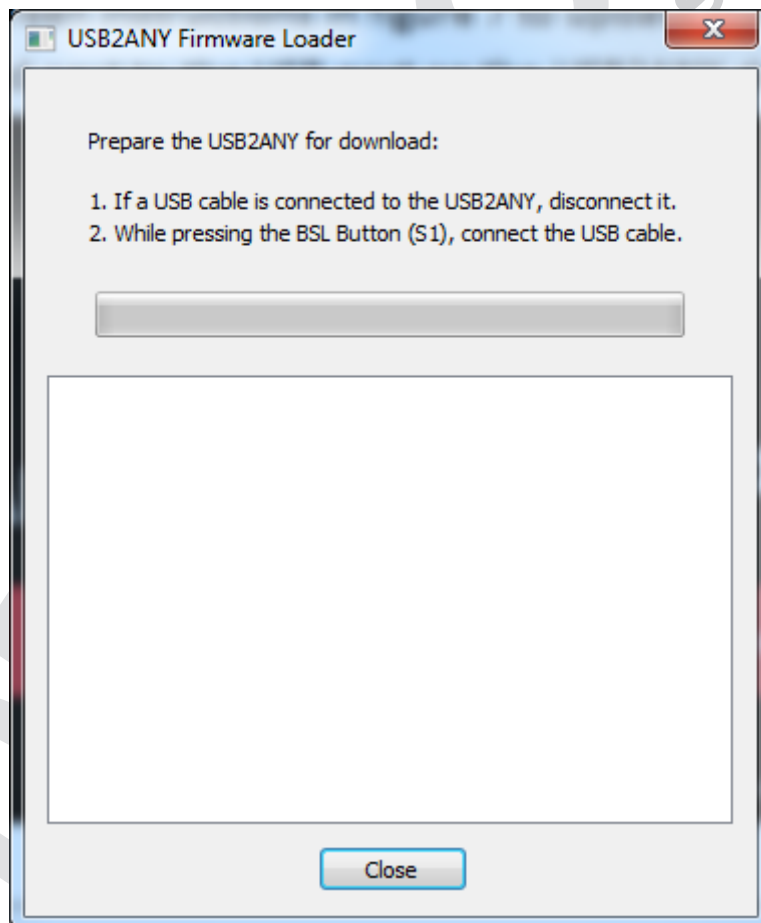



Figure 3-15. USB2ANY Firmware Update Procedure

DS90UB954-Q1EVM PCB Schematics, Layout and Bill of Materials

4.1 DS90UB954-Q1EVM Schematic

DRAFT ONLY
TI Confidential – NDA Restrictions


Revision History				
Rev	ECN #	Approved Date	Approved by	Notes
N/A	N/A	N/A	N/A	N/A

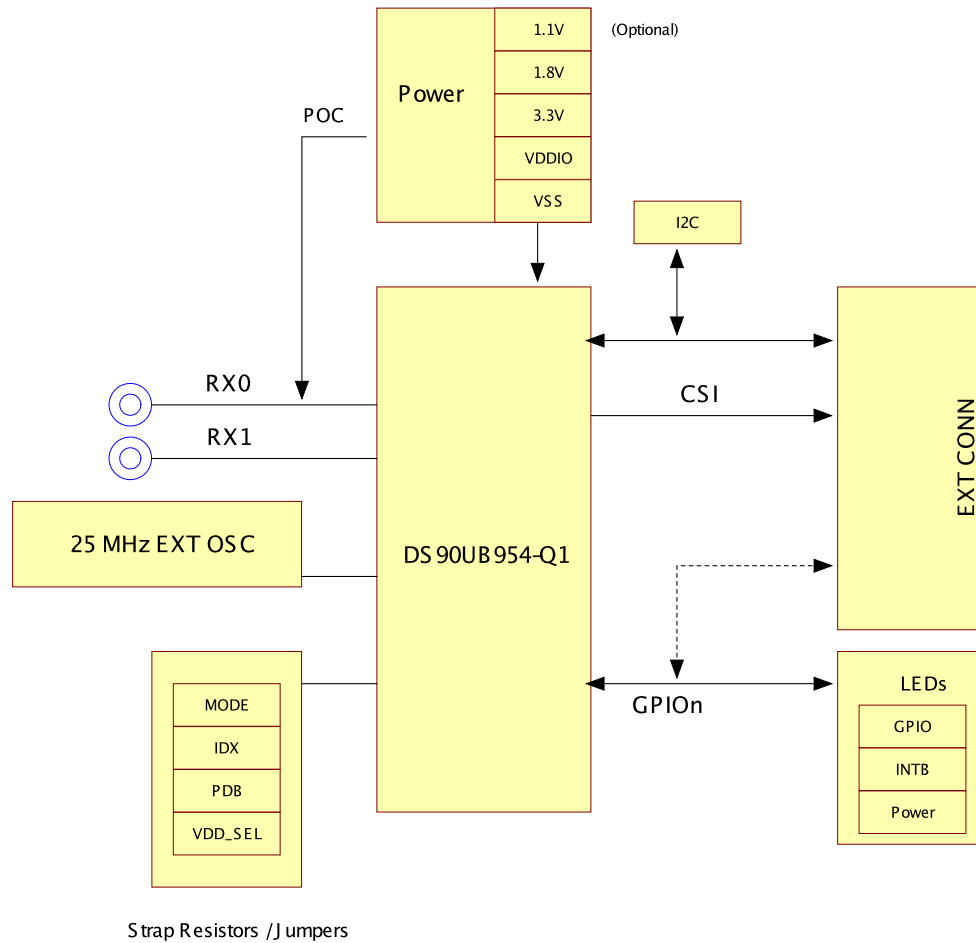

Copyright © 2017, Texas Instruments Incorporated

Figure 4-1. DS90UB954-Q1EVM Block Diagram


DS 90UB 954 Configuration

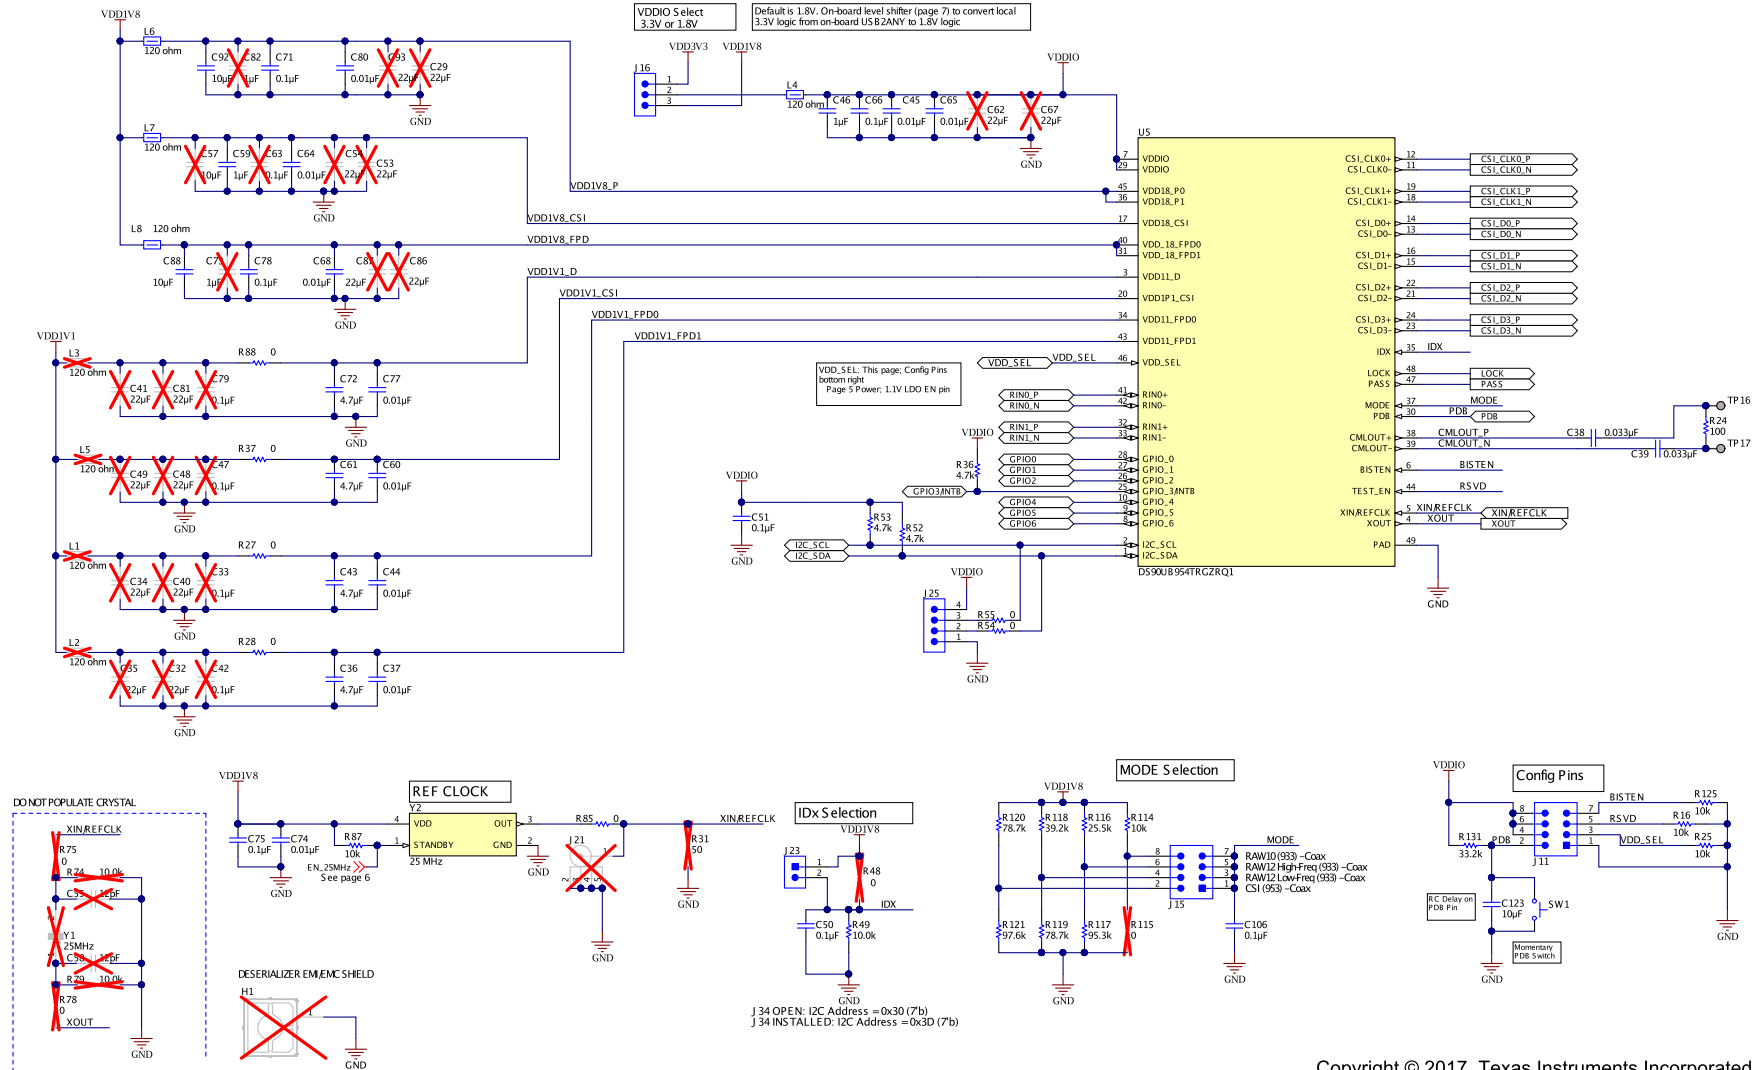

Copyright © 2017, Texas Instruments Incorporated

Figure 4-2. DS90UB954-Q1EVM Main Circuit - Page 1


MIPI CSI-2 Output Connectors

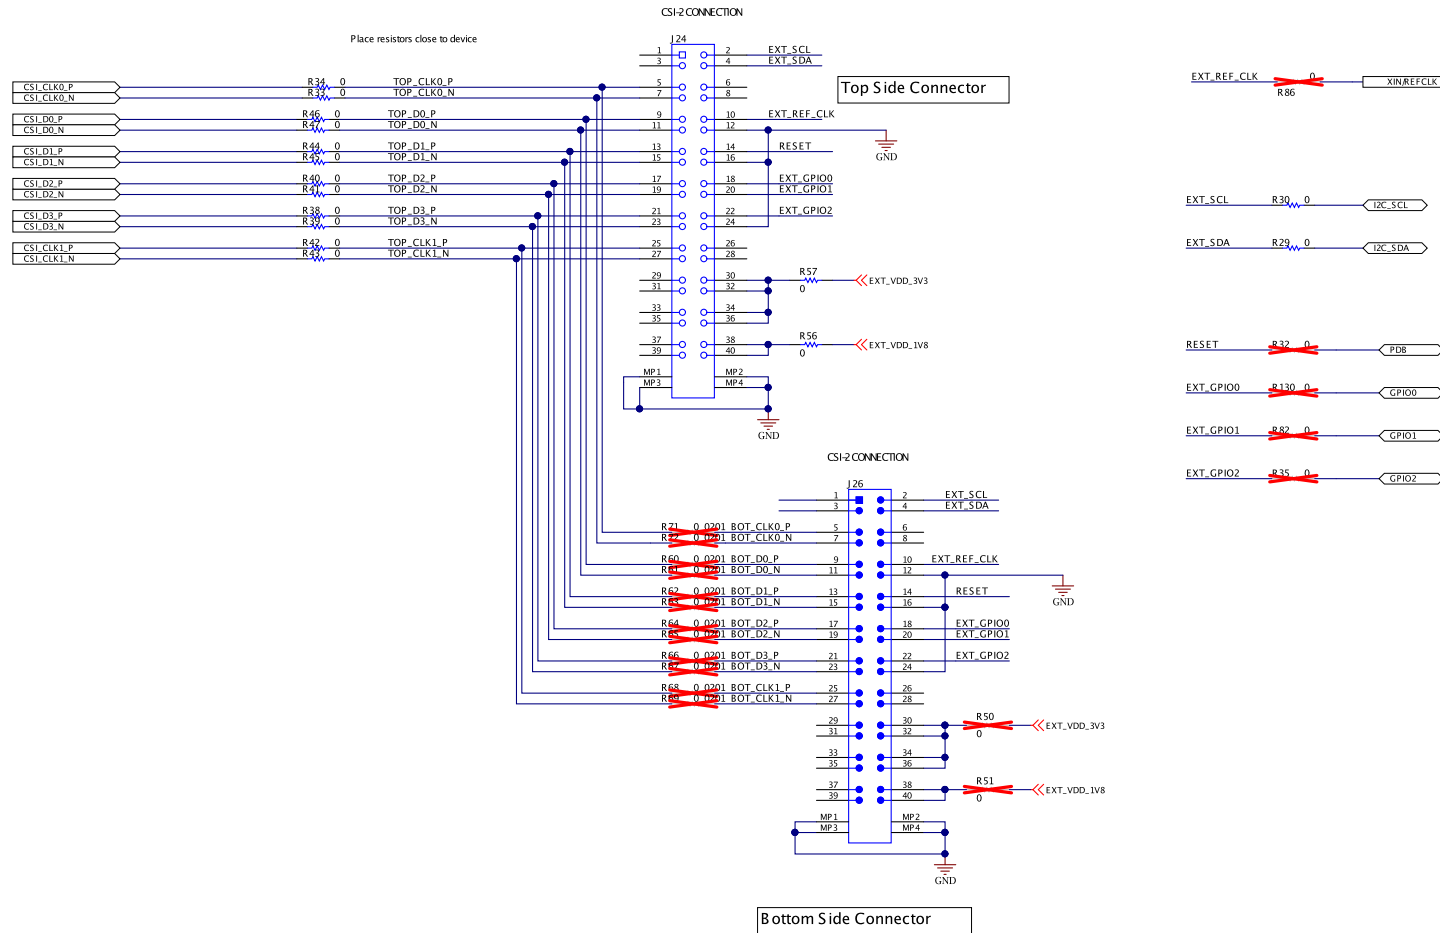

Copyright © 2017, Texas Instruments Incorporated

Figure 4-3. DS90UB954-Q1EVM CSI-2 Connectors - Page 2

Power over Coax (POC)

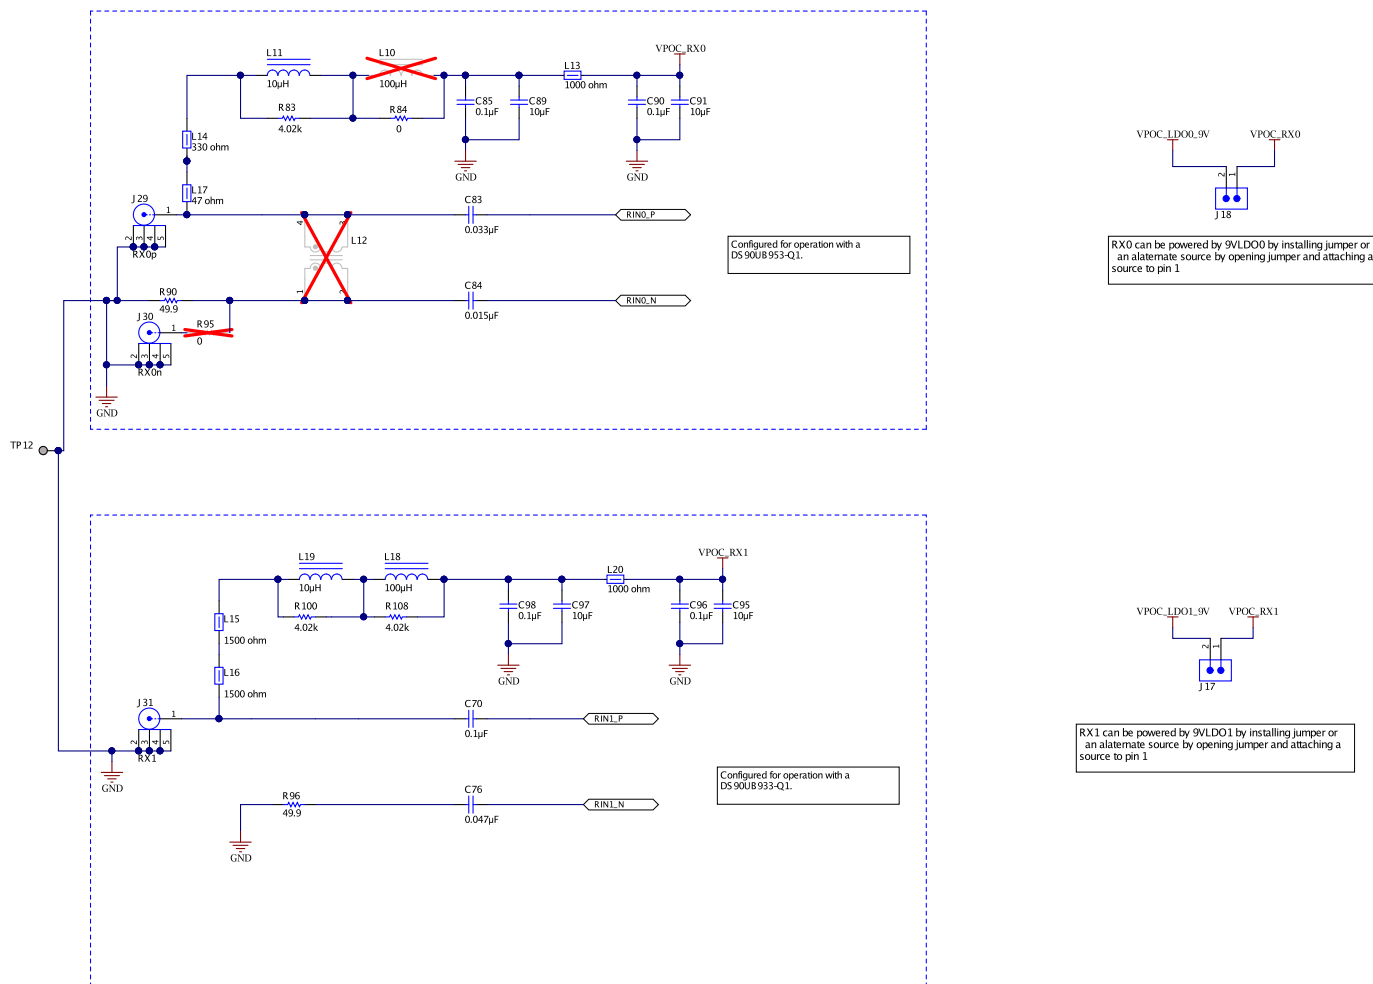


Copyright © 2017, Texas Instruments Incorporated


Figure 4-4. DS90UB954-Q1EVM PoC Circuits - Page 3

Power Distribution


12V External Supply

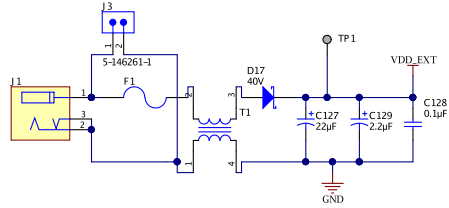

5V @ 2A Switching Regulator

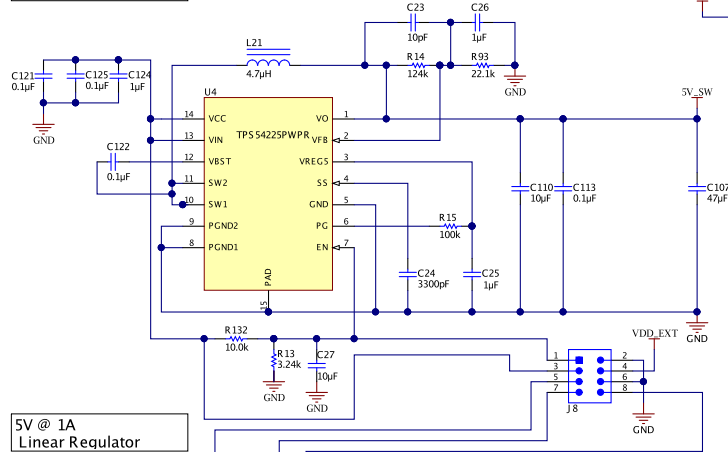


5V @ 1A Linear Regulator

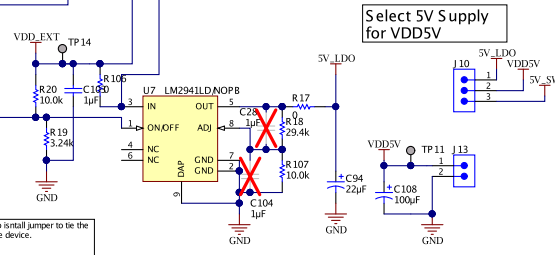


LM2941 ON/OFF pin is active low, so install jumper to be the ON/OFF pin to ground and enable the device.


3.3V @ 1A Linear Regulator
1.8V @ 1A Linear Regulator

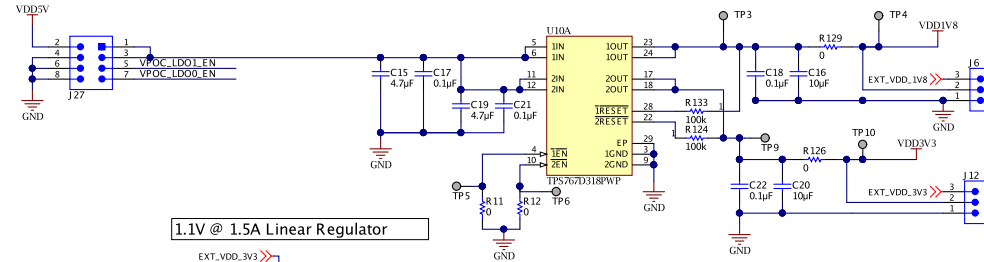


1.1V @ 1.5A Linear Regulator

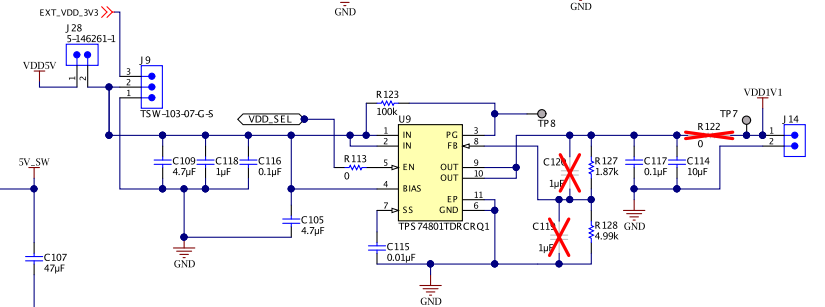

9V @ 1A Linear Regulator for PoC RX0

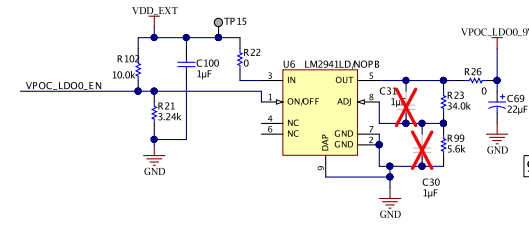

9V @ 1A Linear Regulator for PoC RX1

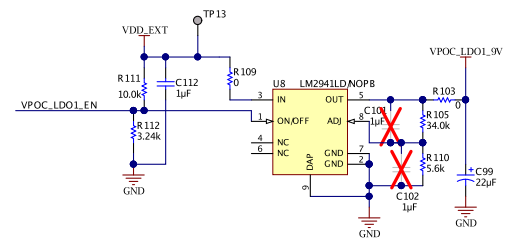


U108		
1	NC	16
2	NC	19
7	NC	20
8	NC	21
13	NC	25
14	NC	26
15	NC	27

TPS767D318PWP

Copyright © 2017, Texas Instruments Incorporated

Figure 4-5. DS90UB954-Q1EVM Power Distribution Circuits - Page 4


LED Indicators and GPIO Header

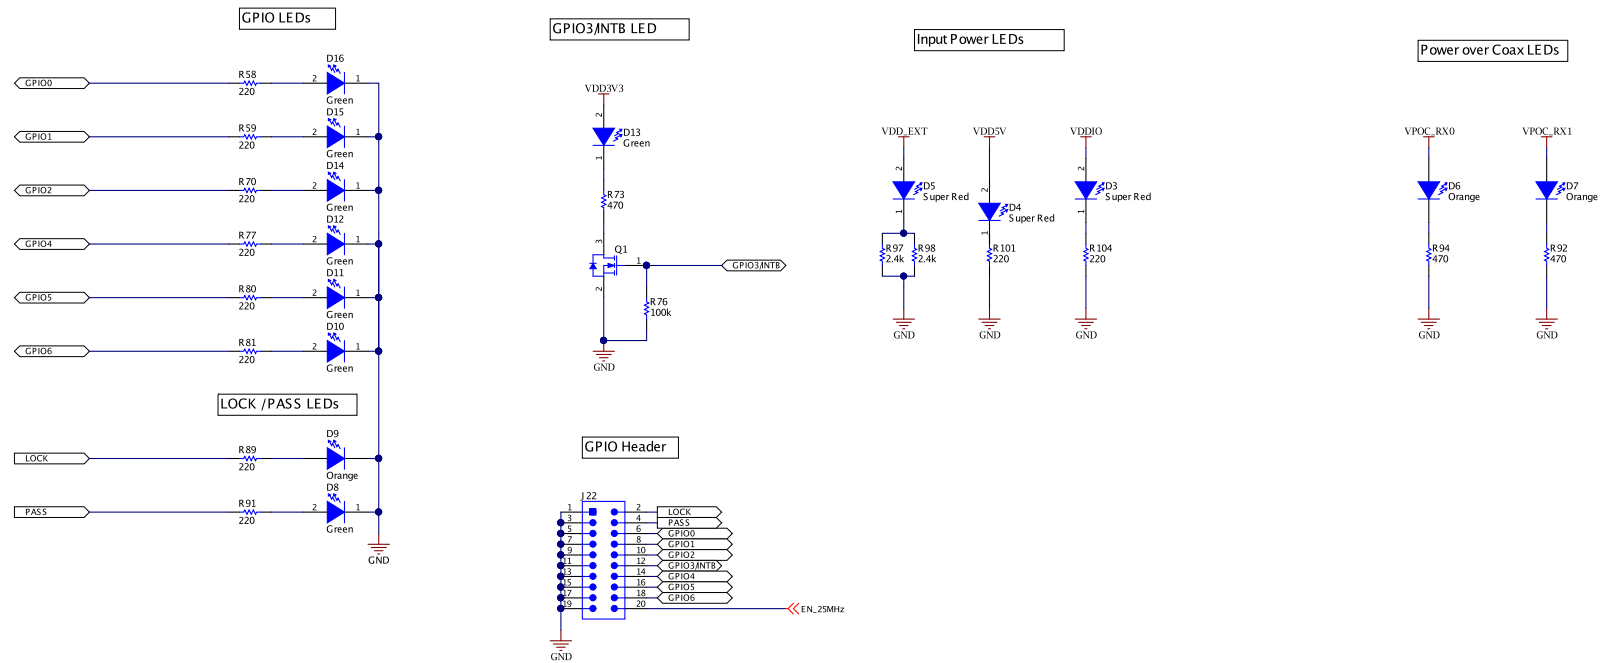

Copyright © 2017, Texas Instruments Incorporated


Figure 4-6. DS90UB954-Q1EVM LED Circuits - Page 5

On-Board USB 2ANY

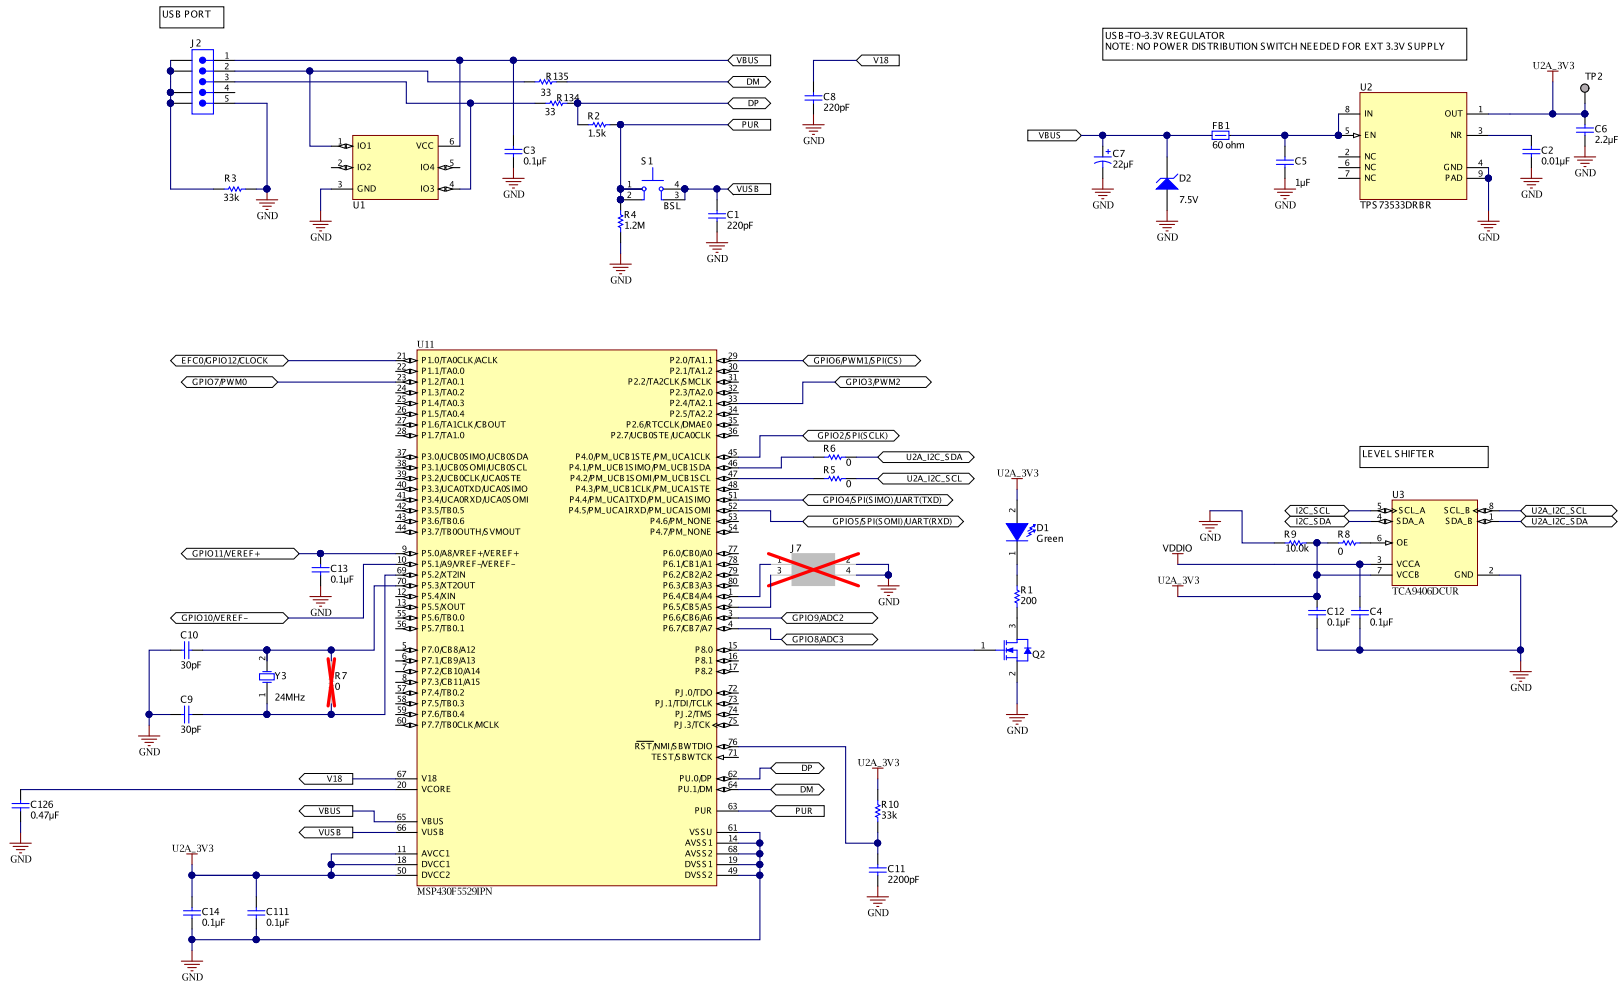

Copyright © 2017, Texas Instruments Incorporated

Figure 4-7. DS90UB954-Q1EVM USB2ANY Circuits - Page 6

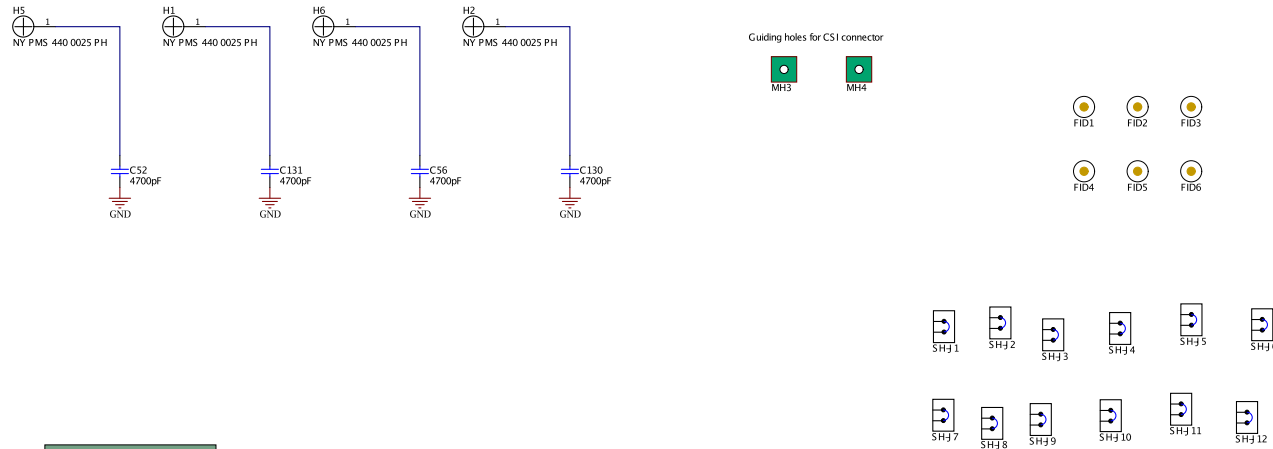

PCB Number: HSDC007
PCB Rev. A

PCB LOGO
Texas Instruments

PCB LOGO
Pb-Free Symbol

PCB LOGO
FCC disclaimer

Variant/Label Table	
Variant	Label Text
001	DS90UB954-Q1EVM



ZZ3
Assembly Note
These assemblies are ESD sensitive, ESD precautions shall be observed.

ZZ2
Assembly Note
These assemblies must be clean and free from flux and all contaminants. Use of no clean flux is not acceptable.

ZZ4
Assembly Note
These assemblies must comply with workmanship standards IPC-A-610 Class 2, unless otherwise specified.

Copyright © 2017, Texas Instruments Incorporated

Figure 4-8. DS90UB954-Q1EVM Miscellaneous Hardware

4.2 PDS90UB954-Q1 EVM PCB Layout

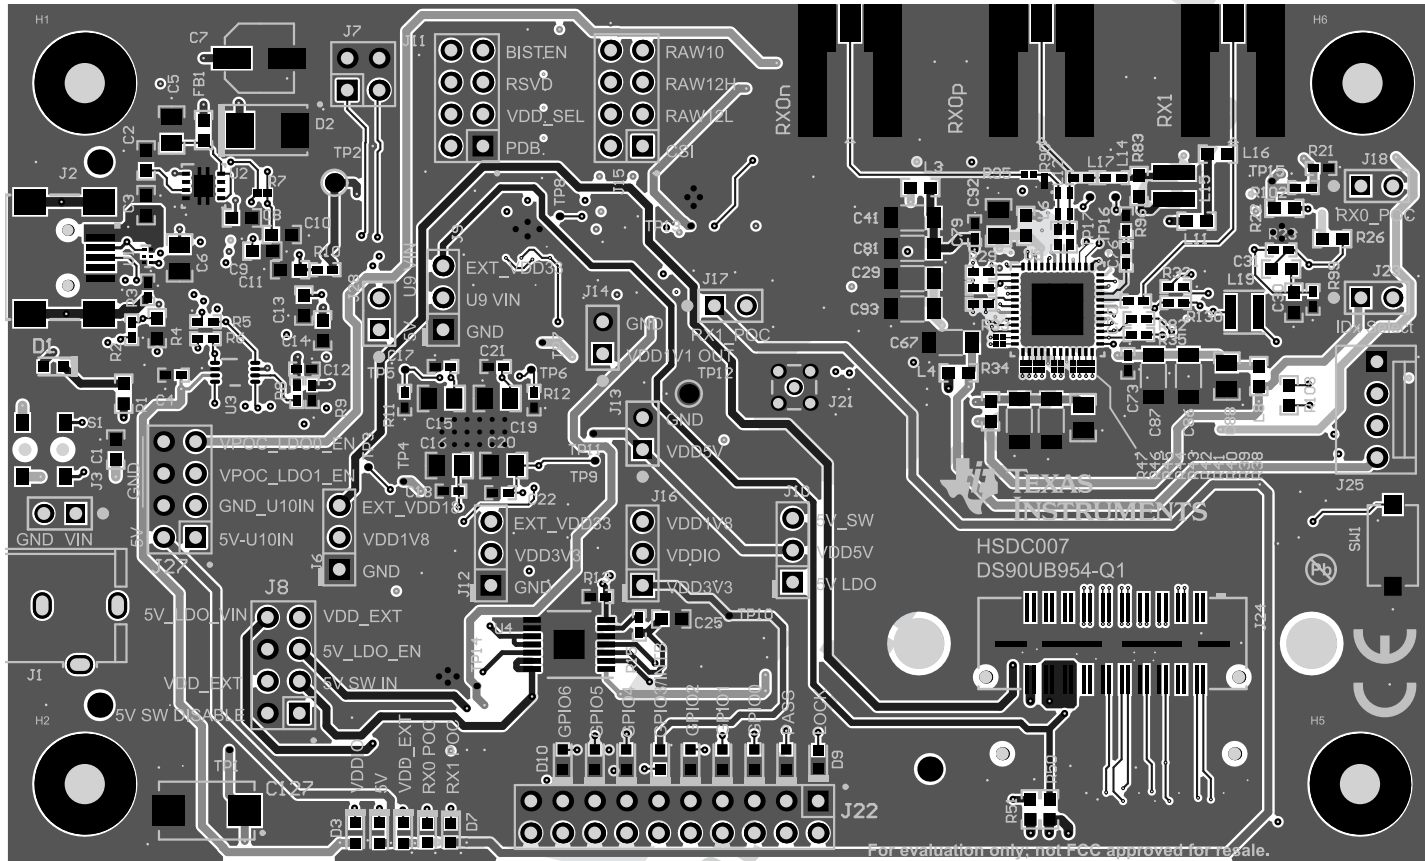


Figure 4-9. Top View Composite

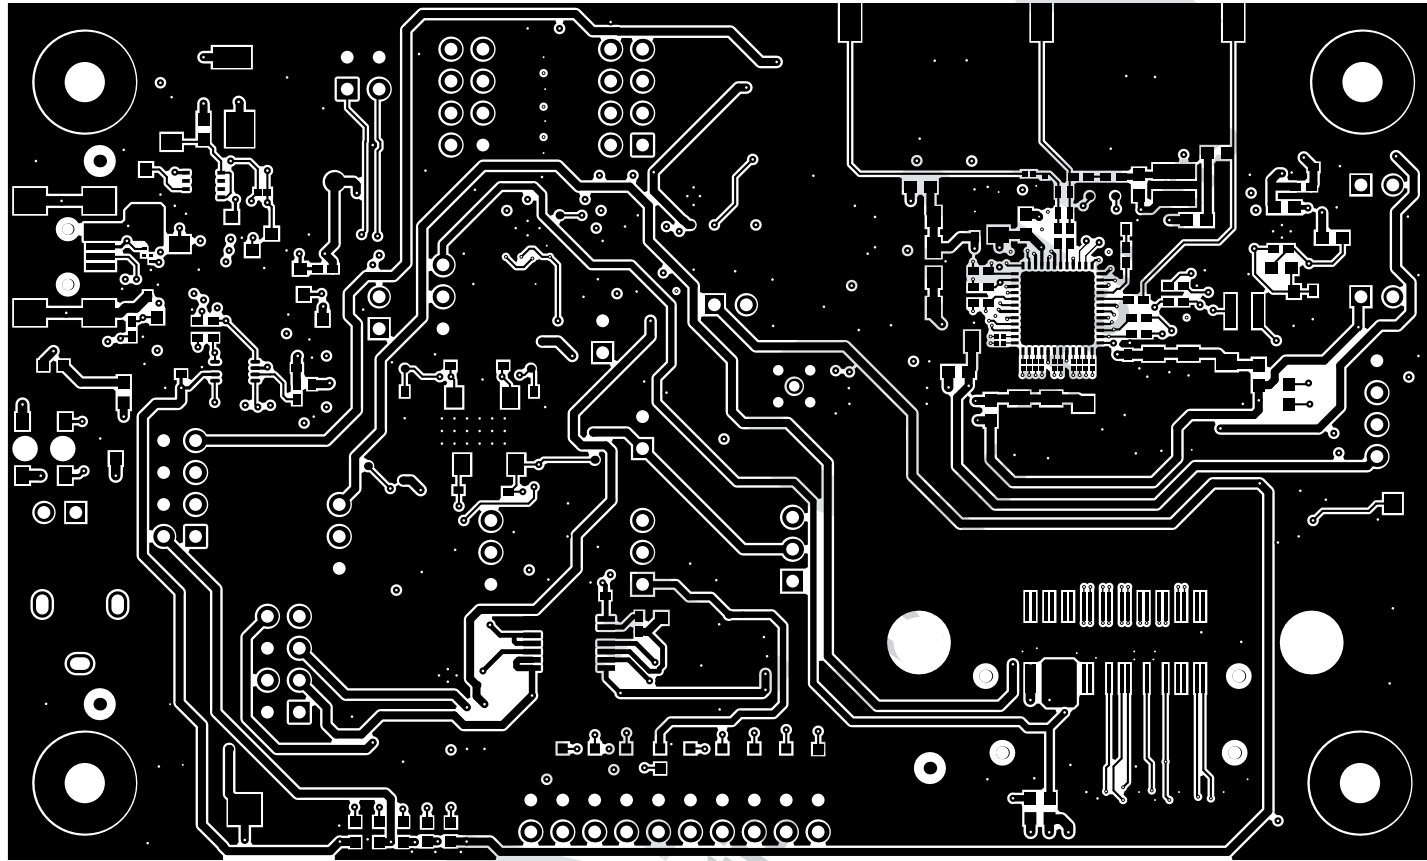


Figure 4-10. Layer 1: Top Signal Layer

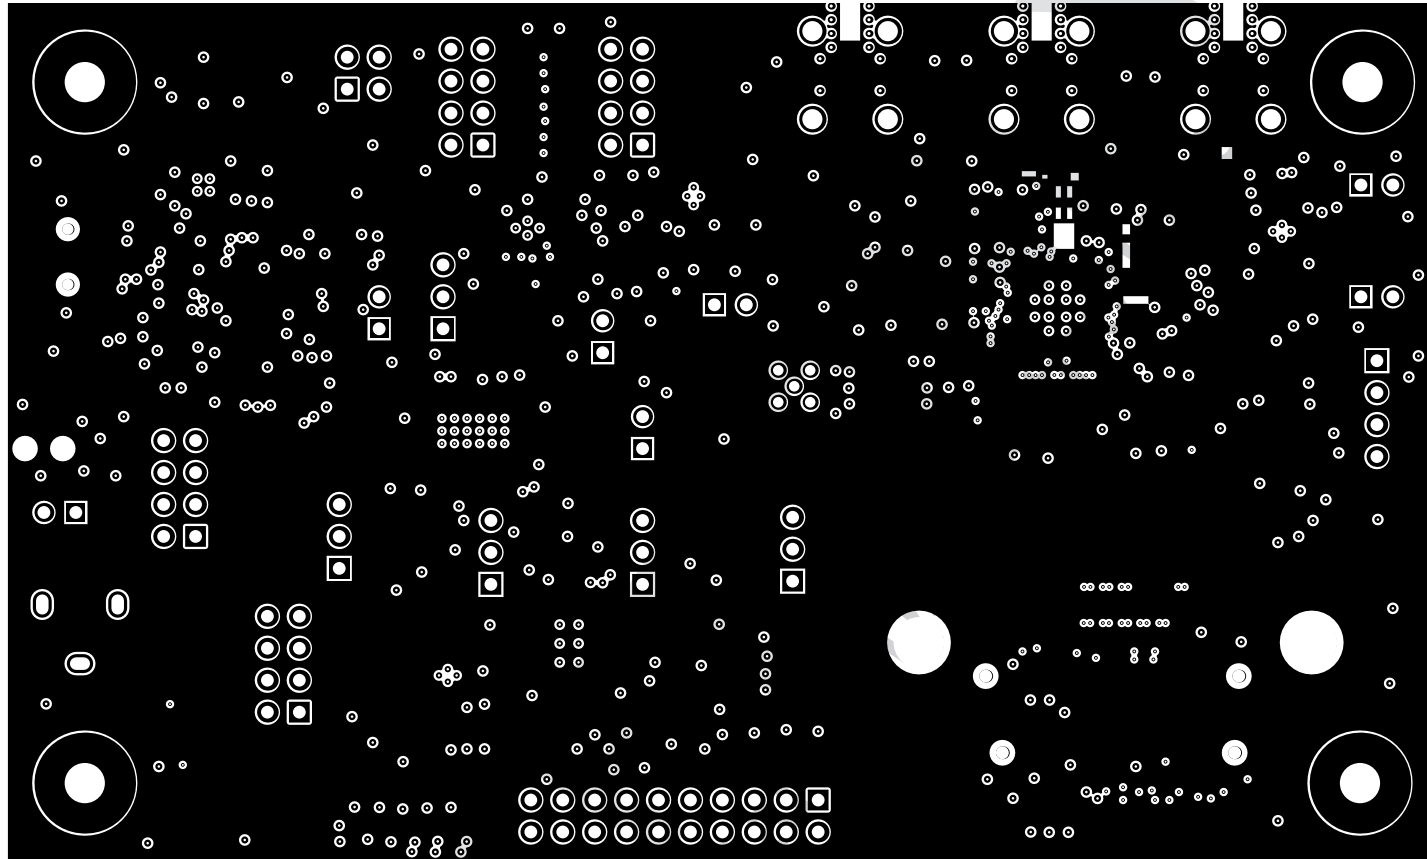


Figure 4-11. Layer 2: GND Plane 1

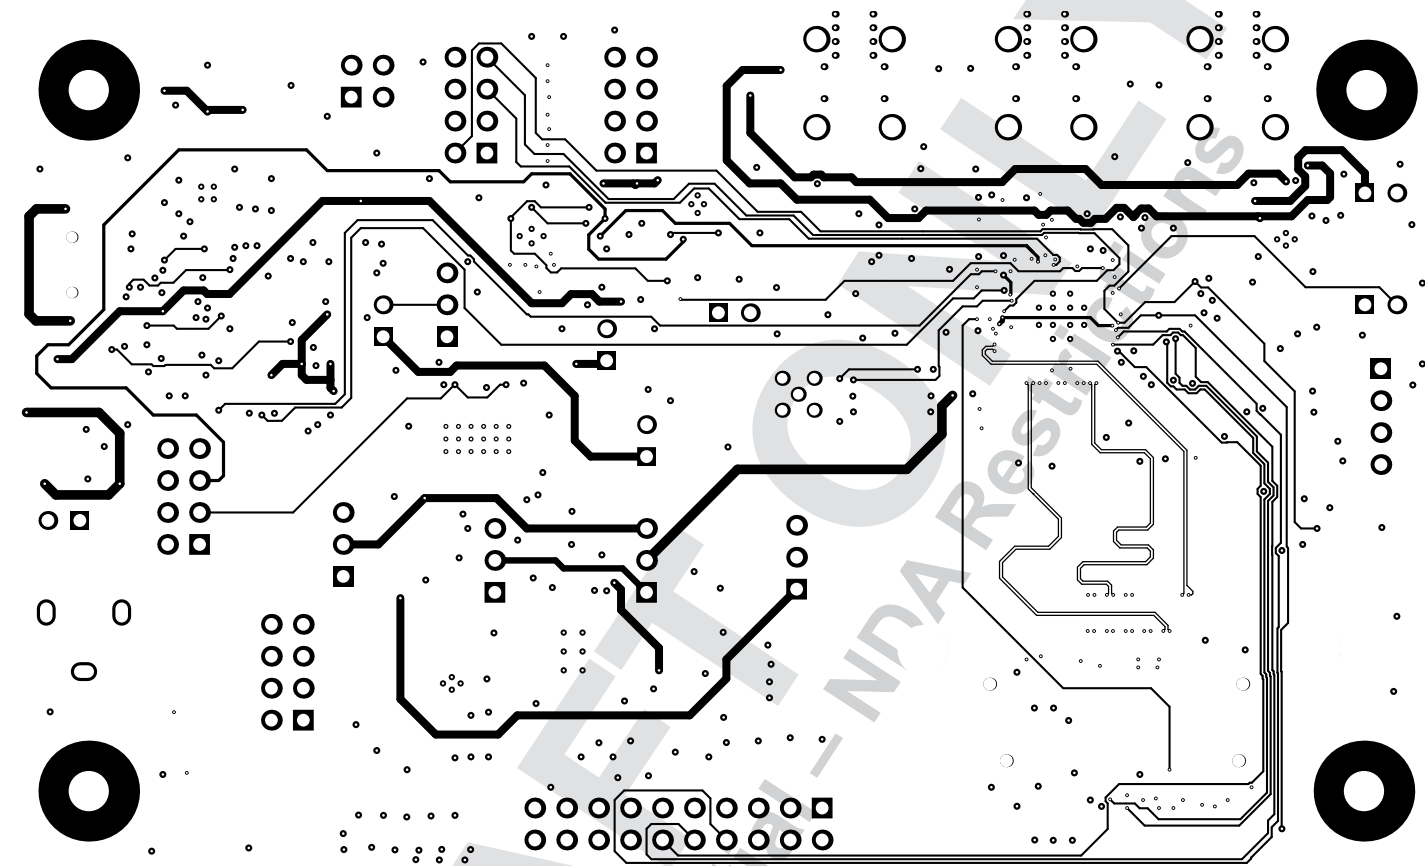


Figure 4-12. Layer 3: Mid Signal Layer 1

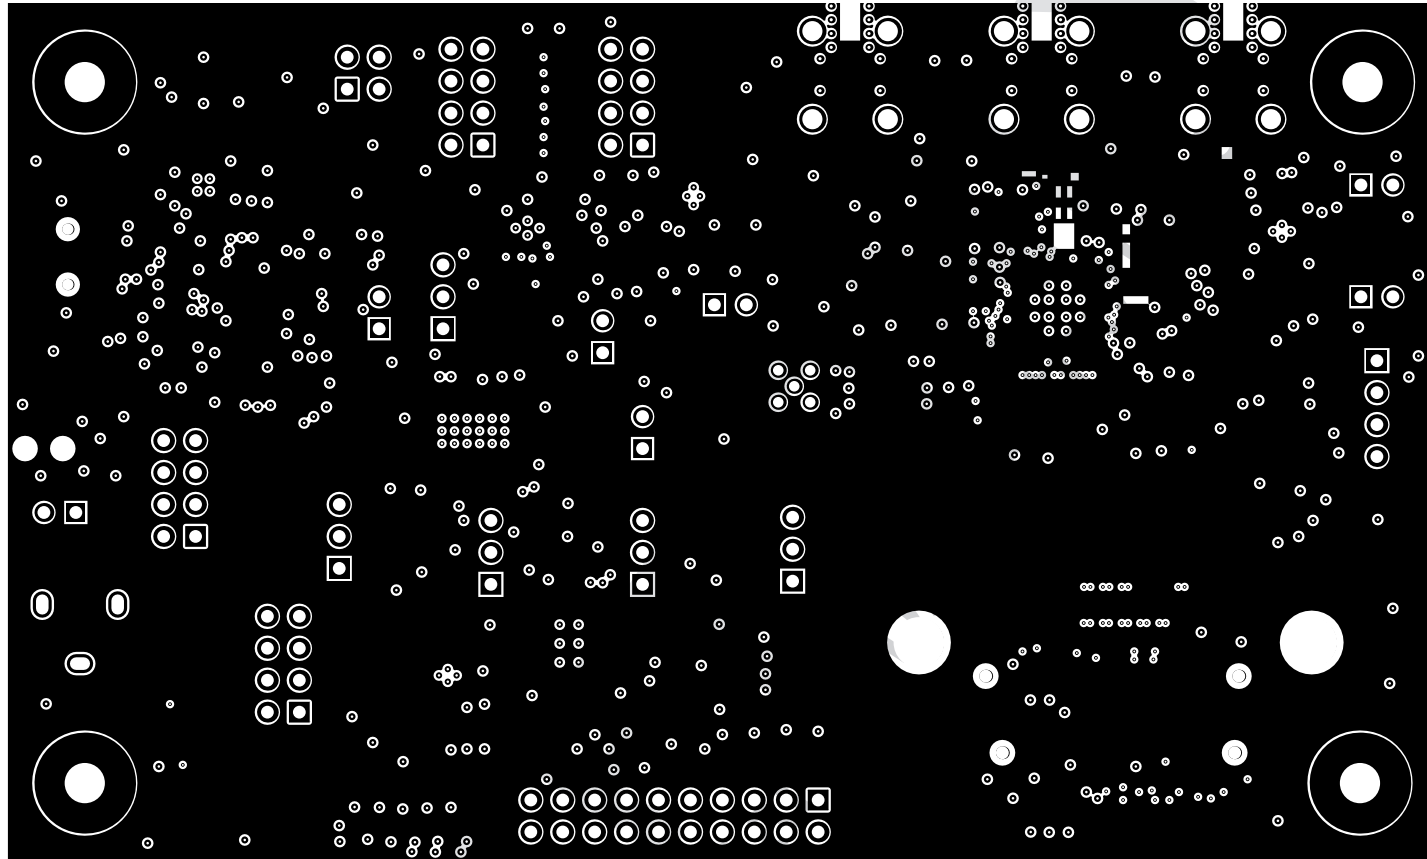


Figure 4-13. Layer 4: GND Plane 2

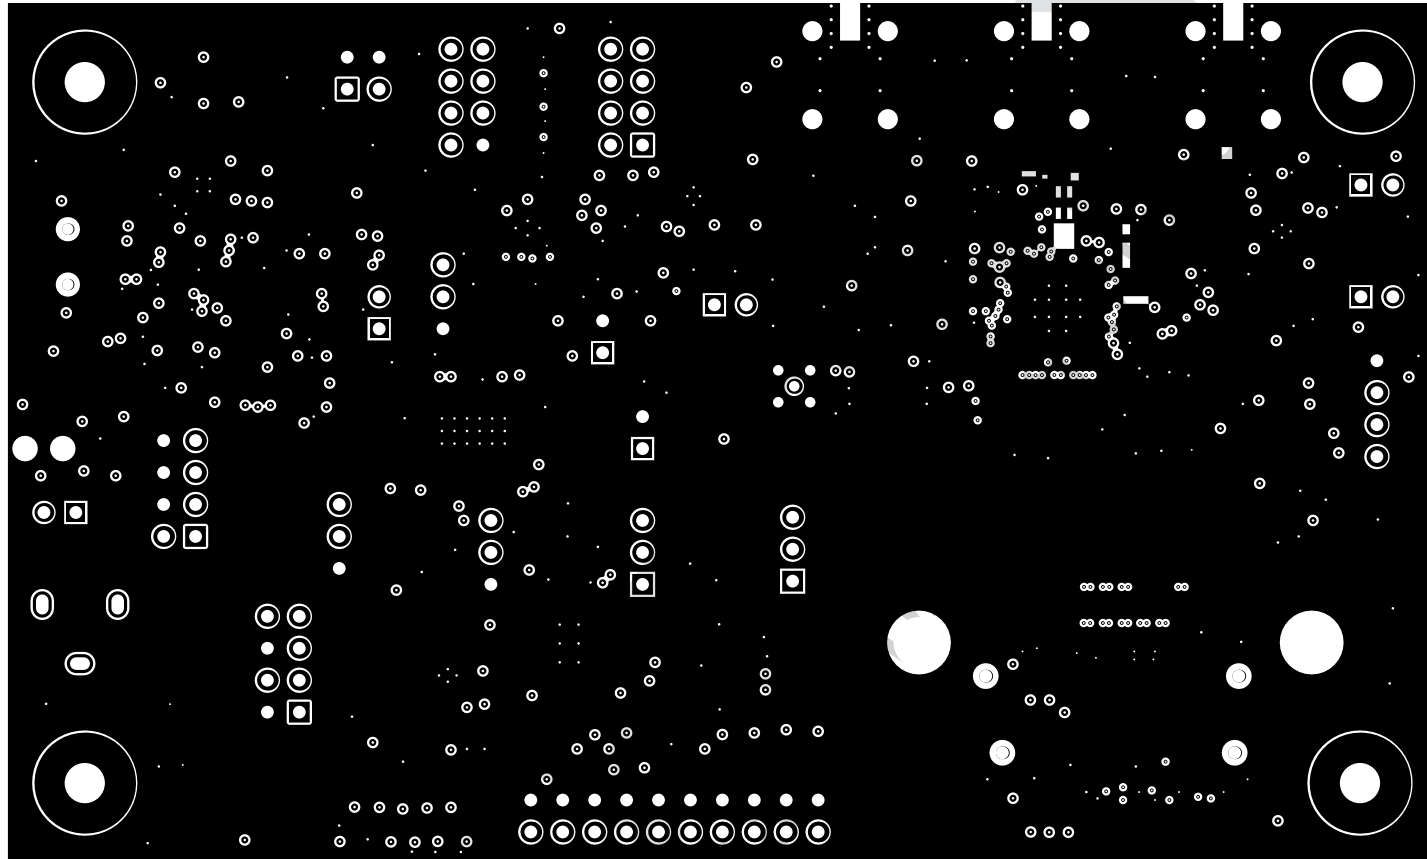


Figure 4-14. Layer 5: GND Plane 3

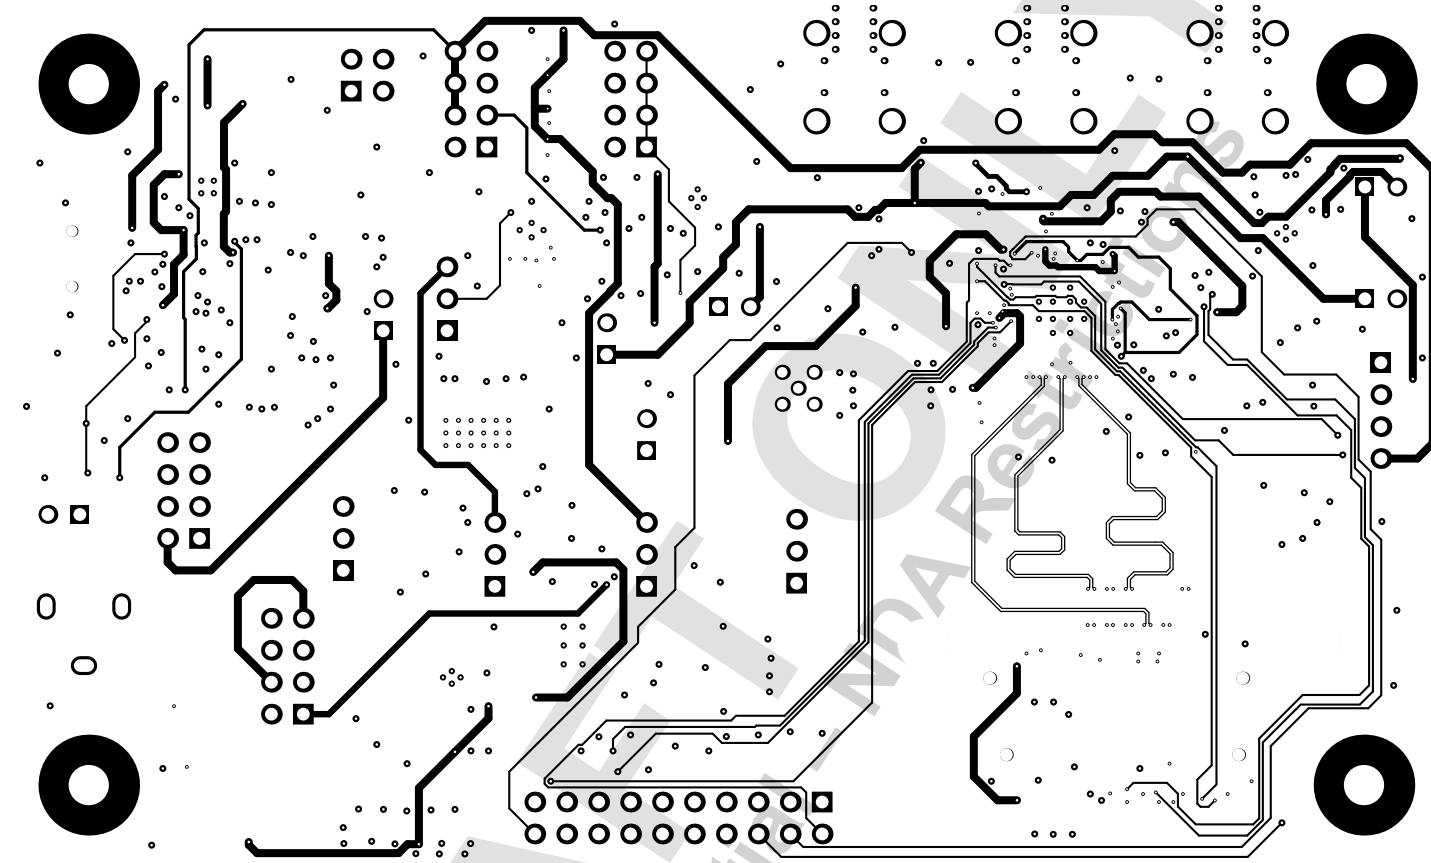


Figure 4-15. Layer 6: Mid Signal Layer 2

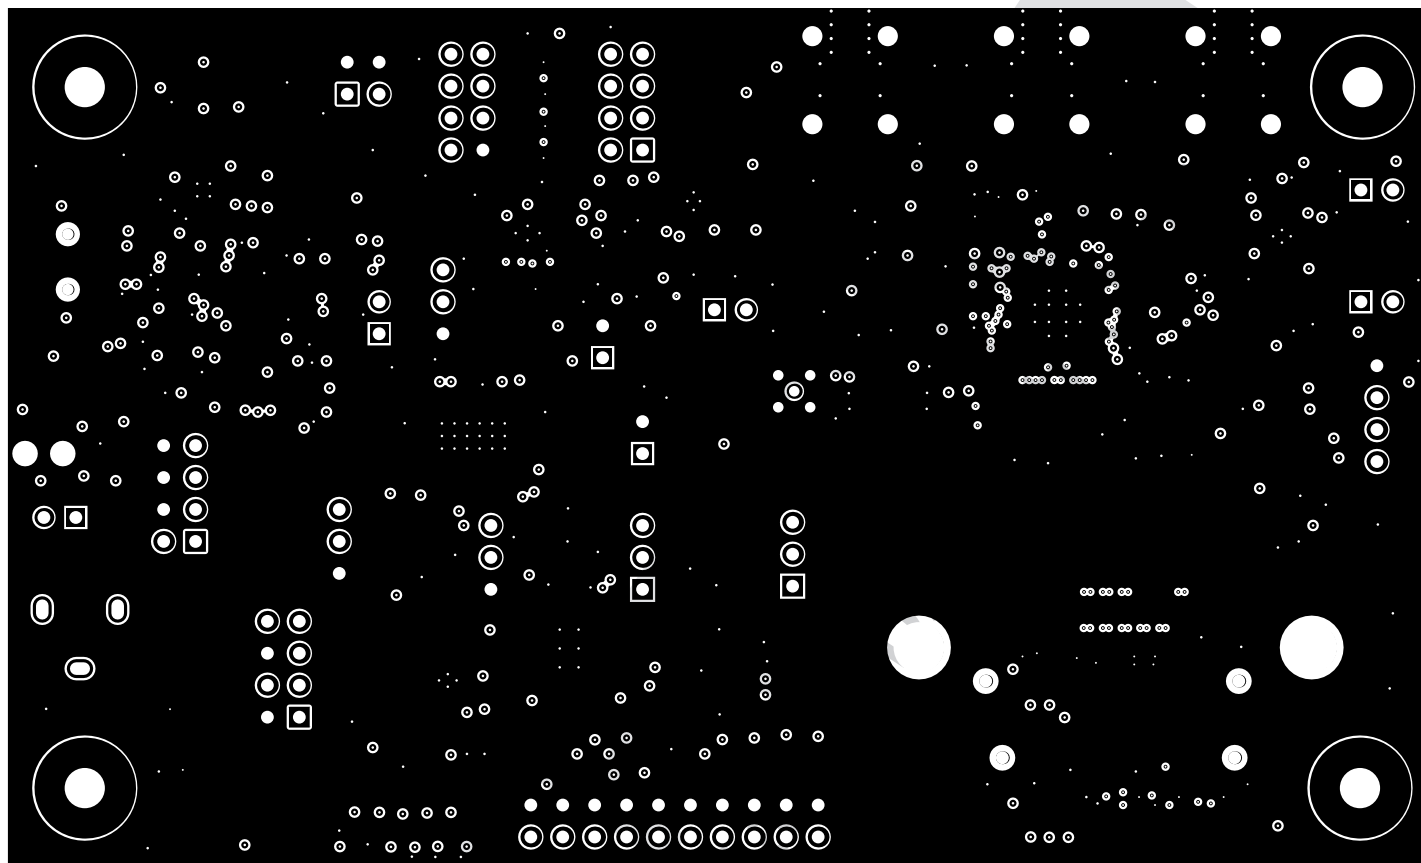


Figure 4-16. Layer 7: GND Plane 4

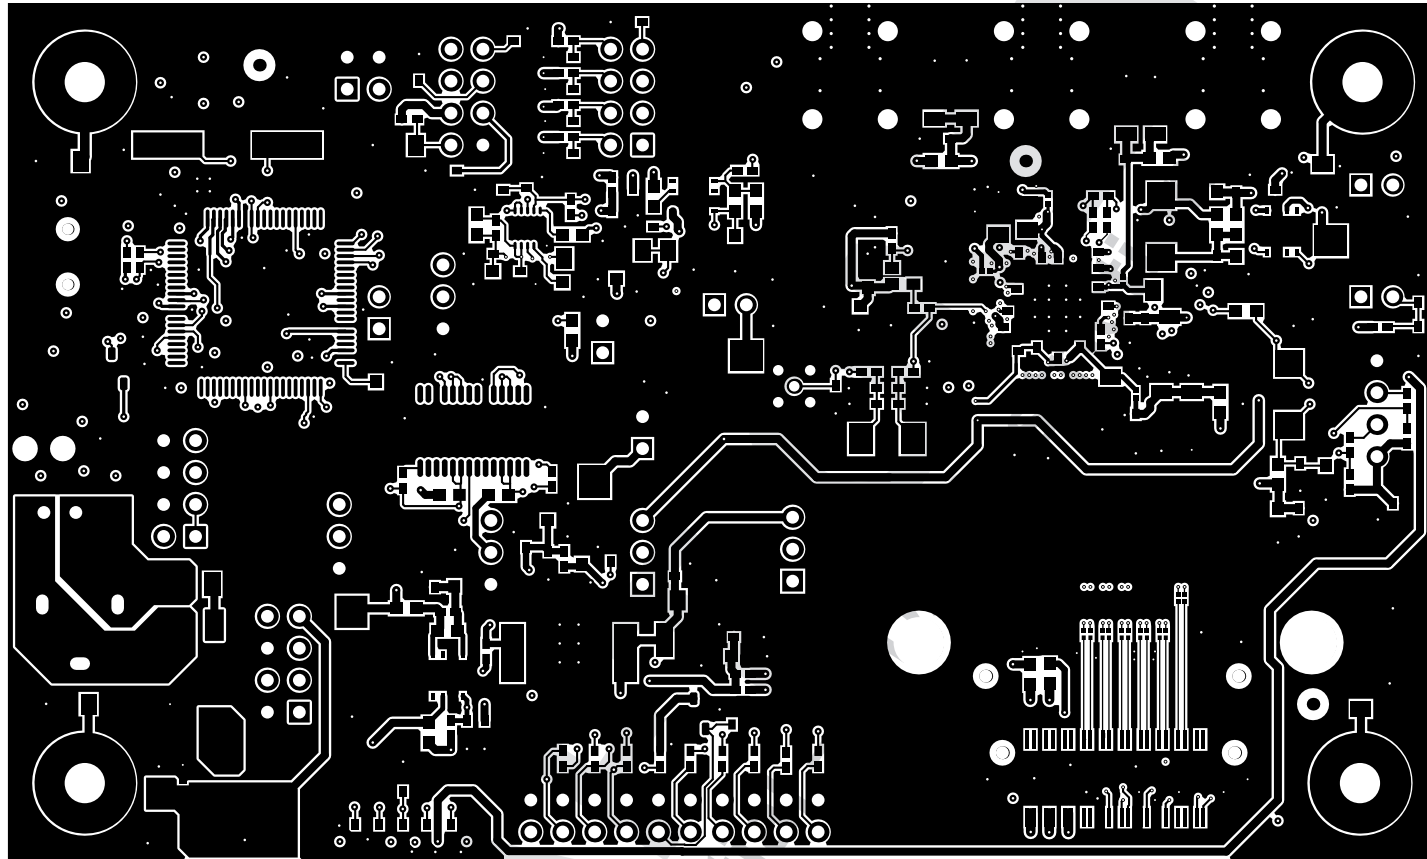


Figure 4-17. Layer 8: Bottom Signal Layer

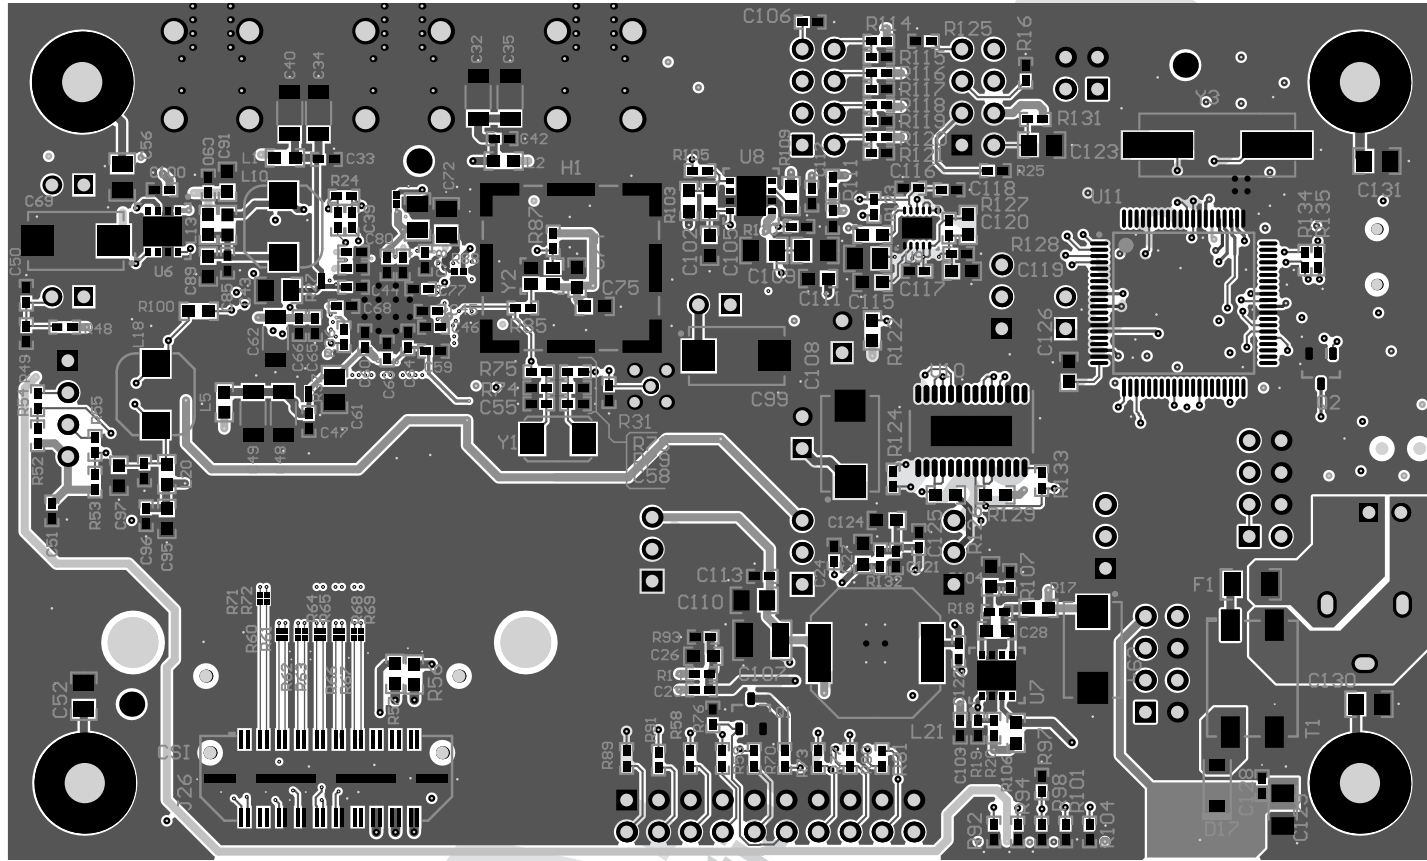


Figure 4-18. Bottom View Composite

DRAFT ONLY
TI Confidential – NDA Restrictions

4.3 DS90UB954Q1-EVM Bill of Materials

Table 4-1. DS90UB954-Q1EVM BOM

Item	Quantity	Designator	Value	PartNumber	Manufacturer	Description
1	1	!PCB1		HSDC007	Any	Printed Circuit Board
2	2	C1, C8	220pF	06035A221FAT2A	AVX	CAP, CERM, 220 pF, 50 V, +/- 1%, C0G/NP0, 0603
3	1	C2	0.01uF	C1608X7R1H103K080AA	TDK	CAP, CERM, 0.01 μ F, 50 V, +/- 10%, X7R, 0603
4	5	C3, C13, C14, C75, C111	0.1uF	0603YC104JAT2A	AVX	CAP, CERM, 0.1 μ F, 16 V, +/- 5%, X7R, 0603
5	2	C4, C12	0.1uF	GRM155R71C104KA88D	MuRata	CAP, CERM, 0.1 μ F, 16 V, +/- 10%, X7R, 0402
6	1	C5	1uF	C0805C105K3RACTU	Kemet	CAP, CERM, 1 μ F, 25 V, +/- 10%, X7R, 0805
7	1	C6	2.2uF	0805YD225KAT2A	AVX	CAP, CERM, 2.2 μ F, 16 V, +/- 10%, X5R, 0805
8	1	C7	22uF	EEE-1AA220WR	Panasonic - ECG	CAP ALUM 22UF 10V 20% SMD
9	2	C9, C10	30pF	GRM1885C2A300JA01D	MuRata	CAP, CERM, 30 pF, 100 V, +/- 5%, C0G/NP0, 0603
10	1	C11	2200pF	C0603X222K5RACTU	Kemet	CAP, CERM, 2200 pF, 50 V, +/- 10%, X7R, 0603
11	4	C15, C19, C105, C109	4.7uF	GRM21BR71C475KA73L	MuRata	CAP, CERM, 4.7uF, 16V, +/-10%, X7R, 0805
12	5	C16, C20, C110, C114, C123	10uF	GRM21BR71A106KE51L	MuRata	CAP, CERM, 10uF, 10V, +/-10%, X7R, 0805
13	12	C17, C18, C21, C22, C51, C113, C116, C117, C121, C122, C125, C128	0.1uF	GRM155R71C104KA88D	MuRata	CAP, CERM, 0.1uF, 16V, +/-10%, X7R, 0402
14	1	C23	10pF	GRM1555C1H100JA01D	MuRata	CAP, CERM, 10pF, 50V, +/-5%, C0G/NP0, 0402
15	1	C24	3300pF	GRM155R71H332KA01D	MuRata	CAP, CERM, 3300pF, 50V, +/- 10%, X7R, 0402
16	2	C25, C124	1uF	GCM188R71C105KA64D	MuRata	CAP, CERM, 1 μ F, 16 V, +/- 10%, X7R, AEC-Q200 Grade 1, 0603
17	9	C26, C28, C30, C31, C101, C102, C104, C119, C120	1uF	GRM185R61C105KE44D	MuRata	CAP, CERM, 1 μ F, 16 V, +/- 10%, X5R, 0603
18	1	C27	10uF	GRM188R61E106MA73D	MuRata	CAP, CERM, 10 μ F, 25 V, +/- 20%, X5R, 0603
19	14	C29, C34, C40, C41, C48, C49, C53, C54, C62, C67, C81, C86, C87, C93	22uF	GRT31CR61E226KE01L	MuRata	CAP, CERM, 22 μ F, 25 V, +/- 10%, X5R, AEC-Q200 Grade 3, 1206
20	2	C32, C35	22uF	GRT31CR61E226KE01L	MuRata	CAP, CERM, 22 μ F, 25 V, +/- 10%, X5R, AEC-Q200 Grade 3, 1206
21	8	C33, C42, C47, C63, C66, C71, C78, C79	0.1uF	CGA2B3X7R1H104K050BB	TDK	CAP, CERM, 0.1 μ F, 50 V, +/- 10%, X7R, AEC-Q200 Grade 1, 0402
22	4	C36, C43, C61, C72	4.7uF	C0805C475K3PACTU	Kemet	CAP, CERM, 4.7 μ F, 25 V, +/- 10%, X5R, 0805
23	9	C37, C44, C45, C60, C64, C65, C68, C77, C80	0.01uF	GCM155R71H103KA55D	MuRata	CAP, CERM, 0.01uF, 50V, +/-10%, C0G/NP0, 0402

Table 4-1. DS90UB954-Q1EVM BOM (continued)

24	3	C38, C39, C83	0.033uF	CGA2B3X7R1H333K050BB	TDK	CAP, CERM, 0.033 μ F, 50 V, +/- 10%, X7R, AEC-Q200 Grade 1, 0402
25	8	C46, C59, C73, C82, C100, C103, C112, C118	1uF	C1005JB1V105K050BC	TDK	CAP, CERM, 1 μ F, 35 V, +/- 10%, JB, 0402
26	2	C50, C106	0.1uF	C1005X5R1H104K050BB	TDK	CAP, CERM, 0.1 μ F, 50 V, +/- 10%, X5R, 0402
27	4	C52, C56, C130, C131	4700pF	08051C472KAT2A	AVX	CAP, CERM, 4700 pF, 100 V, +/- 10%, X7R, 0805
28	2	C55, C58	12pF	GRM1555C1E120JA01D	MuRata	CAP, CERM, 12pF, 25V, +/-5%, C0G/NP0, 0402
29	3	C57, C88, C92	10uF	CL21A106KAFN3NE	Samsung	CAP, CERM, 10 μ F, 25 V, +/- 10%, X5R, 0805
30	4	C69, C94, C99, C127	22uF	293D226X0025D2TE3	Vishay-Sprague	CAP, TA, 22uF, 25V, +/-20%, 0.7 ohm, SMD
31	5	C70, C85, C90, C96, C98	0.1uF	C1005X7R1H104K050BB	TDK	CAP, CERM, 0.1 μ F, 50 V, +/- 10%, X7R, 0402
32	1	C74	0.01uF	06031C103KAT2A	AVX	CAP, CERM, 0.01 μ F, 100 V, +/- 10%, X7R, 0603
33	1	C76	0.047uF	C1005X7R1H473K050BB	TDK	CAP, CERM, 0.047 μ F, 50 V, +/- 10%, X7R, 0402
34	1	C84	0.015uF	CGA2B3X7R1H153K050BB	TDK	CAP, CERM, 0.015 μ F, 50 V, +/- 10%, X7R, AEC-Q200 Grade 1, 0402
35	4	C89, C91, C95, C97	10uF	C1608X5R1E106M080AC	TDK	CAP, CERM, 10 μ F, 25 V, +/- 20%, X5R, 0603
36	1	C107	47uF	GRM32ER61C476ME15L	MuRata	CAP, CERM, 47uF, 16V, +/-20%, X5R, 1210
37	1	C108	100uF	T495D107M016ATE100	Kemet	CAP, TA, 100uF, 16V, +/-20%, 0.1 ohm, SMD
38	1	C115	0.01uF	06031C103JAT2A	AVX	CAP, CERM, 0.01uF, 100V, +/-5%, X7R, 0603
39	1	C126	0.47uF	GRM188R71A474KA61D	MuRata	CAP, CERM, 0.47 μ F, 10 V, +/- 10%, X7R, 0603
40	1	C129	2.2uF	293D225X9025A2TE3	Vishay-Sprague	CAP, TA, 2.2uF, 25V, +/-10%, 6.3 ohm, SMD
41	9	D1, D8, D10, D11, D12, D13, D14, D15, D16	Green	150060VS75000	Würth Elektronik eiSos	LED, Green, SMD
42	1	D2	7.5V	1SMB5922BT3G	ON Semiconductor	Diode, Zener, 7.5 V, 550 mW, SMB
43	3	D3, D4, D5	Super Red	150060SS75000	Würth Elektronik eiSos	LED, Super Red, SMD
44	3	D6, D7, D9	Orange	LTST-C190KFKT	Lite-On	LED, Orange, SMD
45	1	D17	40V	1N5819HW-7-F	Diodes Inc.	Diode, Schottky, 40V, 1A, SOD-123
46	1	F1		0440002.WR	Littelfuse	Fuse, 2 A, 32 V, SMD
47	1	FB1	60 ohm	BK1608HS600-T	Taiyo Yuden	Ferrite Bead, 60 ohm @ 100 MHz, 0.8 A, 0603
48	6	FID1, FID2, FID3, FID4, FID5, FID6		N/A	N/A	Fiducial mark. There is nothing to buy or mount.
49	1	H1		BMI-S-201-F	Laird	EMI SHIELD, 13.66 x 12.70 mm, SMT
50	4	H1, H2, H5, H6		NY PMS 440 0025 PH	BF Fastener Supply	Machine Screw, Round, 4-40 x 1/4, Nylon, Philips panhead

Table 4-1. DS90UB954-Q1EVM BOM (continued)

51	1	J1		PJ-102A	CUI Inc.	Connector, DC Jack 2.1X5.5 mm, TH
52	1	J2		1734035-2	TE Connectivity	Connector, Receptacle, Mini-USB Type B, R/A, Top Mount SMT
53	7	J3, J13, J14, J17, J18, J23, J28		5-146261-1	TE Connectivity	Header, 100mil, 2x1, Gold plated, TH
54	5	J6, J9, J10, J12, J16		TSW-103-07-G-S	Samtec, Inc.	Header, TH, 100mil, 3x1, Gold plated, 230 mil above insulator
55	1	J7		TSW-102-07-G-D	Samtec	Header, 100mil, 2x2, Gold, TH
56	4	J8, J11, J15, J27		TSW-104-07-G-D	Samtec	Header, 100mil, 4x2, Gold, TH
57	1	J21		MMCX-J-P-H-ST-TH1	Samtec	Connector, MMCX 50 ohm, TH
58	1	J22		TSW-110-07-G-D	Samtec	Header, 100mil, 10x2, Gold, TH
59	1	J24		QSH-020-01-H-D-DP-A	Samtec	Receptacle, Differential, 0.5mm, 10 pair x2, Gold, SMT
60	1	J25		0022112042	Molex	Header, 100mil, 4x1, White, TH
61	1	J26		QTH-020-04-L-D-DP-A	Samtec	Header(shrouded), 0.5mm, 10 pair x 2, Gold, SMT
62	3	J29, J30, J31		59S20X-40ML5-Z	Rosenberger	Connector, RF, 50 Ohm, R/A, TH
63	8	L1, L2, L3, L4, L5, L6, L7, L8	120 ohm	BLM18SG121TN1D	MuRata	Ferrite Bead, 120 ohm @ 100 MHz, 3 A, 0603
64	2	L10, L18	100uH	CLF6045NIT-101M-D	TDK	Inductor, Wirewound, Ferrite, 100 uH, 0.61 A, 0.32 ohm, AEC-Q200 Grade 0, SMD
65	1	L11	10uH	LQH3NPN100NG0	MuRata	Inductor, Wirewound, Ferrite, 10 uH, 0.5 A, 0.57 ohm, SMD
66	1	L12		DLW21SN900HQ2L	MuRata	Coupled inductor, 0.28 A, 0.41 ohm, +/- 25%, SMD
67	2	L13, L20	1000 ohm	BLM18AG102SN1D	MuRata	Ferrite Bead, 1000 ohm @ 100 MHz, 0.4 A, 0603
68	1	L14	330 ohm	MPZ1005S331ETD25	TDK	Ferrite Bead, 330 ohm @ 100 MHz, 0.7 A, 0402
69	2	L15, L16	1500 ohm	BLM18HE152SN1D	MuRata	Ferrite Bead, 1500 ohm @ 100 MHz, 0.5 A, 0603
70	1	L17	47 ohm	MPZ1005F470ETD25	TDK	Ferrite Bead, 47 ohm @ 100 MHz, 0.45 A, 0402
71	1	L19	10uH	LQH3NPN100MJRL	MuRata	Inductor, Wirewound, Ferrite, 10 uH, 0.81 A, 0.24 ohm, SMD
72	1	L21	4.7uH	7440650047	Würth Elektronik	Inductor, Shielded Drum Core, Ferrite, 4.7 uH, 4.2 A, 0.02 ohm, SMD
73	2	Q1, Q2	50V	BSS138	Fairchild Semiconductor	MOSFET, N-CH, 50 V, 0.22 A, SOT-23
74	1	R1	200	CRCW0603200RFKEA	Vishay-Dale	RES, 200, 1%, 0.1 W, 0603
75	1	R2	1.5k	CRCW04021K50JNED	Vishay-Dale	RES, 1.5k ohm, 5%, 0.063W, 0402
76	2	R3, R10	33k	CRCW040233K0JNED	Vishay-Dale	RES, 33k ohm, 5%, 0.063W, 0402
77	1	R4	1.2Meg	CRCW06031M20JNEA	Vishay-Dale	RES, 1.2 M, 5%, 0.1 W, 0603
78	12	R5, R6, R29, R30, R32, R35, R48, R75, R82, R85, R86, R130	0	ERJ-2GE0R00X	Panasonic	RES, 0, 5%, 0.063 W, 0402

Table 4-1. DS90UB954-Q1EVM BOM (continued)

79	25	R7, R33, R34, R38, R39, R40, R41, R42, R43, R44, R45, R46, R47, R60, R61, R62, R63, R64, R65, R66, R67, R68, R69, R71, R72	0	ERJ-1GE0R00C	Panasonic	RES, 0, 5%, 0.05 W, 0201
80	7	R8, R11, R12, R54, R55, R78, R115	0	ERJ-2GE0R00X	Panasonic	RES, 0 ohm, 5%, 0.063W, 0402
81	1	R9	10.0k	CRCW040210K0FKED	Vishay-Dale	RES, 10.0 k, 1%, 0.063 W, 0402
82	4	R13, R19, R21, R112	3.24k	CRCW04023K24FKED	Vishay-Dale	RES, 3.24k ohm, 1%, 0.063W, 0402
83	1	R14	124k	CRCW0402124KFKED	Vishay-Dale	RES, 124k ohm, 1%, 0.063W, 0402
84	5	R15, R76, R123, R124, R133	100k	CRCW0402100KJNED	Vishay-Dale	RES, 100k ohm, 5%, 0.063W, 0402
85	4	R16, R25, R87, R125	10k	CRCW040210K0JNED	Vishay-Dale	RES, 10k ohm, 5%, 0.063W, 0402
86	14	R17, R22, R26, R50, R51, R56, R57, R103, R106, R109, R113, R122, R126, R129	0	CRCW06030000Z0EA	Vishay-Dale	RES, 0 ohm, 5%, 0.1W, 0603
87	1	R18	29.4k	CRCW040229K4FKED	Vishay-Dale	RES, 29.4 k, 1%, 0.063 W, 0402
88	7	R20, R74, R79, R102, R107, R111, R132	10.0k	CRCW040210K0FKED	Vishay-Dale	RES, 10.0k ohm, 1%, 0.063W, 0402
89	2	R23, R105	34.0k	CRCW040234K0FKED	Vishay-Dale	RES, 34.0 k, 1%, 0.063 W, 0402
90	1	R24	100	ERJ-2RKF1000X	Panasonic	RES, 100, 1%, 0.1 W, 0402
91	5	R27, R28, R37, R88, R95	0	CRCW02010000Z0ED	Vishay-Dale	RES, 0, 5%, 0.05 W, 0201
92	1	R31	50	504L50R0FTNCFT	AT Ceramics	RES, 50, 1%, 0.125 W, AEC-Q200 Grade 1, 0402
93	3	R36, R52, R53	4.7k	CRCW04024K70JNED	Vishay-Dale	RES, 4.7k ohm, 5%, 0.063W, 0402
94	1	R49	10.0k	ERJ-2RKF1002X	Panasonic	RES, 10.0 k, 1%, 0.1 W, 0402
95	10	R58, R59, R70, R77, R80, R81, R89, R91, R101, R104	220	CRCW0402220RJNED	Vishay-Dale	RES, 220, 5%, 0.063 W, 0402
96	1	R73	470	CRCW0402470RJNED	Vishay-Dale	RES, 470 ohm, 5%, 0.063W, 0402
97	3	R83, R100, R108	4.02k	CRCW06034K02FKEA	Vishay-Dale	RES, 4.02 k, 1%, 0.1 W, 0603
98	1	R84	0	CRCW06030000Z0EA	Vishay-Dale	RES, 0, 5%, 0.1 W, 0603
99	1	R90	49.9	CRCW020149R9FKED	Vishay-Dale	RES, 49.9, 1%, 0.05 W, 0201
100	2	R92, R94	470	CRCW0402470RJNED	Vishay-Dale	RES, 470, 5%, 0.063 W, 0402
101	1	R93	22.1k	CRCW040222K1FKED	Vishay-Dale	RES, 22.1k ohm, 1%, 0.063W, 0402
102	1	R96	49.9	ERJ-2RKF49R9X	Panasonic	RES, 49.9, 1%, 0.1 W, AEC-Q200 Grade 0, 0402
103	2	R97, R98	2.4k	CRCW04022K40JNED	Vishay-Dale	RES, 2.4 k, 5%, 0.063 W, 0402
104	2	R99, R110	5.6k	CRCW04025K60JNED	Vishay-Dale	RES, 5.6 k, 5%, 0.063 W, 0402
105	1	R114	10k	CRCW040210K0JNED	Vishay-Dale	RES, 10 k, 5%, 0.063 W, 0402
106	1	R116	25.5k	CRCW040225K5FKED	Vishay-Dale	RES, 25.5 k, 1%, 0.063 W, 0402
107	1	R117	95.3k	CRCW040295K3FKED	Vishay-Dale	RES, 95.3 k, 1%, 0.063 W, 0402

Table 4-1. DS90UB954-Q1EVM BOM (continued)

108	1	R118	39.2k	CRCW040239K2FKED	Vishay-Dale	RES, 39.2 k, 1%, 0.063 W, 0402
109	2	R119, R120	78.7k	CRCW040278K7FKED	Vishay-Dale	RES, 78.7 k, 1%, 0.063 W, 0402
110	1	R121	97.6k	CRCW040297K6FKED	Vishay-Dale	RES, 97.6 k, 1%, 0.063 W, 0402
111	1	R127	1.87k	CRCW04021K87FKED	Vishay-Dale	RES, 1.87k ohm, 1%, 0.063W, 0402
112	1	R128	4.99k	CRCW04024K99FKED	Vishay-Dale	RES, 4.99k ohm, 1%, 0.063W, 0402
113	1	R131	33.2k	CRCW040233K2FKED	Vishay-Dale	RES, 33.2 k, 1%, 0.063 W, 0402
114	2	R134, R135	33	CRCW040233R0JNED	Vishay-Dale	RES, 33 ohm, 5%, 0.063W, 0402
115	1	S1		EVQ-PSD02K	Panasonic	Switch, Tactile, SPST-NO, SMT
116	12	SH-J1, SH-J2, SH-J3, SH-J4, SH-J5, SH-J6, SH-J7, SH-J8, SH-J9, SH-J10, SH-J11, SH-J12	1x2	2SN-BK-G	Samtec	Shunt, 2mm, Gold plated, Black
117	1	SW1		KSR221GLFS	C and K Components	Switch, Normally open, 2.3N force, 200k operations, SMD
118	1	T1		ACM9070-701-2PL-TL01	TDK	Coupled inductor, 5 A, 0.01 ohm, SMD
119	1	U1		TPD4E004DRYR	Texas Instruments	4-CHANNEL ESD-PROTECTION ARRAY FOR HIGH-SPEED DATA INTERFACES, DRY006A
120	1	U2		TPS73533DRBR	Texas Instruments	500mA, Low Quiescent Current, Ultra-Low Noise, High PSRR Low-Dropout Linear Regulator, DRB0008A
121	1	U3		TCA9406DCUR	Texas Instruments	TCA9406 Dual Bidirectional 1-MHz I2C-BUS and SMBus Voltage Level-Translator, 1.65 to 3.6 V, -40 to 85 degC, 8-pin US8 (DCU), Green (RoHS & no Sb/Br)
122	1	U4		TPS54225PWPR	Texas Instruments	4.5V to 18V Input, 2-A Synchronous Step-Down SWIFT™ Converter, PWP0014E
123	1	U5		DS90UB954TRGZRQ1	Texas Instruments	FPDLink III Deserializer with CSI2 interface for 2.3MP/60fps cameras, RGZ0048B (VQFN-48)
124	3	U6, U7, U8		LM2941LD/NOPB	Texas Instruments	1A Low Dropout Adjustable Regulator, 8-pin LLP, Pb-Free
125	1	U9		TPS74801TDRCRQ1	Texas Instruments	Single Output LDO, 1.5 A, Adjustable 0.8 to 3.6 V Output, 0.8 to 5.5 V Input, with Programmable Soft Start, 10-pin SON (DRC), -40 to 105 degC, Green (RoHS & no Sb/Br)
126	1	U10		TPS767D318PWP	Texas Instruments	Dual Output LDO, 1 A, Fixed 1.8, 3.3 V Output, 2.7 to 10 V Input, 28-pin HTSSOP (PWP), -40 to 125 degC, Green (RoHS & no Sb/Br)
127	1	U11		MSP430F5529IPN	Texas Instruments	25 MHz Mixed Signal Microcontroller with 128 KB Flash, 8192 B SRAM and 63 GPIOs, -40 to 85 degC, 80-pin QFP (PN), Green (RoHS & no Sb/Br)
128	1	Y1		ABM3-25.000MHZ-D2W-T	Abracon Corporation	Crystal, 25 MHz, 18 pF, SMD
129	1	Y2		SG-210STF25.000000MHZY	Epson	OSC, 25 MHz, 1.6 to 3.6 V, SMD
130	1	Y3		ECS-240-20-5PX-TR	ECS Inc.	Crystal, 24.000MHz, 20pF, SMD

IMPORTANT NOTICE FOR TI DESIGN INFORMATION AND RESOURCES

Texas Instruments Incorporated ("TI") technical, application or other design advice, services or information, including, but not limited to, reference designs and materials relating to evaluation modules, (collectively, "TI Resources") are intended to assist designers who are developing applications that incorporate TI products; by downloading, accessing or using any particular TI Resource in any way, you (individually or, if you are acting on behalf of a company, your company) agree to use it solely for this purpose and subject to the terms of this Notice.

TI's provision of TI Resources does not expand or otherwise alter TI's applicable published warranties or warranty disclaimers for TI products, and no additional obligations or liabilities arise from TI providing such TI Resources. TI reserves the right to make corrections, enhancements, improvements and other changes to its TI Resources.

You understand and agree that you remain responsible for using your independent analysis, evaluation and judgment in designing your applications and that you have full and exclusive responsibility to assure the safety of your applications and compliance of your applications (and of all TI products used in or for your applications) with all applicable regulations, laws and other applicable requirements. You represent that, with respect to your applications, you have all the necessary expertise to create and implement safeguards that (1) anticipate dangerous consequences of failures, (2) monitor failures and their consequences, and (3) lessen the likelihood of failures that might cause harm and take appropriate actions. You agree that prior to using or distributing any applications that include TI products, you will thoroughly test such applications and the functionality of such TI products as used in such applications. TI has not conducted any testing other than that specifically described in the published documentation for a particular TI Resource.

You are authorized to use, copy and modify any individual TI Resource only in connection with the development of applications that include the TI product(s) identified in such TI Resource. NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER TI INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT OF TI OR ANY THIRD PARTY IS GRANTED HEREIN, including but not limited to any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information regarding or referencing third-party products or services does not constitute a license to use such products or services, or a warranty or endorsement thereof. Use of TI Resources may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

TI RESOURCES ARE PROVIDED "AS IS" AND WITH ALL FAULTS. TI DISCLAIMS ALL OTHER WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, REGARDING TI RESOURCES OR USE THEREOF, INCLUDING BUT NOT LIMITED TO ACCURACY OR COMPLETENESS, TITLE, ANY EPIDEMIC FAILURE WARRANTY AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

TI SHALL NOT BE LIABLE FOR AND SHALL NOT DEFEND OR INDEMNIFY YOU AGAINST ANY CLAIM, INCLUDING BUT NOT LIMITED TO ANY INFRINGEMENT CLAIM THAT RELATES TO OR IS BASED ON ANY COMBINATION OF PRODUCTS EVEN IF DESCRIBED IN TI RESOURCES OR OTHERWISE. IN NO EVENT SHALL TI BE LIABLE FOR ANY ACTUAL, DIRECT, SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF TI RESOURCES OR USE THEREOF, AND REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

You agree to fully indemnify TI and its representatives against any damages, costs, losses, and/or liabilities arising out of your non-compliance with the terms and provisions of this Notice.

This Notice applies to TI Resources. Additional terms apply to the use and purchase of certain types of materials, TI products and services. These include; without limitation, TI's standard terms for semiconductor products (<http://www.ti.com/sc/docs/stdterms.htm>), [evaluation modules](#), and [samples](http://www.ti.com/sc/docs/sampterm.htm) (<http://www.ti.com/sc/docs/sampterm.htm>).

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2017, Texas Instruments Incorporated